



## **OWNER'S MANUAL FOR EPILOG Zing - MODEL 10000**

**This manual can also be found in electronic format on the  
Epilog Dashboard Drivers and Documentation  
disk that came with your laser system.**

**April 22, 2010**

**16371 Table Mountain Parkway  
Golden, CO 80403**

**Phone (303) 277-1188**

**Fax (303) 277-9669**

**Technical Support Direct Line: (303) 215-9171**

**Email Technical Support: [tech@epiloglaser.com](mailto:tech@epiloglaser.com)**

**Technical Support Online:**

**[www.epiloglaser.com/service.htm](http://www.epiloglaser.com/service.htm)**

**[www.epiloglaser.com/downloads.htm](http://www.epiloglaser.com/downloads.htm)**

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# Contents at a Glance

---

<b>Fire Warning!</b> .....	<b>ix</b>
<b>Lifting Warning!</b> .....	<b>x</b>
<b>Introduction</b> .....	<b>xi</b>
<b>Epilog Laser Setup</b> .....	<b>1</b>
Section 1: Safety .....	3
Section 2: Dos and Don'ts .....	13
Section 3: Getting Started .....	15
Section 4: Connecting the Laser to Your Computer .....	21
Section 5: Installing the Epilog Dashboard Print Driver .....	23
Section 6: Quick Start & Easy Setup .....	43
<b>Basic Operations</b> .....	<b>53</b>
Section 7: Using the Epilog Dashboard Driver.....	55
Section 8: Using the Front Control Panel .....	117
Section 9: Standard & Optional Machine Features.....	127
Section 10: Engraving Machine Cleaning .....	156
Section 11: Engraving Machine Calibration / Maintenance .....	161
Section 12: Speed and Power Recommendations .....	165
Section 13: Material Engraving Techniques.....	173
Section 14: Material Suppliers.....	197
<b>Technical Support, Troubleshooting and Specifications</b> .....	<b>203</b>
Section 15: In Case of Difficulty .....	205
Section 16: Specifications.....	209
Section 17: Upgrading the Operational Firmware .....	217
<b>APPENDIX A WARRANTY STATEMENT</b> .....	<b>229</b>
<b>APPENDIX B PRINTING FROM AUTOCAD</b> .....	<b>231</b>
<b>APPENDIX C ADDITIONAL DASHBOARD PRINT DRIVER INSTRUCTIONS</b> .....	<b>235</b>
<b>INDEX</b> .....	<b>262</b>

# Contents at a Glance

---

**THIS PAGE WAS**

**INTENTIONALLY LEFT BLANK**

# Table of Contents

---

<b>Fire Warning!</b> .....	<b>ix</b>
<b>Lifting Warning!</b> .....	<b>x</b>
<b>Introduction</b> .....	<b>xi</b>
How to Use This Owner's Manual .....	xi
<b>Epilog Laser Setup</b> .....	<b>1</b>
Section 1: Safety .....	3
Laser Safety .....	3
Electrical Safety .....	5
Fire Safety .....	6
Safety Features and Regulatory Compliance .....	7
CE Certification .....	11
Section 2: Dos and Don'ts .....	13
DON'T! .....	13
DO .....	14
Section 3: Getting Started .....	15
Setting Up Your Laser System .....	15
Connecting the Exhaust .....	16
Connecting Electrical Power.....	19
Laser Cooling Requirements and Operating Temperatures.....	20
Section 4: Connecting the Laser to Your Computer.....	21
Connecting the Laser to Your Computer .....	21
USB Port.....	22
Ethernet (NET) Port.....	22
Section 5: Installing the Epilog Dashboard Print Driver .....	23
Installing the Dashboard Driver Using an Ethernet Connection and a Crossover Cable .....	24
Section 6: Quick Start & Easy Setup .....	43
Artwork Setup.....	45
Job Setup.....	48

# Table of Contents

---

<b>Basic Operations .....</b>	<b>53</b>
Section 7: Using the Epilog Dashboard Driver.....	55
General Tab.....	58
Advanced Tab.....	90
Color Mapping Tab.....	103
Additional Dashboard Driver Features.....	113
Changing Dashboard Driver Defaults.....	115
Section 8: Using the Front Control Panel.....	117
Keyboard Commands.....	118
Job Storage.....	126
Section 9: Standard & Optional Machine Features.....	127
Red Dot Pointer.....	128
Air Curtain.....	128
Air Curtain Pump.....	128
Vector Cutting Grid/Vacuum Table.....	129
Zing 24 Rotary Attachment.....	133
Pin Table.....	150
Section 10: Engraving Machine Cleaning.....	156
Cleaning - Important!.....	156
Fire Warning!.....	156
Laser Tube.....	160
Section 11: Engraving Machine Calibration / Maintenance.....	161
Calibration Settings Using the Keyboard.....	161
Section 12: Speed and Power Recommendations.....	165
Engraving Speed.....	165
Engraving Power.....	165
Recommendations.....	167
Multiple Passes.....	168
30 Watt - Epilog Zing.....	169
40 Watt - Epilog Zing.....	170
50 Watt - Epilog Zing.....	171
60 Watt - Epilog Zing.....	172

# Table of Contents

---

Section 13: Material Engraving Techniques.....	173
Acrylic.....	173
Fire Warning!.....	173
Anodized Aluminum.....	176
Brass - Painted .....	176
Glass.....	178
Notary Seals - Delrin .....	180
Plastic.....	181
Rubber Stamps.....	183
Wood.....	191
Section 14: Material Suppliers.....	197
<b>Technical Support, Troubleshooting and Specifications .....</b>	<b>203</b>
Section 15: In Case of Difficulty .....	205
Contacting Technical Support.....	205
Avoiding Common Print Problems.....	206
Section 16: Specifications.....	209
Zing 16 x 12 Specifications .....	209
Zing 24 x 12 Specifications .....	210
Compatibility .....	211
Recommended PC.....	211
Other Computer Hardware Recommendations.....	213
About The Laser .....	214
Federal Communications Commission (FCC) Notice .....	215
Section 17: Upgrading the Operational Firmware.....	217
Upgrading Your Firmware.....	217
Installing New Firmware onto Your Computer .....	218
Transferring New Firmware from Your Computer to Your Laser .....	220
Upgrading the Epilog Dashboard.....	224
Converting Old .DAT Files to Be Compatible with a New Dashboard.....	225

# Table of Contents

---

<b>APPENDIX A WARRANTY STATEMENT .....</b>	<b>229</b>
<b>APPENDIX B PRINTING FROM AUTOCAD.....</b>	<b>231</b>
<b>APPENDIX C ADDITIONAL DASHBOARD PRINT DRIVER INSTRUCTIONS .....</b>	<b>235</b>
Dashboard Driver Installation for USB Connection Using Windows Vista.....	235
Windows Vista Dashboard driver installation for Ethernet connection .....	239
Windows 7 - Driver Installation Instructions - Setting up the TCP/IP Address in the Computer.....	256
<b>INDEX.....</b>	<b>262</b>





# Fire Warning!



---

Your laser system uses a high intensity beam of light that can generate extremely high temperatures when it comes into contact with the material being engraved, marked or cut. Some materials are extremely flammable and can easily ignite and burst into open flame setting the machine afire. This open flame is very dangerous and has the potential to destroy not only the machine, but the building in which it is housed.

Experience shows that vector cutting with the laser has the most potential to create an open flame. Many materials are susceptible to igniting, but acrylic, in all its different forms, has been shown to be especially flammable when vector cutting with the laser.

Please read the following warnings and recommendations and follow them closely at all times!

- **NEVER** let the laser system operate while it is unattended.
- **KEEP** the area around the machine clean and free of clutter, combustible materials, explosives, or volatile solvents such as acetone, alcohol, or gasoline.
- **ALWAYS** keep a properly maintained and inspected fire extinguisher on hand. Epilog recommends a Halotron fire extinguisher or a multi-purpose dry chemical fire extinguisher. The Halotron extinguishers are more expensive than a dry chemical, but offer certain advantages should you ever need to use an extinguisher. The Halotron extinguisher discharges a clean, easily removable substance that is not harmful to the mechanics or wiring of the laser system. The dry chemical extinguisher discharges a sticky, corrosive powder that is very difficult to clean up.
- **ALWAYS** use the Air Curtain when vector cutting.
- **BE CAREFUL!** When vector cutting. Many materials have the potential to burst suddenly into flames – even materials that may be very familiar to the user. Always monitor the machine when it is operating.
- **KEEP YOUR LASER SYSTEM CLEAN** – A build up of cutting and engraving residue and debris is dangerous and can create a fire hazard in its own right. Keep your laser system clean and free of debris. Regularly remove the vector grid to clean any small pieces that have fallen through the grid.



# Lifting Warning!



The Zing 16 laser system weighs 92 lbs. (42 Kg).

The Zing 24 is 140 (64 Kg).

One person should not attempt to lift either machine. Always use two people for lifting.



The Zing is designed with lift areas at the bottom of the chassis on both the left and right sides of the machine. Do not try to lift from the corners. The lift areas are shown in the diagram below.



# Introduction

---

## *How to Use This Owner's Manual*

Thank you for purchasing an Epilog Zing Model 10000 Laser System. Your Epilog system has been designed to be easy to operate, but you will utilize it to its fullest potential by taking some time to read this owner's manual prior to use. You will be ready to use the Epilog laser system as soon as you read the first six sections. Then you can refer to topics in the remaining sections, as you work.

## *Structure of the Manual*

### **Part I: Epilog Zing Setup**

Sections 1 through 6 explain how to uncrate and set up your Epilog system, important safety information you need to know before you use it, the Do's and Don'ts of operating the laser, configuring your computer to run the Epilog Dashboard print driver, configuring CorelDraw, and a brief user's guide to running your first job.

### **Part II: Epilog Zing Basic Operations**

Sections 7 through 14 explain Using the Epilog Dashboard Print Driver, basic Epilog laser operations and maintenance, machine features, speed and power recommendations, material engraving techniques, and material suppliers.

### **Part III: Troubleshooting, Service and Specifications**

Sections 15 through 17 assist with problem troubleshooting, service information, system specifications and firmware upgrade instructions.

### **APPENDIX A**

Epilog Warranty Information.

### **APPENDIX B**

Printing from AutoCAD.

### **APPENDIX C**

Additional Dashboard Print Driver Instructions.

### **INDEX**

# Introduction

---

## *Icons Used in this Manual*

Look for these symbols to help you find valuable information throughout the text:



Sometimes the right perspective on a procedure is essential to success. This icon flags a Quick Note regarding the task at hand.



This Icon signifies places to look for additional information to assist with the topic currently being discussed.



This Icon highlights current contact information for receiving help.



This Icon signifies advice you can try out with your machine right away.



This Icon signifies advice you can try that will save you significant time.




Running into trouble can be detrimental to your success so we've marked Warnings and Cautions with this Icon.

# Introduction

---



Indicates pages including information regarding connecting your laser system to your computer using an USB connection.

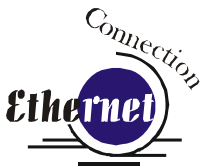

Indicates pages including information regarding connecting your laser system to your computer using an Ethernet connection.



Indicates the potential for fire danger when operating the laser.

# Introduction

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**



Manual

# Epilog Laser Setup

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**



# Section 1: Safety

---

## *In This Section*

- Laser Safety
  - Electrical Safety
  - Fire Safety
  - Safety Features And Regulatory Compliance
  - CE Certification
- 

## *Laser Safety*

The Epilog Model 10000 Laser System is a Class 3R laser product, as defined in International Standard IEC 60825-1.

The Epilog Model 10000 complies with 21 CFR 1040.10 and 1040.11, the Federal Performance Standards for Light-Emitting Products, except for deviations pursuant to Laser Notice No. 50, dated July 16, 2001. The Center for Devices and Radiological Health, of the US FDA, issued Laser Notice No. 50 to permit manufacturers to classify and manufacture their products in accordance with the International Standard.

The output of the embedded high-power CO<sub>2</sub> engraving laser is fully contained. The laser cabinet has safety interlocks that turn the laser off if the door is opened during operation, and no special precautions are necessary to operate the high-power laser safely. However, the visible output beam of the Laser Diode Pointer (Red Dot Pointer) is accessible to the operator. While this device employs the same technology as the familiar laser pen-pointers, like them it is potentially hazardous if its beam is directed into the eye.

We have made every effort to make the Laser Diode Pointer (Red Dot Pointer) as safe as possible. Its beam path is located well inside the cabinet, and under normal conditions, no hazardous levels of laser radiation can escape.

# Section 1: Safety

---

The operator of the Epilog Model 10000 should observe the following general precautions:



- **DO NOT** disassemble the machine or remove any of its protective covers while the unit is plugged in.
- **DO NOT** attempt to defeat the door interlocks.
- **DO NOT** view directly into the beam of the Laser Diode Pointer (Red Dot Pointer).
- **DO NOT** operate the Laser Diode Pointer (Red Dot Pointer) without the machine's focus lens in place.

**Caution** – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser radiation exposure.

\* \* \*

The standard reference for laser safety is the American Standard for the Safe Use of Lasers, Z136.1-2000, developed by the American National Standards Institute (ANSI). This reference is the basis for many of the federal regulations for laser and laser system manufacturers, and for the Occupational Safety and Health Administration (OSHA) laser safety guidelines. It contains detailed information concerning proper installation and use of laser systems.

While the ANSI standard itself does not have the force of law, its recommendations, including warning signage, training, and the designation of a laser safety officer, may be compulsory under local workplace regulations when operating laser systems above Class I. It is the operator's responsibility to ensure that the installation and operation of the Epilog Model 10000 Laser System is performed in accordance with all applicable laws.

Copies of ANSI Standard Z136.1-2000 are available from Epilog Corporation or from:



Laser Institute of America  
12424 Research Parkway, Suite 125  
Orlando, FL 32826  
(407) 380-1553

# Section 1: Safety

---

## *Electrical Safety*

The AC input power to the Epilog Model 10000 Laser System is potentially lethal and is fully contained within the cabinet.



- **DO NOT** open any of the machine's access panels while the unit is plugged in. Opening a panel may expose the operator to the unit's AC input power.
- **DO NOT** make or break any electrical connections to the system while the unit is turned on.

# Section 1: Safety

---

## *Fire Safety*



Laser cutting and engraving systems represent a significant fire hazard. Most engraving materials are inherently combustible, and while the objective of most cutting and engraving operations is to vaporize material without burning, it is easy to ignite a flame. Usually this is a simple “flare” of burning gases, issuing from the focused spot on the work piece, which follows the moving spot and which extinguishes itself as soon as the laser beam is modulated off. But should the work piece actually be set on fire, the fire must be extinguished by the operator at once, or the machine will be seriously damaged or destroyed!

Experience shows that vector cutting with the laser has the most potential to create an open flame. Many materials are susceptible to igniting, but acrylic, in all its different forms, has been shown to be especially flammable when vector cutting with the laser.

Please read the following warnings and recommendations and follow them closely at all times!

- **NEVER** let the laser system operate if it will be unattended.
- **KEEP** the area around the machine clean and free of unnecessary clutter, combustible materials, explosives, or volatile solvents such as acetone, alcohol, or gasoline.
- **ALWAYS** keep a properly maintained and inspected fire extinguisher on hand. Epilog recommends a Halotron fire extinguisher or a multi-purpose dry chemical fire extinguisher. The Halotron extinguishers are more expensive than a dry chemical, but offer certain advantages should you ever need to use an extinguisher. The Halotron extinguisher discharges a clean, easily removable substance that is not harmful to the mechanics or wiring of the laser system. The dry chemical extinguisher discharges a sticky, corrosive powder that is very difficult to clean up.
- **ALWAYS** use the Air Curtain when vector cutting.
- **BE CAREFUL!** When vector cutting. Many materials have the potential to burst suddenly into flames – even materials that may be very familiar to the user. Always monitor the machine when it is operating.
- **KEEP YOUR LASER SYSTEM CLEAN** – A build up of cutting and engraving residue and debris is dangerous and can create a fire hazard in its own right. Keep your laser system clean and free of debris. Regularly remove the vector grid to clean any small pieces that have fallen through the grid.

# Section 1: Safety

---


## *Safety Features and Regulatory Compliance*

Epilog has incorporated specific safety features into the Model 10000 Laser System in order to meet the requirements of 21 CFR 1040 and the International Standard IEC 60825-1. These safety features include:

- A safety enclosure (cabinet), which fully encloses the engraving laser and its beam path.
- Dual redundant interlock systems that turn off the engraving laser when the window is opened.
- A visible emission indication when the Laser Diode Pointer (Red Dot Pointer) is operating. There is an LED indicator on the machine's front panel.

21 CFR 1040 and IEC 60825-1 require that certification, identification, and warning labels be placed on laser products. Reproductions of labels on the Epilog Model 10000 Laser System follow, with their locations specified:

1. **Certification/Identification Label:** This engraved plate is located on the rear of the machine's cabinet. The example shown is for the Model 10000/25 product having a 16 inch by 12 inch (406 x 305 mm) engraving area.

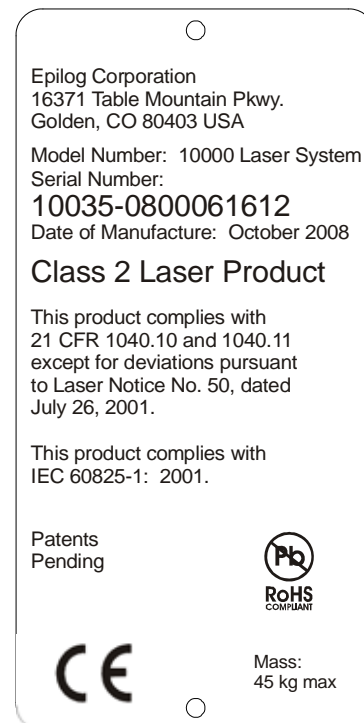

# Section 1: Safety

---

- Warning Label. This label is located on the rear of the machine's cabinet.




- Explanatory Label. This label identifies the classification of the Model 10000 in accordance with IEC 60825-1. It is located on the rear of the machine's cabinet.



- Non-interlocked Protective Housing Safety Labels (4).


Two of these labels are located on the rear of the machine; beside the edges of each of the cabinet's end covers. The other two labels are located on the cabinet walls under the covers, so that they are visible when the covers have been removed.

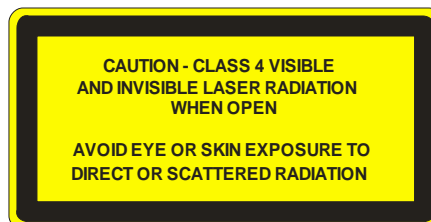

# Section 1: Safety

---

5. Defeatably-interlocked Protective Housing Safety Label. This label is located on the machine's top access door.

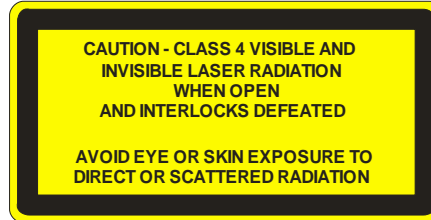


6. Aperture Safety Label.

This label is located on the steering-mirror cover inside the machine's cabinet, beside the aperture where the laser beams enter the cabinet.

AVOID EXPOSURE - Visible and invisible  
laser radiation is emitted from this aperture

7. Electrical Safety Label.

This label is located on the right side panel of the machine's cabinet.

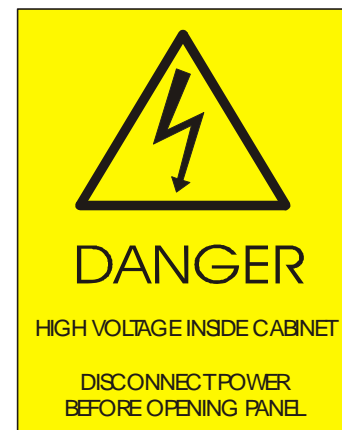


# Section 1: Safety

---

## 8. Fire Safety Label.

This fire hazard label is located on the right side cover of your laser system. Do not cover this label at any time.

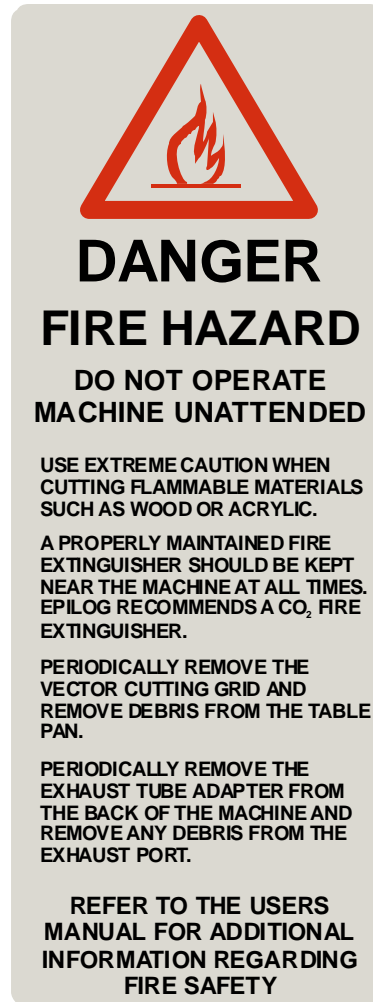



# Section 1: Safety

---

## *CE Certification*

### Declaration of Conformity

Certificate No. 100001612/1

**Product:** Model 10000 Laser Materials Processing System

**Type:** Zing 1612 25W/30W/35W/40W

**Manufacturer:** Epilog Corporation  
16371 Table Mountain Pkwy.  
Golden, Colorado 80403  
USA

**Applicable EU Directives:** 2004/108/EC EMC Directive  
2006/95/EC Low Voltage Directive  
2002/95/EC RoHS Directive

**Applicable Standards:** EN 55011: 2007 Electromagnetic Emissions, Class A  
EN 61000-6-2: 2005 Industrial Electromagnetic Immunity  
EN 61000-3-2: 2006 Harmonic Current Emissions  
EN 61000-3-3: 1995 Voltage Changes and Flicker  
Amendment A2: 2005  
EN 61010-1: 2001 Safety Requirements for Electrical  
Equipment  
EN 60825-1: 2001 Safety of Laser Products

Signed: John H. Doran Date: October 31, 2008

John H. Doran, V.P. Engineering  
Epilog Corporation



## Section 1: Safety

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# Section 2: Dos and Don'ts

---

## *In This Section*

- Operating Dos and Don'ts
- 

## ***DON'T!***



***NEVER*** operate the machine without a properly operating vent to the outside! Most material will only produce an irritating smoke when engraved. Some materials, including but not limited to paint, varnish, composition board and plastics, produce compounds that can be harmful if concentrated. A properly installed vent is the only way to ensure that problems do not occur.

***NEVER*** engrave or cut any material containing PVC or vinyl. When engraved, a corrosive agent is produced that will destroy your machine. ***Your warranty will be void if your machine is damaged by corrosion from engraving or cutting PVC or Vinyl.***

***NEVER*** operate your machine unattended. There is a significant risk of fire if the machine is set improperly, or if the machine should experience a mechanical or electrical failure while operating.

***NEVER*** vector cut any material while the machine is unattended. Because vector cutting moves relatively slowly compared to raster engraving, a tremendous amount of heat is applied to the material being cut. This build up of heat can cause significant fire risk and the machine should always be monitored. Additionally, the Air Curtain should always be turned on when vector cutting to reduce the risk of fire.

***NEVER*** operate with any of the covers or enclosures removed, and never modify the enclosure. The laser beam is invisible!

## Section 2: Dos and Don'ts

---

### ***DO***



Please allow a few minutes a week for cleaning your machine. Just a small amount of effort at the end of the week will pay off with years of trouble free operation of your machine.



See the ***Engraving Machine Cleaning*** section of this manual for specifics.

# Section 3: Getting Started

---

## *In This Section*

- Setting Up Your Laser System
  - Connecting The Exhaust
  - Connecting The Electrical Power
  - Laser Cooling Requirements And Operating Temperatures
- 

## *Setting Up Your Laser System*

Setting up your Epilog Laser System is easy to do! If you've ever installed a paper printer on your computer, this is almost that easy. You will need to do the following to use your machine:

- Remove it from the crate
- Connect the exhaust system to your laser
- Connect electrical power
- Connect the laser to your computer using a USB or Ethernet cable
- Install the Epilog Dashboard print driver onto your computer

You may need a contractor to install the exhaust. This must be done **PRIOR** to installation of the laser system.



***Time Saver: PLEASE DO NOT throw away the box and all packaging, you may need it later. This will save considerable time trying to repackage the machine for routing to different locations.***

## Section 3: Getting Started

---

### *Connecting the Exhaust*



It is mandatory that an exhaust blower is hooked up and operating whenever your laser system is running a job. The exhaust blower removes the dust, debris and smell from the engraving cavity and exhausts it to the outside of the building. You should never operate your laser system without a properly working exhaust. Prior to the installation of the laser system, a contractor should install the exhaust system. The blower should be mounted outside your building for noise considerations. The blower should not be more than twenty feet (6 meters) from the laser. You should provide a metal duct (flexible aluminum or galvanized sheet metal) from the blower to the laser. All Epilog model 10000 laser systems require an exhaust fan that is rated at a minimum of 400 CFM at 6" of static pressure 680 M<sup>3</sup>/hr. at 150 mm of static pressure.



**Note:** Remember to put the blower switch for the laser system in an obvious and accessible place so it can be routinely switched on prior to using the engraver. Please connect the exhaust blower to the laser as shown below and on the following pages.



**Warning:** It's important that either rigid or flexible *metal* ducting be used for all connections leading to and from the laser system and the exhaust fan. Vinyl, plastic, or any type of "soft" ducting is potentially flammable and should NEVER be used. Flexible aluminum duct or galvanized sheet metal duct is readily available for your ducting needs.

In the United States flexible aluminum ducting can be acquired from the following location:

Grainger <http://www.grainger.com/>

McMaster-Carr <http://www.mcmas>



Supplier	Size	Part Number
Grainger	4"	3C591
McMaster-Carr	4"	5525K34

## Section 3: Getting Started

---

### *Epilog Exhaust Blower Connections*



Exhaust Port

Use flexible aluminum or galvanized sheet metal ducting to connect the laser systems exhaust port to the intake side of your exhaust fan. Then connect the exhaust side of the exhaust fan to the metal duct leading outside.





Check your exhaust system for leaks. Most small leaks can be remedied with duct tape.

***DO NOT OPERATE*** your laser with inadequate or leaking exhaust.

## Section 3: Getting Started

---

The drawings below show the typical exhaust setup. The top drawing shows the exhaust on the roof and the bottom drawing shows the exhaust fan near the machine. Where the exhaust fan is placed is a choice of personal preference. Some users like the exhaust fan outside because of noise considerations.

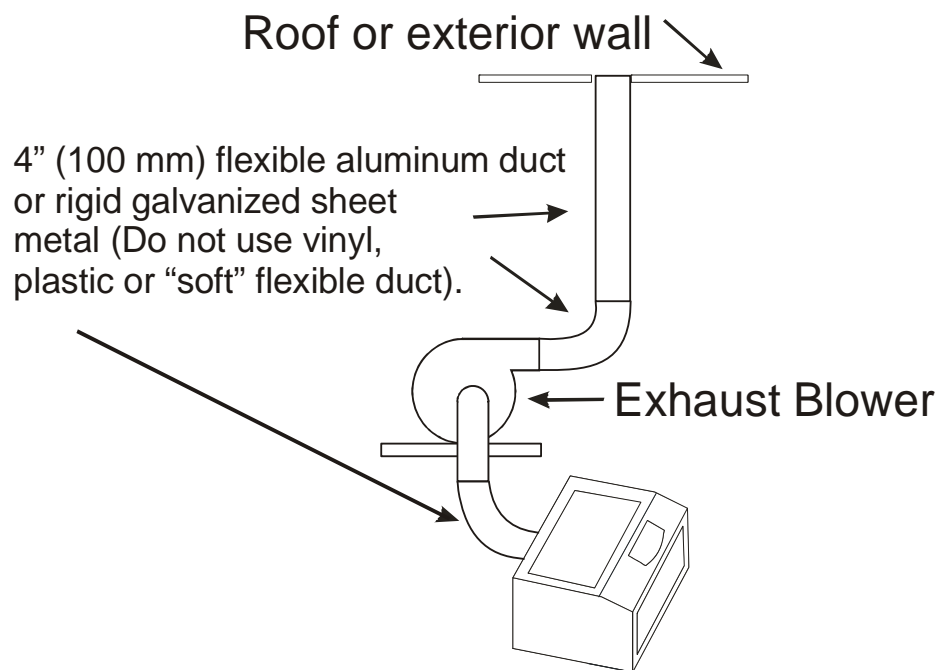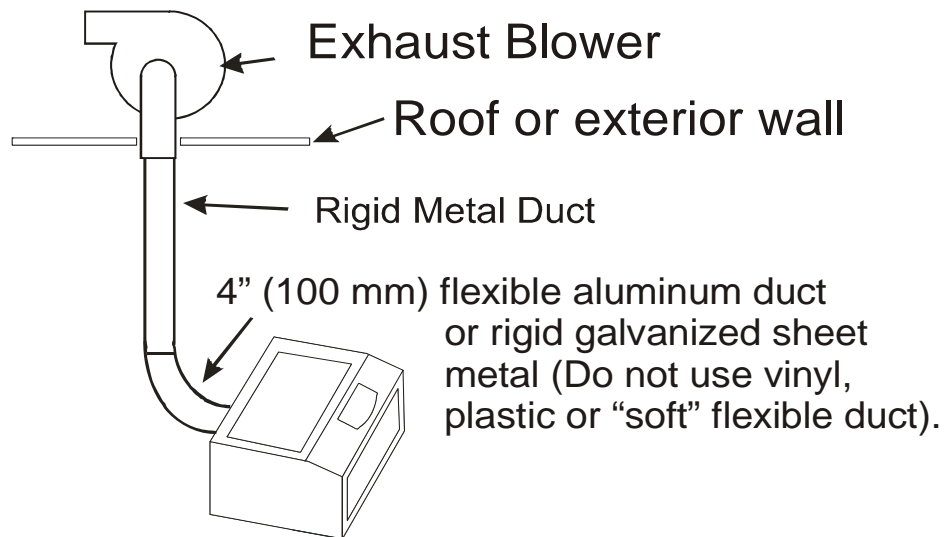



## Section 3: Getting Started


---

### *Connecting Electrical Power*

#### What voltage should be supplied to operate a Zing laser?

All Epilog laser systems have an auto-switching power supply that detects the incoming voltage and automatically switches itself to operate properly at any single-phase voltage between 100 and 240 VAC. The power supply will also automatically compensate for either 50 or 60 Hz.

Epilog supplies the appropriate power cord for all of our equipment. The electrical cord is found in the accessory package with your machine. The power cord for the laser plugs into the power receptacle located on the right side of the machine in the rear corner. It is recommended that a dedicated 15 amp circuit be used if available, but it is not required.

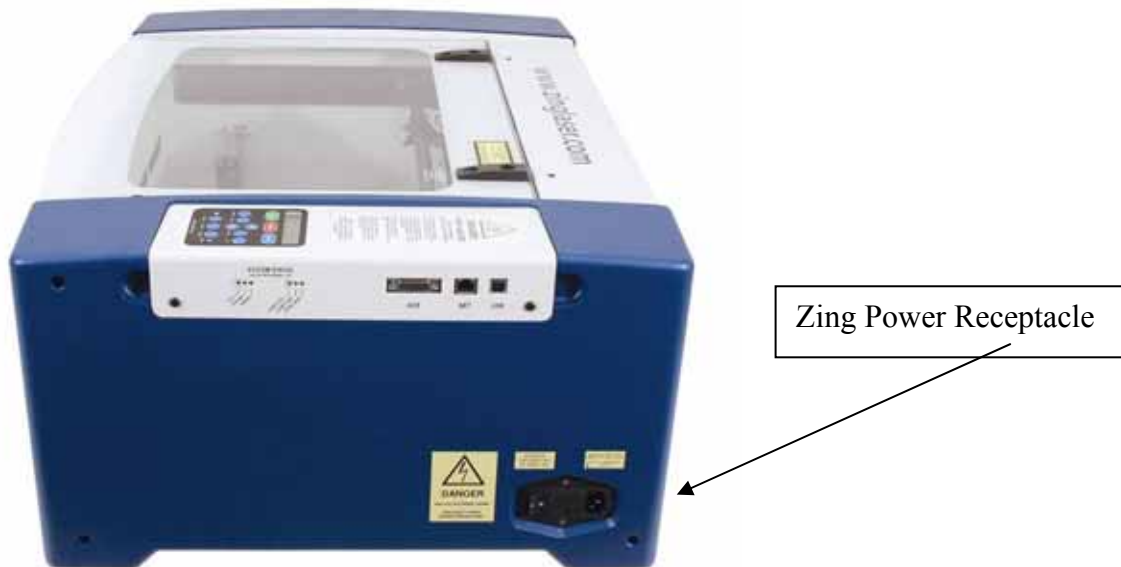

## Section 3: Getting Started

---

### *Laser Cooling Requirements and Operating Temperatures*

Epilog laser systems use air-cooled laser tubes. Laser technology is such that the laser tubes generate heat and the tubes must be cooled in order for them to operate correctly. There are cooling fans located on the bottom left side of the system and cooling vents that are located all along the left side. The fans and vents should always be clear of restrictions and should never be covered.



**Warning:** The cooling fans and vents should never be covered or blocked in any way. Lasers that overheat will not operate properly and may begin to produce erratic laser output or possibly complete failure.

Use compressed air to remove any dust buildup on the fans or the laser cooling fins.



The laser cooling fans and vents are located along the bottom left side of your machine. Do not block this side of the laser system by placing it against a wall or other obstacle.



Ambient air temperature where the laser system is operating should not exceed 90 degrees F (32 C). Operating in an environment where the ambient air temperature is above 90 degrees F (32 C) will void the Epilog warranty.

# Section 4: Connecting the Laser to Your Computer

---

## *In This Section*

- Connecting the Laser to Your Computer
- USB Port
- Ethernet Port

## *Connecting the Laser to Your Computer*

Your Epilog laser system is designed to be used with either 32-bit or 64-bit versions of Microsoft Windows XP, 2000, Vista, or Windows 7 operating systems. Most of the world is not fully ready for a 64-bit operating system, so you may be better off using a 32-bit version of Windows depending on what else is expected from your computer. Windows produces 32-bit versions of all of the above operating systems.



There are two different methods of connecting the laser to your computer. You can connect to your computer with either an Ethernet cable or a USB cable. ***Choose either the USB or Ethernet cable –do not plug both cables into the laser at the same time!*** Many users, especially those that do not have a lot of experience installing printers or other devices to their computers, find the USB cable is the easier method of connection.

If your laser is going to be a long distance from your computer, you will be better off using the Ethernet cable.

If you are using the USB port, make sure the laser system is turned off before connecting the USB cable from your computer (it doesn't matter if the computer is on or off). For your convenience, Epilog includes both an Ethernet crossover cable and a USB cable in the Accessories kit.

## Section 4: Connecting the Laser to Your Computer

This drawing shows the data port connections that are located on the right side of the laser system.



AUX Port


– Not intended for consumer use.

Ethernet Port

USB Port

### ***USB Port***

Connect this end of your USB cable to the laser.

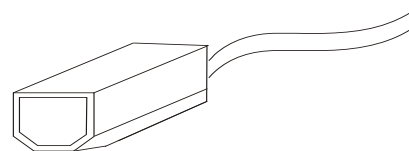

A USB cable is included in the accessory kit. The USB port is located on the right side of the machine, near the rear. USB cables have different connectors on each end. Turn the laser **Off**, then connect this end to the laser and connect the other end into any available USB port at the back of your computer. After connecting the USB cable, turn the laser back on. Your computer will recognize a new USB device and walk you through the Dashboard print driver installation (detailed Dashboard installation instructions are found in later sections of this manual).

### ***Ethernet (NET) Port***

The Ethernet Port is a standard 10BaseT connection. A crossover cable (included in the accessories kit) plugs into the Ethernet port. The Ethernet port is located on the right side of the machine, near the rear. Your Epilog laser has all of the versatility of a Network capable peripheral. As such, there are many different ways that the laser can be connected to a computer or a network. A direct connection using a crossover cable is the only method that will be described in this manual. Plug the cable into the Ethernet port on the laser and then plug the other end into the Ethernet port on the back of your computer.

# Section 5: Installing the Epilog Dashboard Print Driver

---

## *In This Section*

- This section applies to Windows XP/2000 only. Installation instructions for Windows Vista and Windows 7 are found in *Appendix C – Additional Dashboard Print Driver Instructions*, of this manual



The Epilog Dashboard is the print driver that allows your computer to talk to your Epilog laser system when either the Ethernet Crossover cables or USB are connected. ***The Dashboard is designed for use with Windows XP, Windows 2000 and the 32 bit versions of Windows Vista (32 bit is the standard version).*** The driver is included in the accessories kit on a CD-ROM or on our web site - [www.epiloglaser.com](http://www.epiloglaser.com). You will need to install the Dashboard by following the procedures on the following pages.



The Epilog Zing driver will be identified as the “Epilog Engraver Win32 Zing” when it is installed onto your computer.

# Section 5: Installing the Epilog Dashboard Print Driver

---

## *Installing the Dashboard Driver Using an Ethernet Connection and a Crossover Cable*



There are three easy steps involved in setting up the laser and computer system to operate through an Ethernet connection:

1. Setting the Ethernet IP Address on the laser,
2. Setting up the computer's TCP/IP Address, and
3. Dashboard Driver Installation.



**Note:** The following instructions work only for a direct connection from the computer to the Epilog laser using a Crossover cable. This procedure does not work with a hub or a server. For Ethernet connections that require a hub, server or multiple machines/computers, please consult with your network administrator.

### ***Hardware Requirements***

- A 10Base-T or 10/100Base T Ethernet network card installed in your computer. All brand name computers that have been built in the last couple of years should have come standard with an Ethernet card installed.
- A crossover cable connecting your computer to the laser (included in your accessories kit).



**Please Note!** - The crossover cable looks almost exactly like a standard straight-through network cable, but they have different purposes for making network connections. Normally, the crossover cable should only be used when connecting the Epilog laser directly to your computer. Ask your network administrator for assistance if you are unsure of which type of cable you have. It is a good idea to place a tag or label on the cable indicating if it is a crossover cable or standard (CAT5) straight-through cable.

# Section 5: Installing the Epilog Dashboard Print Driver

---



## ***Step 1: Setting the Ethernet IP Address on the Laser***

In order to set up the laser system with the appropriate IP Address, you will need to set-up the laser through a sequence of steps that are described below.


Although it may seem intimidating if this is your first experience setting up Ethernet connections, it's really quite simple to accomplish. If you have problems, don't panic! You cannot do anything wrong that starting over will not fix!

There are three network protocols that will need to be set. They are set in the following order.

1. IP ADDRESS
2. SUBNET MASK
3. GATEWAY

You will use the Zing control panel to set these three protocols. The main control panel on the laser systems is used for all of the common laser functions as explained in later sections of this manual, and it is also used to program some of the setup functions of the laser system including the IP ADDRESS, SUBNET MASK, and the GATEWAY. In order to program these setup functions we have assigned a set of numbers to the keys on the control panel. The following diagram shows which control panel keys are associated with each number needed to set the network protocols.

# Section 5: Installing the Epilog Dashboard Print Driver

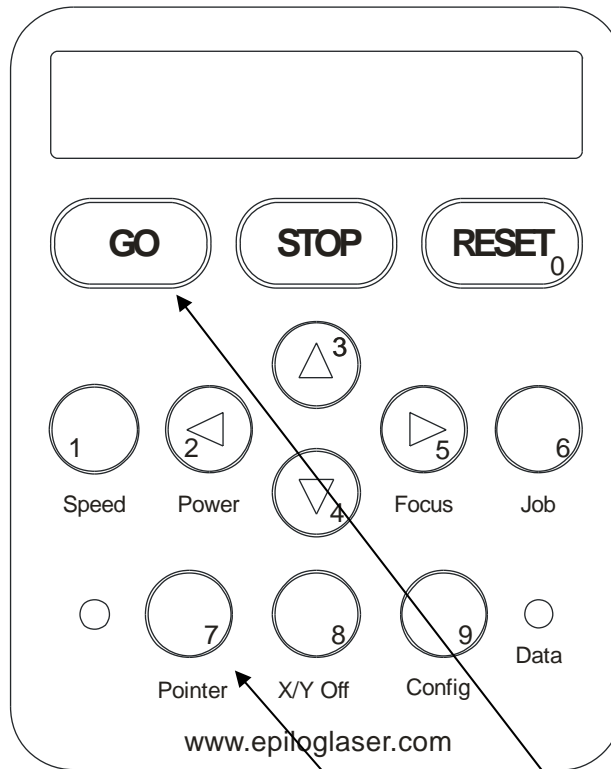

## IP ADDRESS

1. To set the IP Address, press the **POINTER** and **GO** buttons simultaneously. You will see “**FUNCTIONS MENU**” displayed on the control panel LCD screen.
2. Next, press the **GO** button. - “**SERIAL #**” will appear on the screen. This is a factory set number and corresponds to the serial number of the laser system. You should not change this serial number.
3. Press the **GO** button again. - “**IP ADDRESS**” will appear on the screen.
4. Press the **GO** button again. - The factory set IP address will appear on the screen. It will look something like this: “192.168.003.004”, with a flashing box over the 1 in 192.



*Note – This procedure uses 192.168.003.004 as the sample IP Address. Machines leaving the Epilog factory have this IP Address preset so you do not have to change anything unless you want to use a different address.*



# Section 5: Installing the Epilog Dashboard Print Driver

---



5. If you want to change the IP Address, please follow these instructions:
  - a) If you want to change the 1 in 192 to any other number, simply press the key for that number. For example, if you want to change the 1 (in 192) to a 4, press the **Down cursor** key. After pressing the **Down cursor** key the 1 will change to a 4. When a number key is pressed, the flashing box will automatically shift right to the next number in that three number group.
  - b) At this point, press the appropriate key for the second number (if you want to keep the 9 a 9, you must press the **Config** key).
  - c) Finally, press the appropriate key for the third number.
  - d) After pressing the key for the third number the flashing box will go back to the first number – it WILL NOT shift to the next set of three numerals. If you want to move to the next group of three numbers simply press the **GO** button. Pressing **GO** will cause the flashing box to shift right to the next three number group. Repeat this process to change any of the numbers.



**Note** – There is no way to simply scroll through the IP Address numbers and skip over single numbers you do not want to change. You can skip groups of three by pressing **GO**, but skipping single numbers cannot be done. There is also no way to move the cursor (flashing box) backwards. The cursor scrolls through each three number group continuously until you press the **GO** button, where it will then go to the next three number groups. The following example shows you how to change the number 196 to 195. When you start with the flashing box over the 1, press the **SPEED** button (this keeps the 1 a 1 and allows you to move to the next numeral). The flashing box will shift to the 9, where you will press the “**Config**” button (it will stay a 9 and the flashing box will shift right to the 6). Lastly, we want to change the 6 to a 5. Press the “**Focus**” button. This will change the 6 to a 5 (it will also move the flashing box back to the 1 where you first started). If you now have the number you want to keep (195) and you are ready to move to the next three numeral set, pressing the **GO** button will get you there.

- e) Repeat this process for all of the number groups to get the IP Address you need.
6. After all the IP address numbers have either been changed or verified as the ones you need, press **GO** again – this will bring the **SUBNET MASK** screen.

# Section 5: Installing the Epilog Dashboard Print Driver

---



## Subnet Mask

Press **GO** again to see the **SUBNET MASK** settings. Use the same process of number selection using the keypads to select the appropriate number for the **SUBNET MASK**.

**Note:** If you are using the cross-over cable provided by Epilog, you can set the “**SUBNET MASK**” to one of two configurations:

1. “255.255.0.0”
2. “255.255.255.0”

There is no difference between these settings for our application. Because we set the Subnet Mask at the factory, most users leave it as it is and just press “**GO**” four times to scroll through this settings without making any changes. After you have set the “**SUBNET MASK**”, Press **GO** again.

## GATEWAY

You will now see “**GATEWAY**”, Press **GO** again.

The **GATEWAY** setting can be set using the same process of number selection using the key pads to select the appropriate numbers for “**GATEWAY**”.

**Note:** The GATEWAY address is not important if you are using the provided cross over cable. Press “Go” four times to scroll through this setting. If you are running your laser through a network, you will need to set the laser GATEWAY numbers to correspond to your network.

At the end of the process to establish your IP Address, the laser will prompt you to either SAVE or NO (Not Save) the numbers you have applied. The Screen will look like: Save – GO, No- STOP

Press the **GO** button to save the changes you made to the network settings. Press the **STOP** button if you do not want to save the changes and you want to return to the factory default.

If at any time in the programming process you want to stop or restart, press the **STOP** button. This will take you out of the programming functions. If you want to restart the programming process, simultaneously press **GO** and **POINTER** to get back to the start of the Function Menu.


# Section 5: Installing the Epilog Dashboard Print Driver



## Step 2: Setting up the Computer's TCP/IP Address


Once you have set the IP Address on the laser you will need to set the TCP/IP Address in your computer.

1. From the Start menu at the bottom of your computer monitor screen select *Start / Control Panel / Network Connections*.

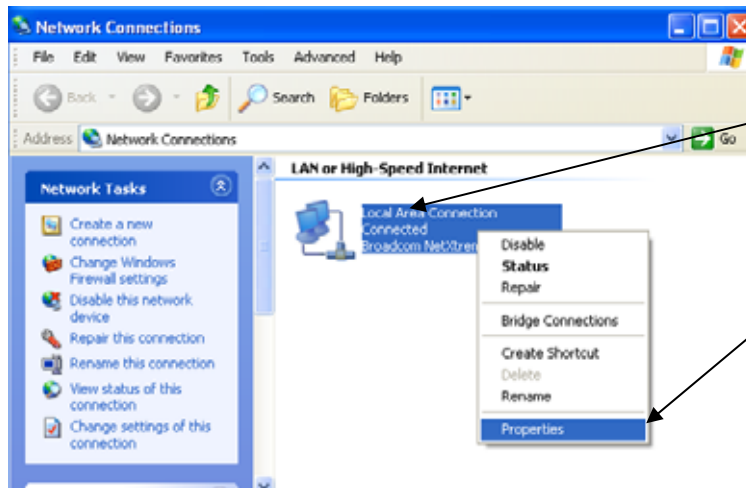


Right mouse click on the **Local Area Connections** icon, then click on **Properties**.


2. Highlight the Internet Protocol (TCP/IP) option.
3. Then click on Properties.

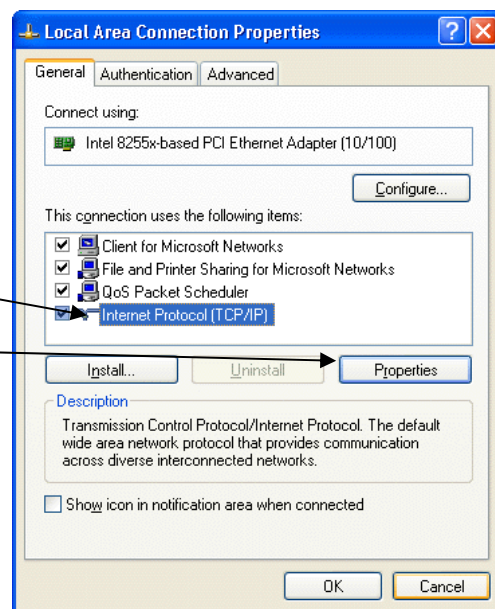

# Section 5: Installing the Epilog Dashboard Print Driver

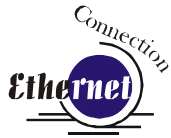

- The window below will appear. Select Use the following IP address radio button.

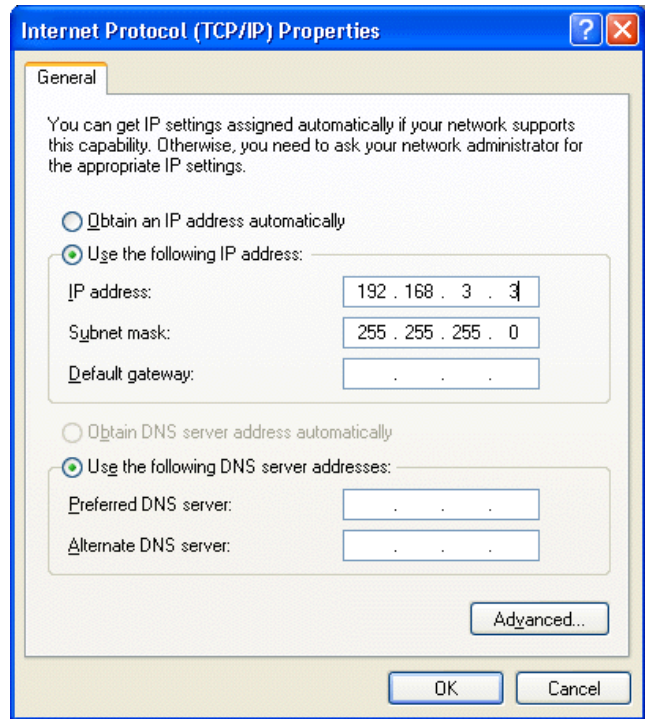


- Type in the following (leave everything else blank on this page).

IP Address	192 168 3 <input type="text" value="3"/>
Subnet Mask	255 255 255 0
Default Gateway	Leave blank

This number is not an error -- the last digit of the IP address in this window only must be different than the IP address set in the Epilog Zing.

- Click the **OK** button in this window and then click on the Close button in the next window.
- Your computer is now set to print through a crossover cable to the Ethernet port on the laser.


# Section 5: Installing the Epilog Dashboard Print Driver

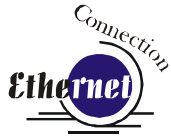


## *Step 3: Installing the Dashboard Driver for an Ethernet Connection:*



Insert the Epilog Laser CD into your computer's CD player. It should Auto-Start and the following window should appear (refer to Appendix C if the AutoRun feature does not bring up the following screen):

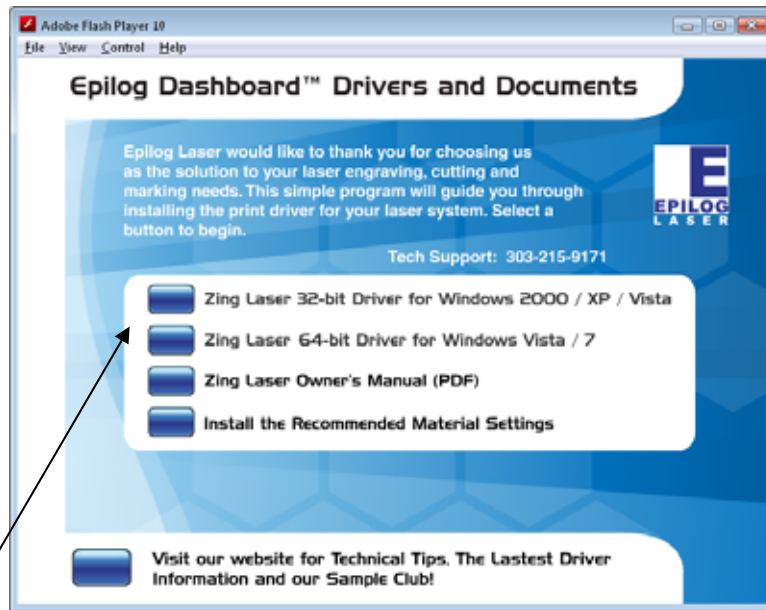

Click on the **Zing Laser...** button. The following window appears:

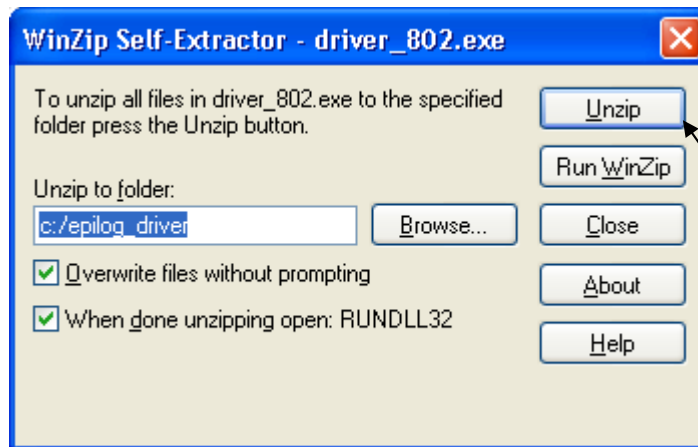


Click on the **Unzip** button.

# Section 5: Installing the Epilog Dashboard Print Driver



**NOTE** - When you Unzip the driver files they will be unzipped into the c:/Epilog\_Driver directory. Do not move them from this directory. The installation process looks for them in this directory later on in the process.

The following window will appear:

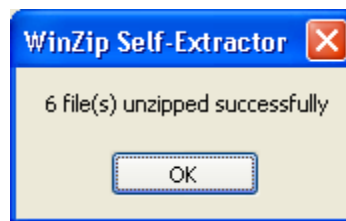


Click on **OK** and the following window appears:



Click the **Next>** button to continue.



# Section 5: Installing the Epilog Dashboard Print Driver

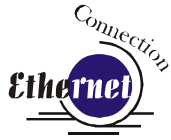

Select **Local printer attached to this computer**

Deselect **Automatically detect and install my Plug and Play printer**

Click **Next>** button to continue.

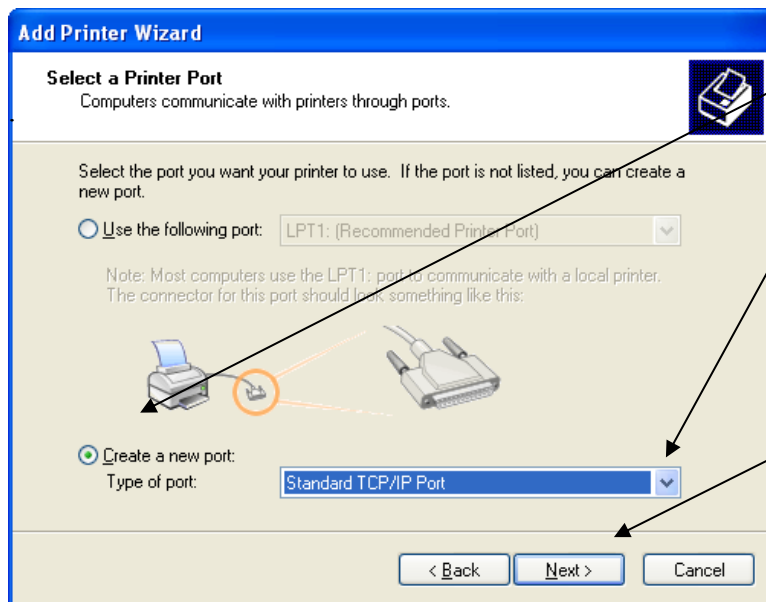
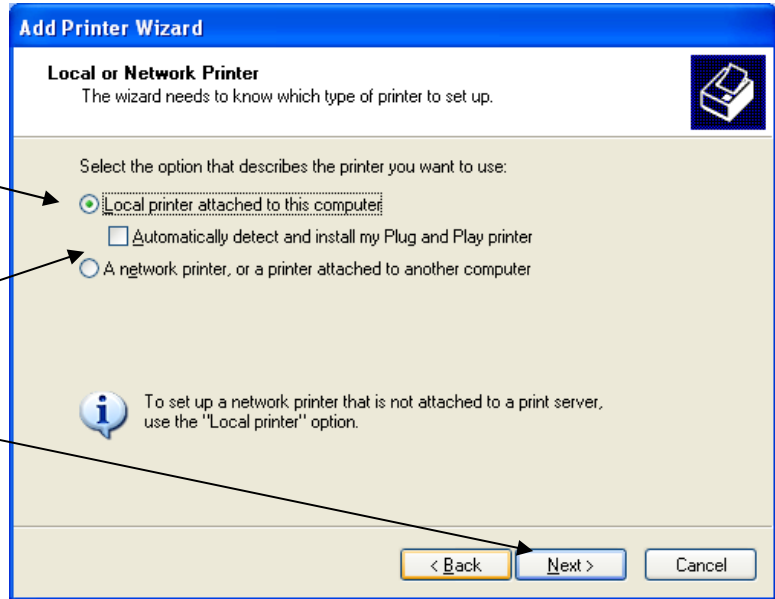


Click on **Create a new port:**


Use the scroll button to select **TCP/IP Port**

Click **Next>** to continue

# Section 5: Installing the Epilog Dashboard Print Driver

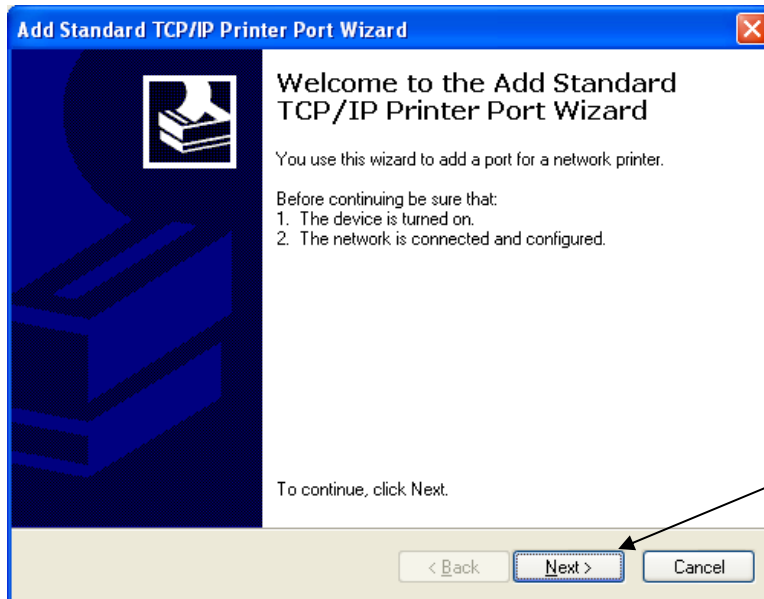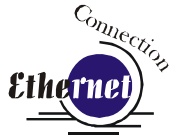


Click Next> to continue.

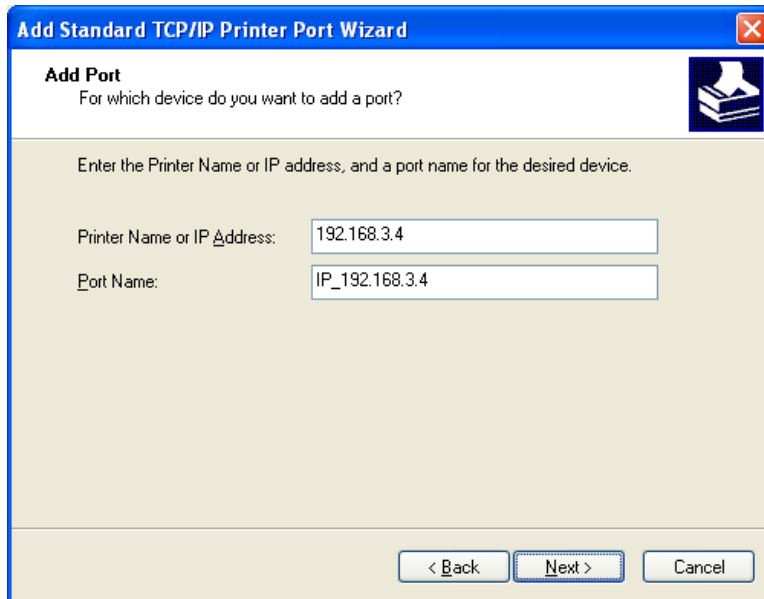

Enter the same IP Address that you set using the Zing keyboard (Step 1 in this procedure). It is important that the IP addresses be the same in both places, but the format of the numbers looks a little different. In the control panel the IP Address will look like this: 192.168.003.004. When you enter the IP Address in this window, you do not need the zeros, and the address will look like this: 192.168.3.4.



# Section 5: Installing the Epilog Dashboard Print Driver

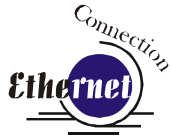


Click on the **Custom** button, and then **Settings**.

Set Protocol to **LPR**. This is a very important step. Your download time will be greatly increased if LPR is not selected.


Type **Legend** in the Queue Name box.

Click **OK** to continue.

# Section 5: Installing the Epilog Dashboard Print Driver


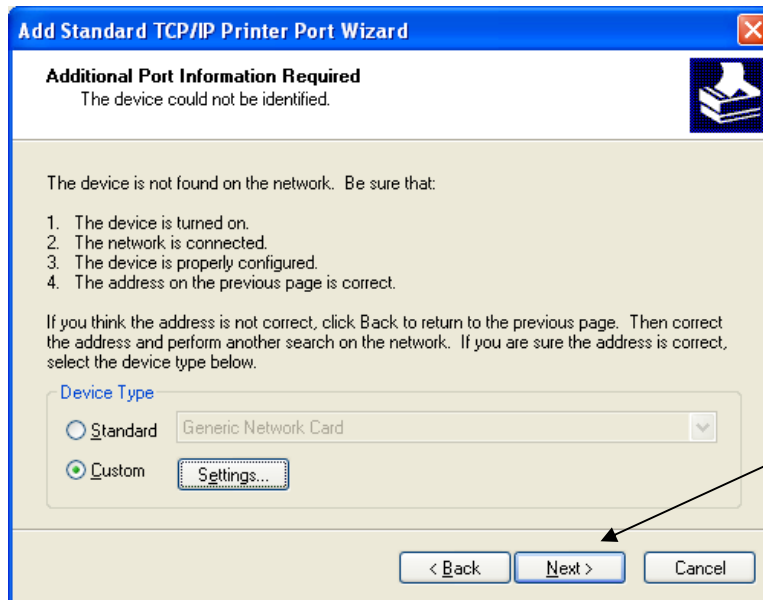


Click *Next* to continue.

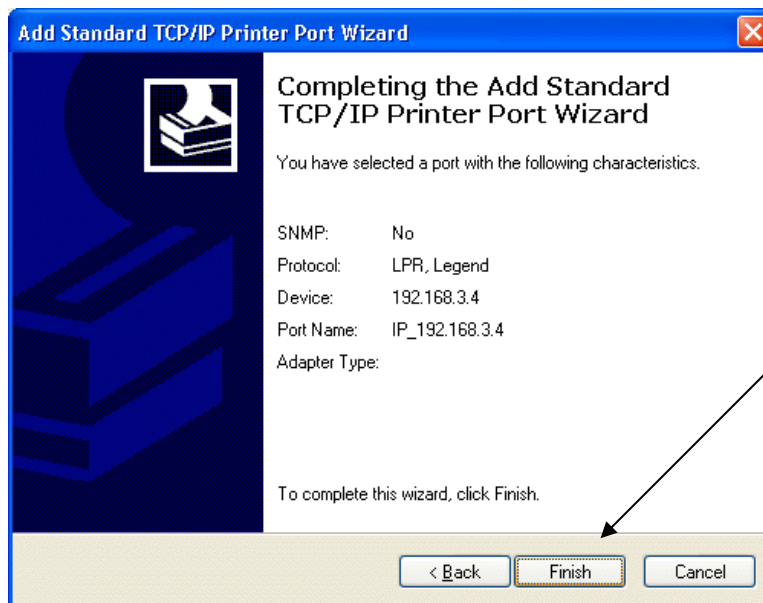


Click *Finish* to continue.

# Section 5: Installing the Epilog Dashboard Print Driver

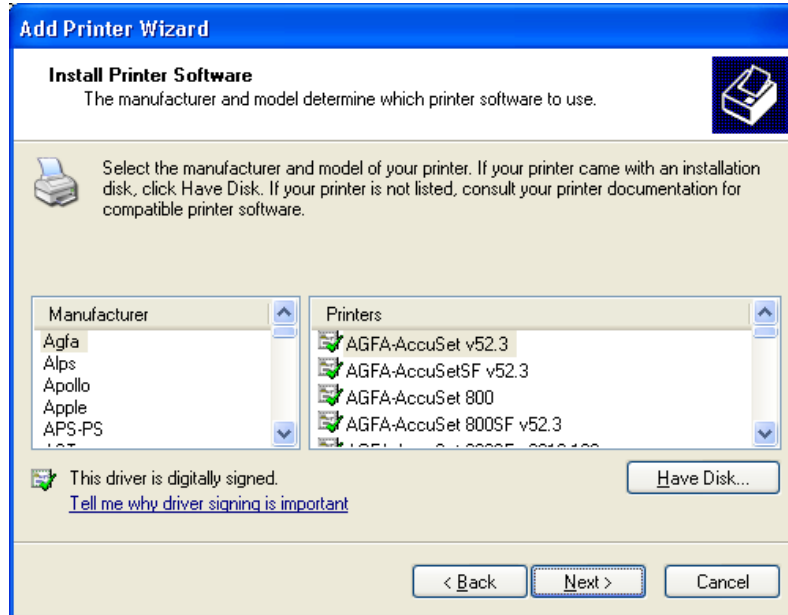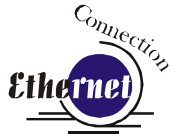


Click Have  
Disk...

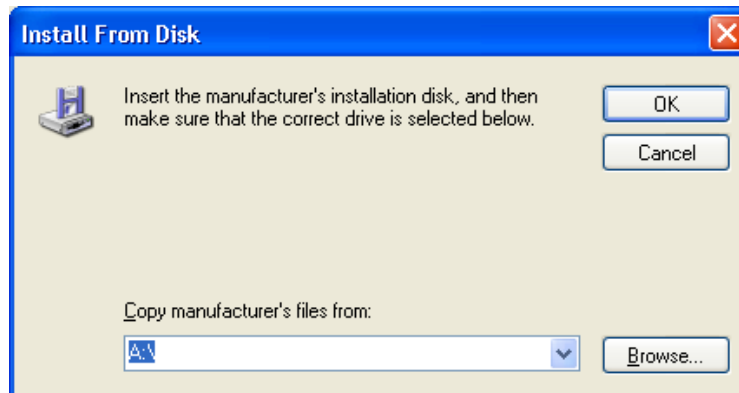


Click on  
Browse

# Section 5: Installing the Epilog Dashboard Print Driver

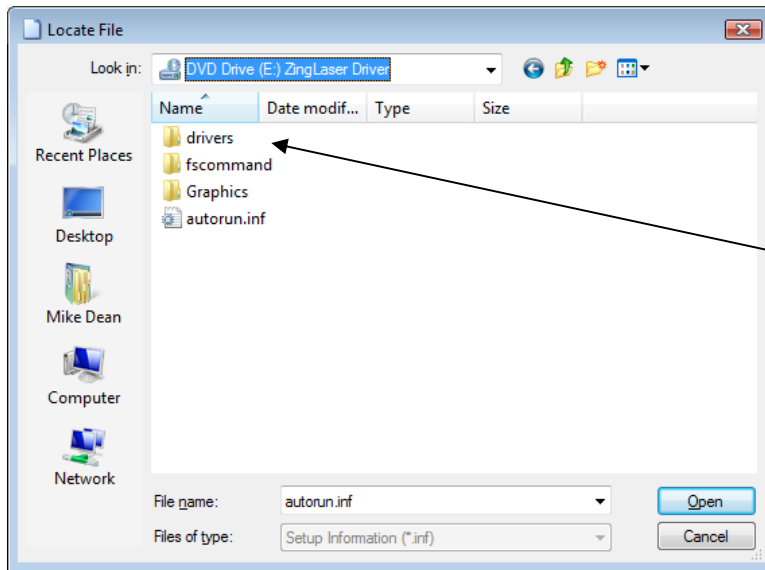



Go to the drive with the Epilog CD.

Double click on the drivers folder.

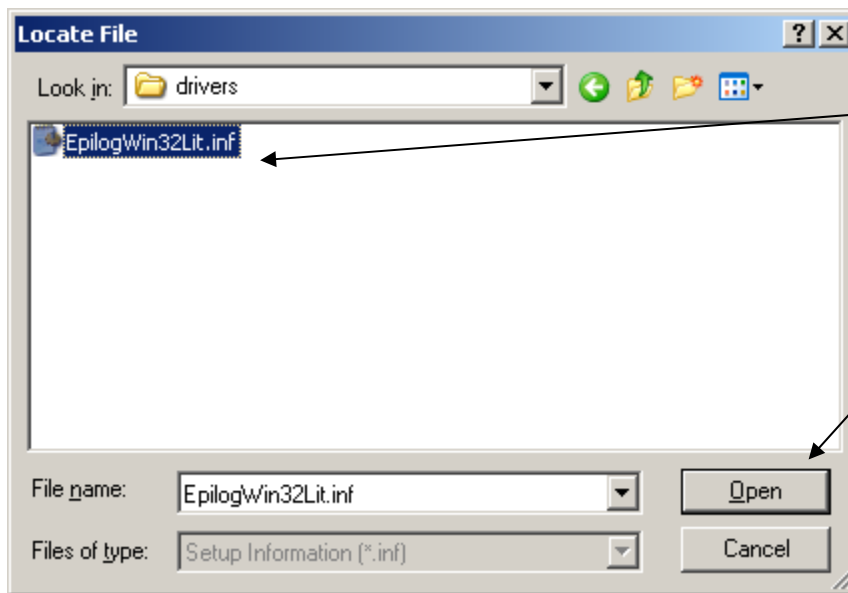


Highlight the EpilogWin32Lit.inf file and then click on **Open** to continue.

# Section 5: Installing the Epilog Dashboard Print Driver

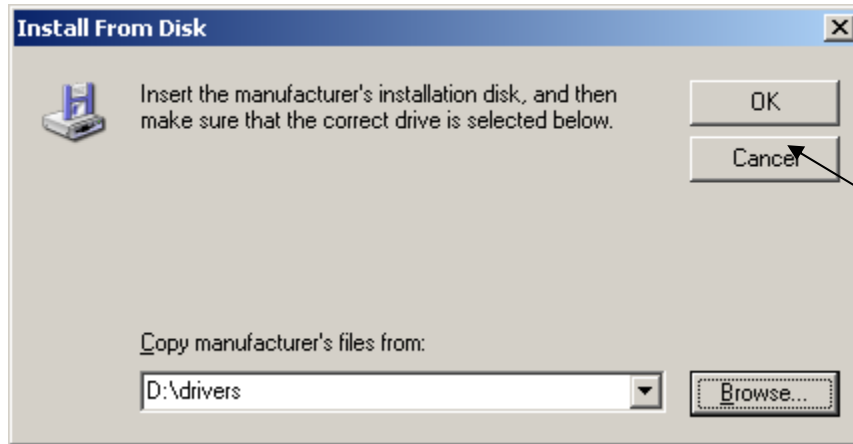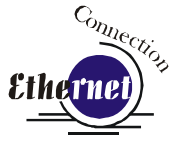


Click on **OK**

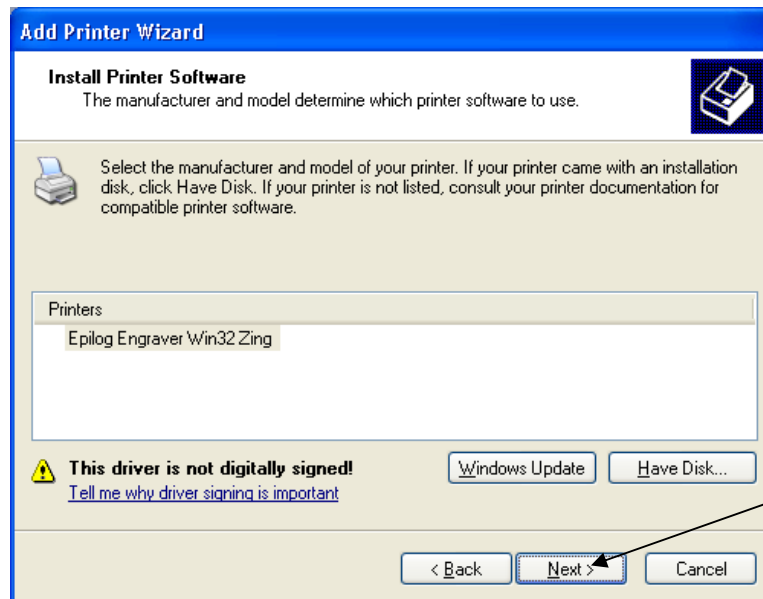

Highlight the Epilog Engraver Win32Zing file and then Click **Next>**.

# Section 5: Installing the Epilog Dashboard Print Driver

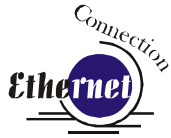

**Add Printer Wizard**

**Name Your Printer**  
You must assign a name to this printer.

Type a name for this printer. Because some programs do not support printer and server name combinations of more than 31 characters, it is best to keep the name as short as possible.

Printer name:

Do you want to use this printer as the default printer?

Yes  
 No

< Back   Next >   Cancel

Name Your Print driver and determine if you want this to be the default driver.  
Click **Next**.

**Add Printer Wizard**

**Printer Sharing**  
You can share this printer with other network users.



If you want to share this printer, you must provide a share name. You can use the suggested name or type a new one. The share name will be visible to other network users.

Do not share this printer  
 Share name:


< Back   Next >   Cancel

Do not share.  
Click Next

# Section 5: Installing the Epilog Dashboard Print Driver

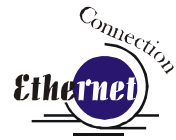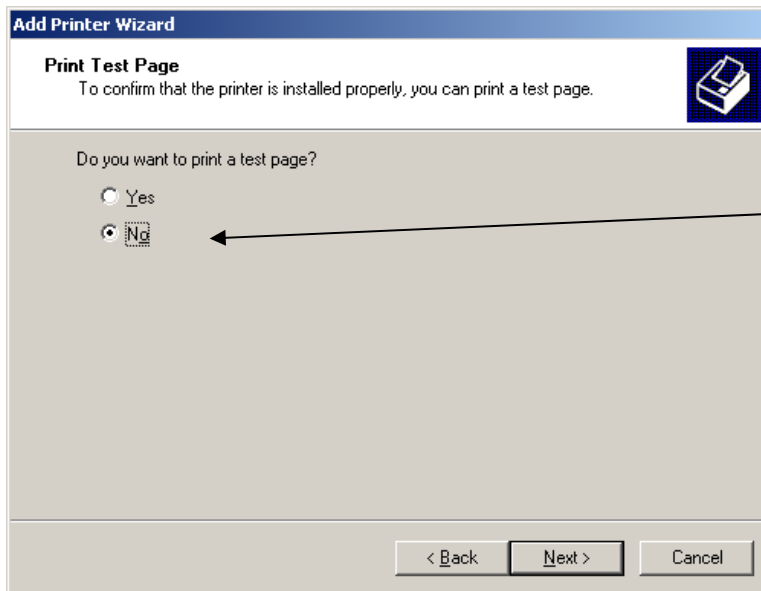


Do not print a test page.

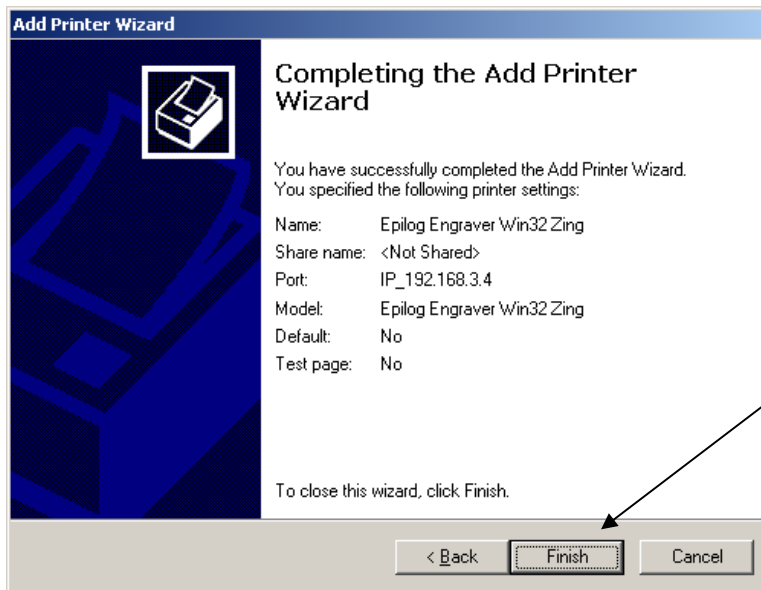

Click on Finish.


# Section 5: Installing the Epilog Dashboard Print Driver

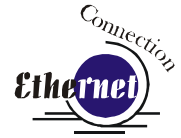

Click ***Continue Anyway***.

While the driver has not been tested by Microsoft, it will not destabilize your computer.

On newer versions of Windows you may see a Window pop up that requests permission to allow installation. Click on Allow Installation.

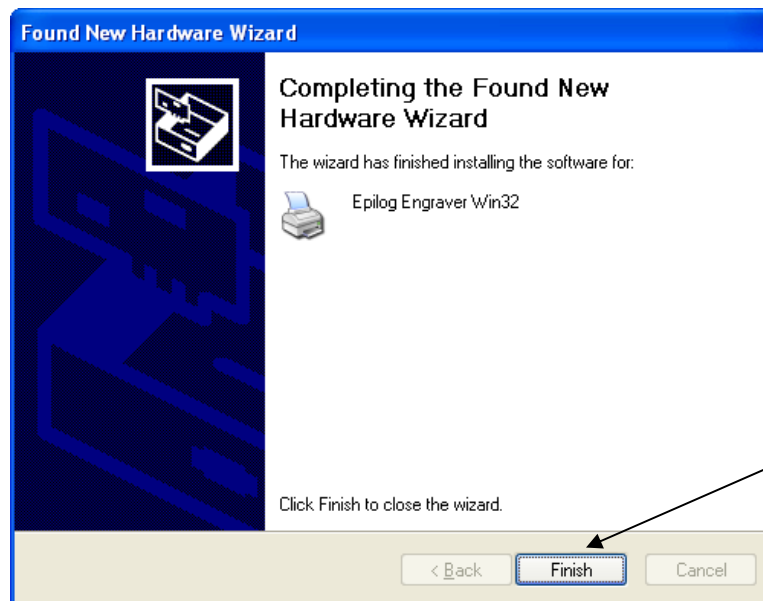

Click ***Finish***.

***That's it!*** Your print driver is installed and you are now ready to print to your new laser system!



# Section 6: Quick Start & Easy Setup

---

## *In This Section*

- Artwork Setup
  - Job Setup
- 

Your Epilog laser system is ready to use once you have followed the steps in Sections 1 – 5. To get started quickly and run a sample piece of material on your new laser, the following is a very quick setup guide to describe the general steps for running a first job. A detailed set of instructions for each step of the process follows this quick setup guide:

1. Set up a simple piece of artwork in your software program (e.g. CorelDraw).
2. Turn on the power to your laser and wait for a “Beep” to note the machine is initialized.
3. Turn on your exhaust.
4. Place your sample material on the table in the upper left corner (make sure the table is low enough to accommodate the material).
5. Set focus.
6. Close the door.
7. From CorelDraw click on the **File** pull down menu to print.
8. Select **Print**. Make sure your Printer Destination is the “Epilog Engraver Win32 Zing”.
9. Click **Properties** to go to the Dashboard to set Speed, Power, etc., for the material you are using. See the **Speed and Power Recommendations** section of this manual.




More information on settings for the Dashboard are included in the **Using the Epilog Dashboard Driver section** of this manual.

10. Click **OK** to exit out of the Dashboard driver with the settings in place.
11. Click **Print** to print the page to your laser.

## Section 6: Quick Start and Easy Setup

---

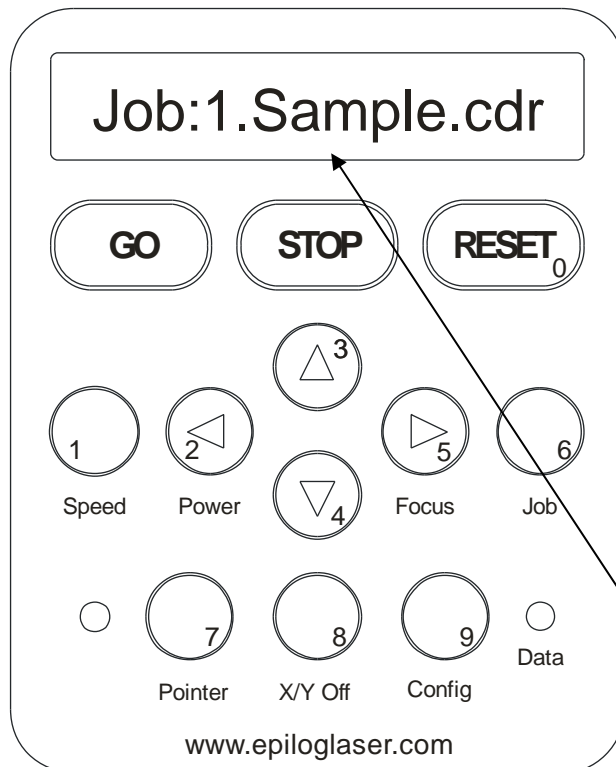

12. The job you sent over most recently is shown in the LCD display.
13. To run that job, just press the **GO** button on the keyboard.
14. To run a previous job, press the **JOB** button on the keypad and then scroll through the sent jobs by pressing the **UP** Arrow key or the **Down** Arrow Key. The corresponding job names will be displayed in the LCD Display Panel. If more than one job of the same name is sent over, it is numbered after the word Job.
15. Press **GO** when the job to be run is displayed in the LCD Display Panel. The job will now start.

## Section 6: Quick Start and Easy Setup


---

### *Artwork Setup*

Create your job in the graphics software of your choice, (for example – CorelDraw). There are three different modes of operation for the laser and the way you setup your artwork will determine if you raster engrave or vector cut.

**Raster engraving** can best be described as very high resolution dot matrix "printing" with a laser. Raster engraving is used to create highly detailed graphic images. The laser head scans back and forth, left to right, engraving a series of dots one line at a time. As the laser head moves down line by line, the dot pattern forms the image that was printed from your computer. You can raster engrave scanned images, text, clipart, photographs, or line drawings. Use your imagination and creativity.

This artwork is a good representation of a raster file. The soccer ball is a clipart image. Text has been added, and a scanned photograph is also incorporated.

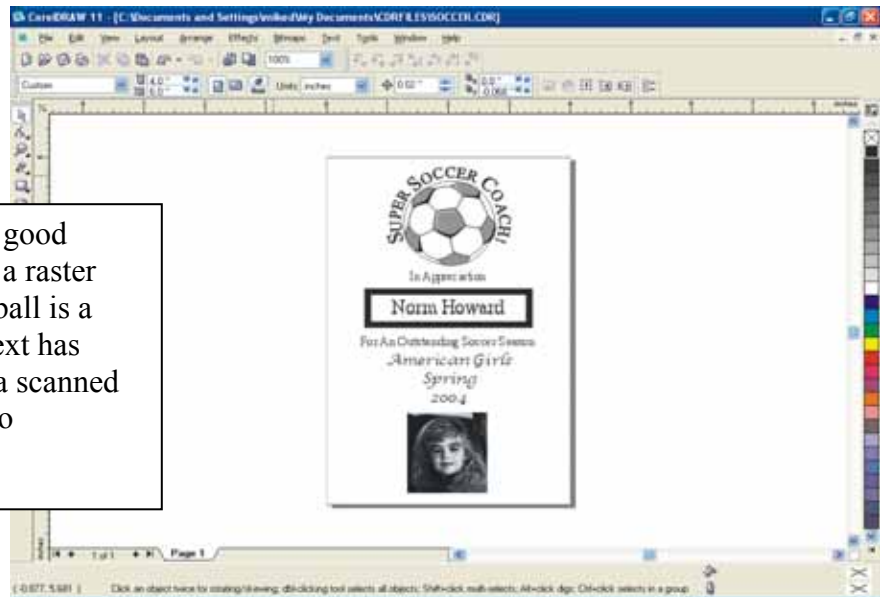


## Section 6: Quick Start and Easy Setup

**Vector cutting** is a continuous path that follows the outline, or profile, of an image. Vector cutting is normally used to cut completely through materials such as wood, acrylic, paper, etc. It can also be used for quick marking of characters and geometric patterns. You can vector cut with the laser by setting objects and text to be unfilled and drawn with a 0.001-inch (0.025mm) outline. The thin outline will produce a vector cut. When vectoring, use the vector grid or a pin table to protect the back of your material as well as your table from laser marking.



The two samples above show the results of Vector Cutting in wood.

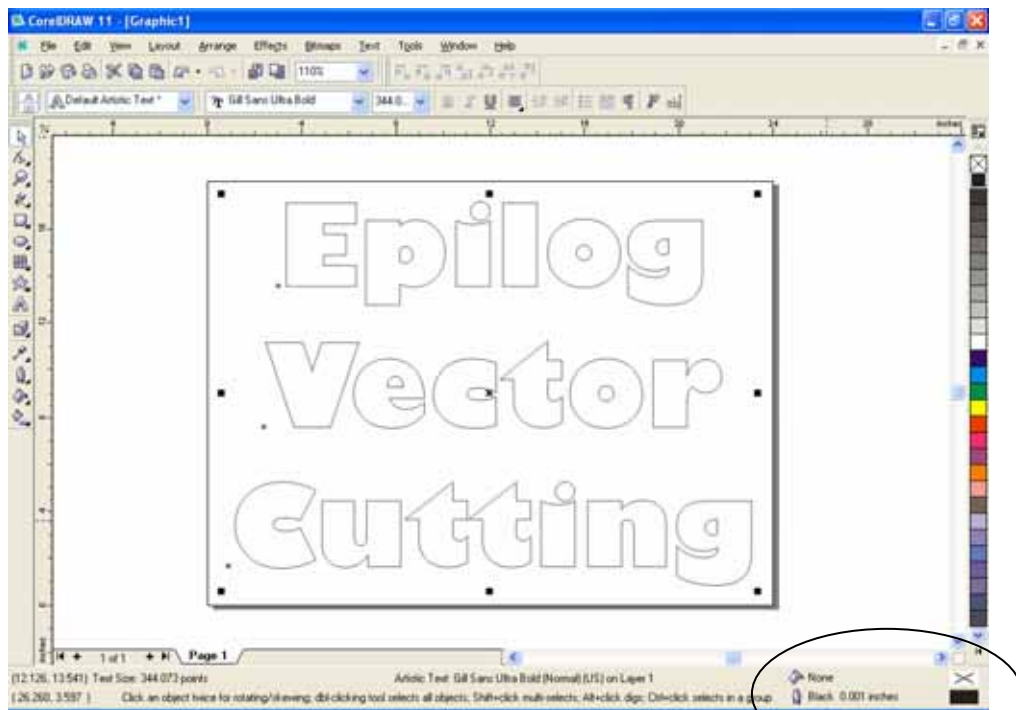

This image is a good representation of a vector file. There is no fill in the letters and the outline is .001 inch (0.025mm).

## Section 6: Quick Start and Easy Setup

---



**Note:** If your Raster artwork contains thin lines between .001 and .007 inches and you are using **Vector** or **Combined mode**, those thin lines will all vector cut. This can be disconcerting when it happens. The most common setup where this occurs is when you have a clipart image with hidden lines that you send to the laser using **Combined mode**. The artwork shown below is a good example of a piece of clipart as it appears on the screen (top) and the hidden lines (bottom) that will vector cut if you are in **Combined** or **Vector mode**. If you only want to Raster engrave, make sure you select **Raster mode** in the Epilog Dashboard.



For more information on Vector cutting refer to the **Using the Epilog Dashboard Driver** section of this manual.

In CorelDraw you can view just the lines (bottom view) by clicking on the View button in the menu bar and selecting Simple Wire frame.


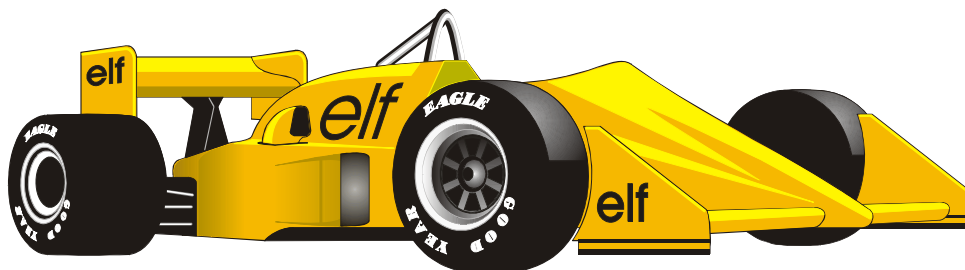


Figure 1: Clipart Image w/Hidden Lines

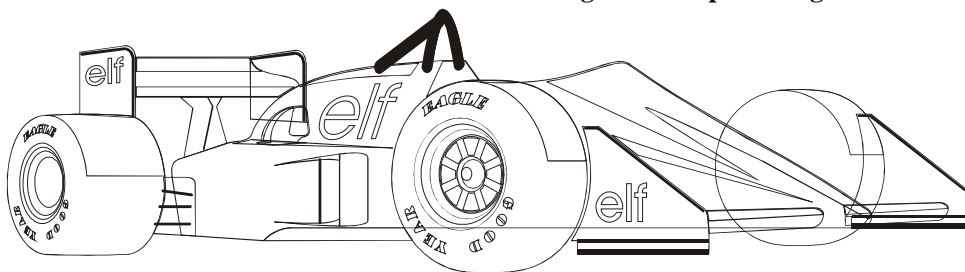

The upper image is a complex piece of clipart. The lower image shows all of the hidden lines that are in this piece of clipart. If this clipart image were run in **Combined mode** it would first raster most of the car then vector cut all but the thickest lines.

# Section 6: Quick Start and Easy Setup

---


## *Job Setup*

Your Epilog laser system has a prime reference point that is in the upper-left corner of the laser table. This is the 0,0 (zero, zero), or “Home” position. All artwork and material placement is normally referenced from here. Keep this 0,0 point in mind when measuring and setting up your work.


### *Artwork Orientation*

Landscape or Portrait – You can engrave using either landscape or portrait modes. Depending on the artwork, you can increase your efficiency and decrease the time it takes to engrave an image by changing the orientation of your file. Many users set up their artwork in portrait mode and then rotate the artwork 90 degrees if they are going to print from landscape mode.

The drawings below show the same job in portrait mode (left) and landscape mode (right). The portrait mode will engrave in less time because there is a large amount of horizontal white space between the lines of text that the laser will automatically skip through. Engraving the same job in landscape mode eliminates the lasers ability to skip through white space, resulting in a longer engraving time. Experiment with the artwork that you use. It will quickly become second nature which mode works best for different types of artwork.

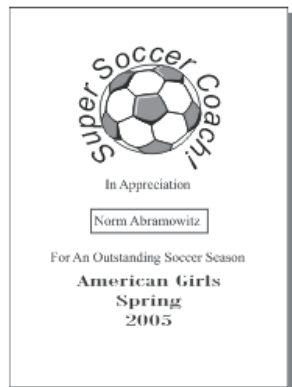

Portrait Mode

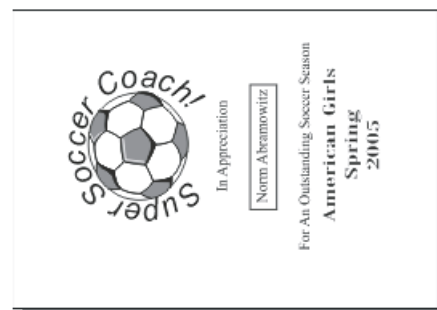


Landscape Mode

# Section 6: Quick Start and Easy Setup

---

## *Material Orientation*

Some materials such as wood or plastics that have a grain (brushed look) will look nicer when engraved if the grain of the material runs parallel with the X-stroke of the carriage. The orientation of material without a grain pattern is usually not important.

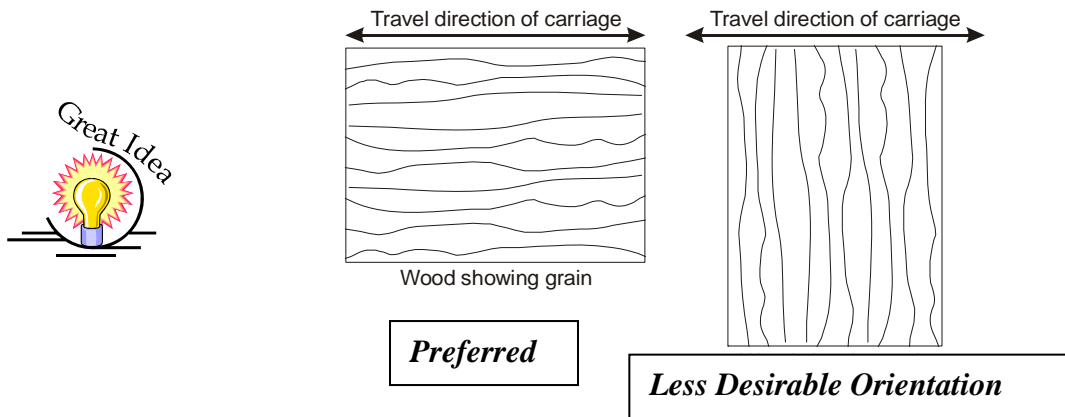

## *Piece and Page Size*

Many users like to create their artwork on a page size in Corel that matches the size of the piece that is to be lasered. Compensating for beveled edges or placing an image in an exact location is easy when there is a one-for-one relationship between the material and the page size of the artwork. If this method works for you, remember that you must also set the Piece Size dimensions in the Dashboard to match the page size you have set in your graphics software.

On the other hand, many users do not want to change the Piece Size dimensions in the Dashboard every time they print something new. They prefer to use a page size that matches the table size (16 x 12 (406 x 305 mm) for the Zing 16) and place their artwork into the upper left corner of the page. Both methods are effective and it is a matter of personal preference which method is used.

Place the material to be engraved on the engraving table in the upper left hand corner, pressing the material firmly against the metal rulers along the top and left edges.

Most material does not need to be held or clamped in place. Simply setting it on the table and letting gravity hold it in place is enough. If you are using a material that is very thin and likely to move during operation you can hold it in place by using the optional Zing Vector Grid (described later in this manual). The vector

## Section 6: Quick Start and Easy Setup

---

grid uses the exhaust fan to create suction from below the material and hold the piece of material in place. The material can also be held with a variety of materials such as masking tape, PlayDoh, etc. Creating jigs is also an excellent method of holding materials that are high volume, or high value. Engraving or cutting a jig to match an unusual shape is very easy to do.

### *Focus on your material*

In order to engrave or cut a crisp clean image, your material must be the correct distance from the bottom of the focus lens. Setting the distance from the bottom of the focus lens to the top of your material is the process of focusing, and is accomplished by placing your material on the table and moving the table up or down. Once your material is just touching the focus gauge, you are in correct focus.

### *Focus*

The photo below shows the focus gauge that is built in to the X-beam of your laser system. You can move the focus gauge by hand from the far left to the far right side of the X-beam. This allows you to focus anywhere along the X-axis of the table. The focus spring will swing freely when released from its holder.



Focus Gauge  
/ spring  
assembly.

To focus, release the focus spring from its holder on the X-beam. Press the **Focus** button so activate the Up and Down **Arrow Keys** on the control panel. Pressing the Up or Down **Arrow Keys** moves the table. Your machine is in correct focus once the end of the spring just touches your material. Swing the spring back into



## Section 6: Quick Start and Easy Setup

---

its holder so it does not touch the engraving material while the job is running. Press the **Reset** button to exit out of focus mode before starting your job.

The focus distance is where the laser beam is at its sharpest point. Many users let the focus gauge swing back and forth while raising the table. As the table moves up and gets close to the correct focus distance the spring will just touch your material and stop swinging. This little trick of swinging the gauge back and forth will allow you to quickly and easily set the proper focus distance every time!

**Focus Anywhere on the Table:** If you wish to focus at any point on the table you can do so by disabling the axes and moving the carriage by hand to the location where you would like to focus. To do this, use the following key sequence:

Press the **X/Y Off** key. This disables the X and Y axes and you can now move the carriage by hand to any point on the table. Press the Up or Down cursor keys on the keyboard to move the table up or down to set the proper focus height. After you are in correct focus, press the **Reset** key to exit focus mode.

**Hint:** When using this method it is often convenient to turn on the red dot pointer to help you see where the carriage is moving.

***Be careful to avoid touching the optics when you are moving the carriage by hand!***

## Section 6: Quick Start and Easy Setup

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**



Manual

# Basic Operations

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# Section 7: Using the Epilog Dashboard Driver

---

## *In This Section*

- General Tab
  - Advanced Tab
  - Color Mapping Tab
  - Additional Dashboard Features
  - Changing Dashboard Defaults
- 

The Epilog Dashboard is the print driver that allows you to set laser functions from your computer and is the link that prints your data or images from your computer to your laser system. Because the Dashboard is a print driver the terms Dashboard and print driver may be used interchangeably throughout this manual.


The Dashboard is shown below and can be installed from the driver CD that came in your accessories kit. It can also be downloaded from the Epilog web site – [www.epiloglaser.com](http://www.epiloglaser.com). If you are just getting started and are in a hurry to engrave a job, you can do so by setting just a couple of parameters in the Dashboard without having a detailed understanding of what different choices are available to you.

To get started with a simple engraving job, type your name in CorelDraw, press the **Ctrl** and **P** keys to print, select the Zing driver as the destination to your printer and go into **Properties**. Set the following parameters:

- Resolution: **500 DPI**
- Job Type: **Raster**
- Piece Size: Match to your page size in CorelDraw.
- Use the speed and power settings found in the **Speed and Power Recommendations** section of this manual for the material you are using.
- Select **OK** in the Epilog Dashboard
- Select **Print**. You have sent the file to the laser system and are now ready to engrave your name.



# Section 7: Using the Epilog Dashboard

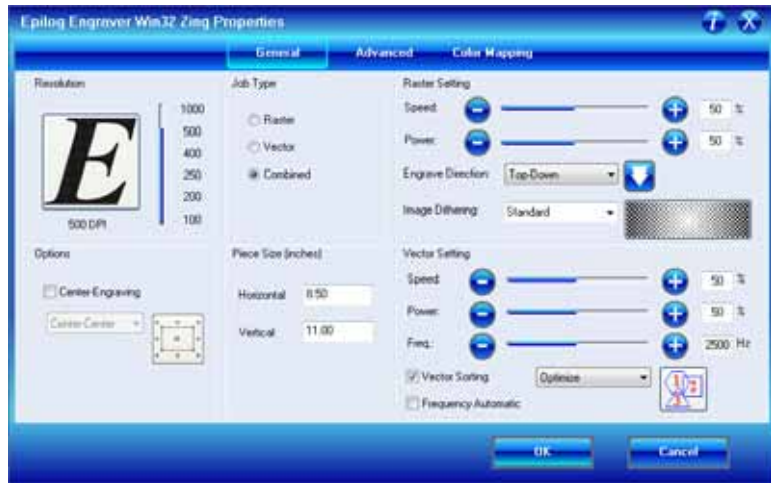

Now that you have printed a simple job, you are ready to gain a better understanding of the different printing options available from the Dashboard. Most engraving and cutting jobs can be accomplished by using only the General tab. Advanced features for more complex jobs can be found under the Advanced and Color Mapping tabs.



**Note!** – When using the slider bars, there are several different ways to get the desired setting. These different methods all follow standard Windows protocol, so they will work in other Windows software applications too!

You can move the settings in increments of one by using the + and – icons.



You can move the slider in increments of ten by clicking close to, but not on, the slider. If you hold down the **Alt** key on your computer keyboard while clicking close to the slider will bring up the dotted box outlining the slider and will allow a little better control of moving in increments of ten. Clicking directly on the slider control (the little box in the center) will also bring up the dashed outline.




## Section 7: Using the Epilog Dashboard

---

You can move the little slider box by clicking down, holding and then moving to the desired number before releasing your mouse.



You can type the setting into the number box.

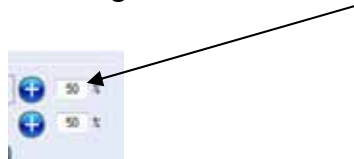

The following sections provide detailed explanations of the different features in the Print Driver. Most engraving and cutting jobs can be accomplished by using only the General tab of the Print Driver. Advanced features for more complex jobs can be found under the Advanced tab.

# Section 7: Using the Epilog Dashboard

## General Tab

### Job Type



One of the first things new users want to know is how the laser system knows when to engrave and when to cut. The decision is based on several variables:

1. Line weight (or Stroke) as defined in your graphic image from Corel, Illustrator, etc. The line weight of your object will determine if it will engrave or cut.
2. The Resolution as set in the DashBoard driver will also have an effect on which lines will engrave and which will cut.
3. The Job Type as set in the DashBoard driver - Raster, Vector or Combined.


The tables on the following pages show how the line weight from your graphics program and the Resolution setting from the DashBoard affect which lines will engrave and which will vector cut. Getting used to how this works will be obvious after just a couple of jobs.

**Raster Mode** – This mode will only engrave. You cannot cut from this mode.

**Vector Mode** – This mode will only cut. You cannot engrave from this mode.

**Combined Mode** – By properly setting up your artwork you can both engrave and cut from this mode.

The following pages will describe how to set up your artwork so you can easily predict what your output will be.

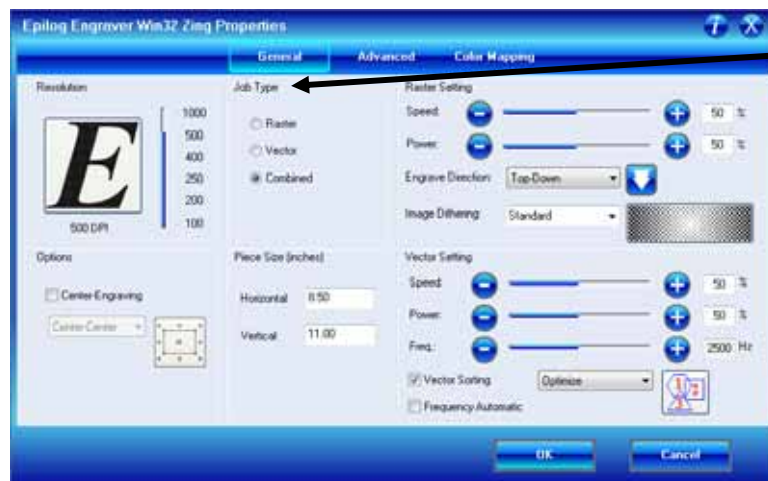

The Job Type: menu allows you to specify Raster, Vector, or Combined. This setting works in conjunction with the way your artwork is setup to produce a raster engraving, a vector profile, or a combination of the two modes in a single job.



# Section 7: Using the Epilog Dashboard

---

## **Raster**



 
Raster mode is used for marking or engraving materials. Typical uses would be reproducing clipart, scanned images, photos, text and graphic images. The Raster Speed and Raster Power boxes will be enabled when you have selected Raster under Job Type. Set the Speed and Power boxes to the appropriate settings for the material that you are engraving. For speed and power guidelines, see the *Speed and Power Recommendations* section of this manual. As a general rule, most users do not use 250 DPI resolution or below for production engraving. If you always set up your artwork so your thin lines are .006 inches or greater they will always engrave at 400, 500 and 1000 DPI.



*Note* – Very thin lines will not raster engrave, and the definition of “thin” varies depending on the Resolution being used. The following table shows which line weights will raster at different resolutions when in Raster or Combined mode.

# Section 7: Using the Epilog Dashboard

Example: The rectangle below has a line weight of 0.003 inch. It will not raster engrave at any resolution (see following chart). If you send just this box to the laser in Raster mode and try to run the job, the laser will beep once and be finished because the line is too small to be recognized as an engraving line.

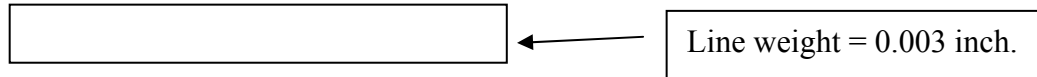

**Engraving Line Weights**  
Line weights that will engrave at different resolutions (DPI) when in Raster or Combined mode.

		Resolution					
		<b>100</b>	<b>200</b>	<b>250</b>	<b>400</b>	<b>500</b>	<b>1000</b>
Line Weight (inches)	<b>.001</b>	No	No	No	No	No	No
	<b>.002</b>	No	No	No	No	No	No
	<b>.003</b>	No	No	No	No	No	No
	<b>.004</b>	No	No	No	No	No	<b>Yes</b>
	<b>.005</b>	No	No	No	<b>Yes</b>	No	<b>Yes</b>
	<b>.006</b>	No	No	No	<b>Yes</b>	<b>Yes</b>	<b>Yes</b>
	<b>.007</b>	No	No	No	<b>Yes</b>	<b>Yes</b>	<b>Yes</b>
	<b>.008</b>	No	No	<b>Yes</b>	<b>Yes</b>	<b>Yes</b>	<b>Yes</b>

# Section 7: Using the Epilog Dashboard

---

## **Vector**

Vector mode is used to mark or make a thin line drawing. The Vector Speed, Power and Frequency bars will be enabled when you have selected **Vector** under **Job Type**.



 
*Note* - Artwork, such as scanned images, photos, JPEGs, etc will not vector cut because they do not contain thin lines of any kind.

*Note*: When you are cutting in Vector or Combined mode be aware that your best results are typically produced at slower speeds. The highest speeds are specifically designed for draft mode or less demanding applications where speed is much more important than quality.

*Note* - Very thin lines are used to define Vector cutting and the definition of “thin” varies depending on the Resolution being used. The following table shows which **line** weights will vector cut at different resolutions when in Vector or Combined mode. As a general rule, most users set their vector line weights to .001 inch.

# Section 7: Using the Epilog Dashboard

**Example:** The rectangle below has a line weight of 0.001 inch. It will vector at any resolution (see following chart).

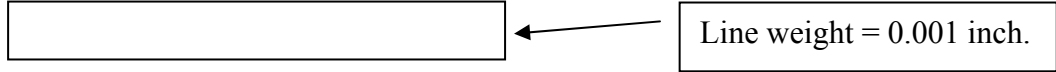

**Vector Line Weights**  
Line weights that will vector at different resolutions (DPI) when in Vector or Combined mode.


		Resolution					
		<u>100</u>	<u>200</u>	<u>250</u>	<u>400</u>	<u>500</u>	<u>1000</u>
Line Weight (inches)	<u>.001</u>	Yes	Yes	Yes	Yes	Yes	Yes
	<u>.002</u>	Yes	Yes	Yes	Yes	Yes	Yes
	<u>.003</u>	Yes	Yes	Yes	Yes	Yes	Yes
	<u>.004</u>	Yes	Yes	Yes	Yes	Yes	No
	<u>.005</u>	Yes	Yes	Yes	No	Yes	No
	<u>.006</u>	Yes	Yes	Yes	No	No	No
	<u>.007</u>	Yes	Yes	Yes	No	No	No
	<u>.008</u>	Yes	Yes	No	No	No	No

## Section 7: Using the Epilog Dashboard

 ---

For ease of use, we recommend that you set your vector lines to 0.001 or 0.003 inches. These line weights are the most commonly used in most software applications and as you gain experience, setting them will become second nature. As you can see from the table above, these line weights will vector cut at all resolutions.

When using vector mode, it is necessary to design your job to give the intended result. Objects and text should be unfilled and drawn with the thinnest possible outline (other than zero), as shown below. A .001 inch (.025 mm) is recommended.



VECTOR

CORRECT Vector setup



VECTOR

INCORRECT Vector setup

### Combined

“Combined” mode is used when you want to incorporate both Raster and Vector functions in the same job setup. When you are in Combined mode, all Raster operations will be performed first, with the Vector operations second.



*Note on Vectors:* If you are in Vector or Combined mode, all thin lines will be vector cut! This can be disconcerting, because even if the lines are not visible in your artwork they will still cut. Usually, this happens when incorporating a clipart image that has hidden lines that are not readily apparent. Please refer to the previous page to determine what defines a “thin line” and also refer back to the *Quick Start & Easy Setup* section of this manual for an illustrated explanation of how this can affect your work.

# Section 7: Using the Epilog Dashboard

## *Resolution*

Print quality is commonly referred to as **Resolution**, and is one of the variables that determine image quality when engraving in raster mode. Resolution is expressed in dots-per-inch (DPI) and is determined by the number of lines or dots that are engraved for every inch of movement. Each horizontal line is referred to as a raster line. The higher the resolution setting, the finer the detail that can be achieved. This Epilog laser system can engrave at resolutions ranging from 100 to 1000 DPI. Keep in mind that engraving resolution is only one factor in determining image quality. The quality of the artwork being sent to the laser can have a bigger influence on the look of the final product than the resolution. If low quality artwork is sent to the laser system, even the highest resolution will not improve it. Also keep in mind that image quality is subjective. 300 DPI may be just fine for some images and some customers, while 500 DPI is the absolute minimum for others.



Resolution (Print Quality) is set in the Dashboard prior to sending the job to the laser.

Higher resolution produces better image quality.

Speed and Power settings are dependent on resolution setting. For example, there is greater overlap of each raster line at 500 DPI than there is at 300 DPI. The additional overlap at 500 DPI has the effect of lasering over more of each line twice. This means that on material like wood, you will notice a greater depth of engraving at 500 DPI than you will at 300 DPI if you use the same Speed and Power settings.

# Section 7: Using the Epilog Dashboard

---

## *Resolution Settings*

Uses for different resolution settings:

### **100 – 200 DPI**

These resolution values are typically used for non-production purposes where you want to experiment with image location, or if you want to quickly produce a rough draft.

### **250 DPI**

Some users like 250 DPI for engraving photographs that have been processed through PhotoGrav or other photo editing software designed for the laser. This resolution can also be good for production work where image quality needs to be good, but not great. Many users will use 250 DPI on plastic and other materials that don't require a lot of power in combination with large block lettering. Attempting to produce really fine detail with 250 DPI is not recommended.

### **400 DPI**

This resolution value is ideal for many applications. It combines very good image quality with fast engraving times. Many users like 400 DPI for all of their work.

### **500 DPI**

When really fine detail or overall excellent results are required, most users choose 500 DPI.

### **1000 DPI**


This resolution is used for projects that require the best engraving quality possible, although it's seldom used because under normal circumstances most people cannot visually discern the difference between 1000 and 500 DPI. There are however some users that appreciate this high level of quality and are willing to take twice as long to produce an image at 1000 DPI as it would take them at 500 DPI.



# Section 7: Using the Epilog Dashboard

---

The diagram below shows the concept of raster lines and dots-per-inch (DPI). The arrows show the change in direction of the carriage between raster lines. The difference in dot density between 250 DPI and 500 DPI resolution is shown.

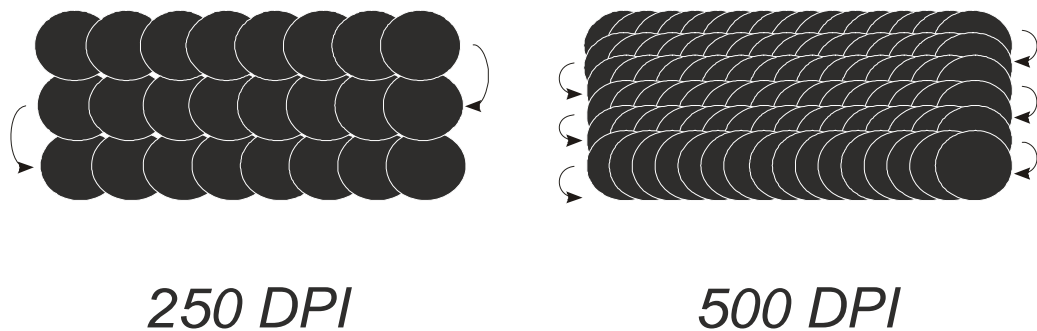

## Helpful Hints

1. There are four times as many dots engraved at 500 DPI than there are at 250 DPI - twice as many horizontally and twice as many vertically.
2. The gap between the dots is greatly reduced at 500 DPI. At 250 DPI the lesser overlap is responsible for the jagged edges that are visible when engraving at lower resolutions. It's important to remember that while resolution plays a part in producing good image quality, the artwork that is sent to be engraved is just as important. If the artwork that is sent to the laser is poor quality, trying to engrave it at 500 DPI will not improve it. It's always best to start with high resolution images. Poor artwork will probably always look poor at any resolution, while good artwork will look good at any resolution.
3. Twice as many dots and twice as many lines at 500 DPI produces a much deeper burn into materials like wood than you would see engraving the same thing at 250 DPI. This is important to understand because depth of burn is closely associated with engraving resolution – the higher the resolution, the greater the depth of burn for a given speed. The relationship between resolution, depth of engraving and Speed and Power setting is something that most people figure out with just a little experience. The ***Speed and Power Recommendations*** section of this manual helps to make this easy to understand by providing different Speed and Power settings for 250, 400, and 500 DPI engraving for each different material listed.







## Section 7: Using the Epilog Dashboard

---



The photos below show a CorelDraw clipart image engraved at 250 DPI (top) and at 500 DPI (bottom). This clipart image is full of different shades of gray and you can see that the dot spacing is spread out more on the 250 DPI than it is on the 500 DPI. Just changing the resolution to 500 DPI produces so much dot overlap that the fill patterns tend to blend together. It's a matter of personal preference as to which resolution looks better, but these photos show the dramatic difference resolution can make, especially when engraving with grayscale images.

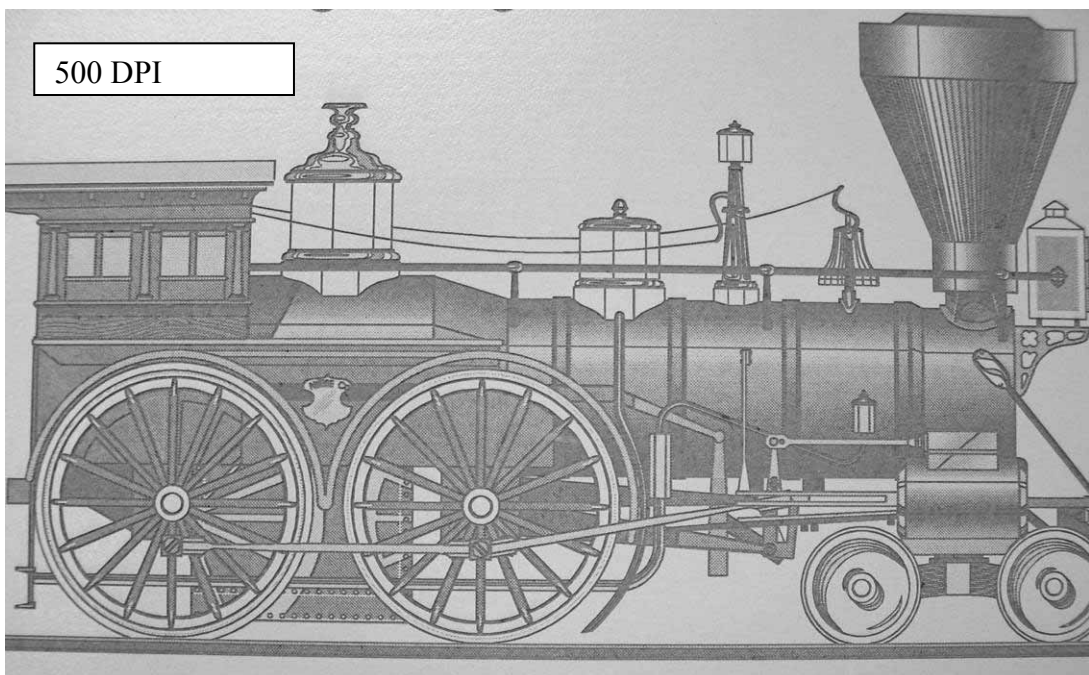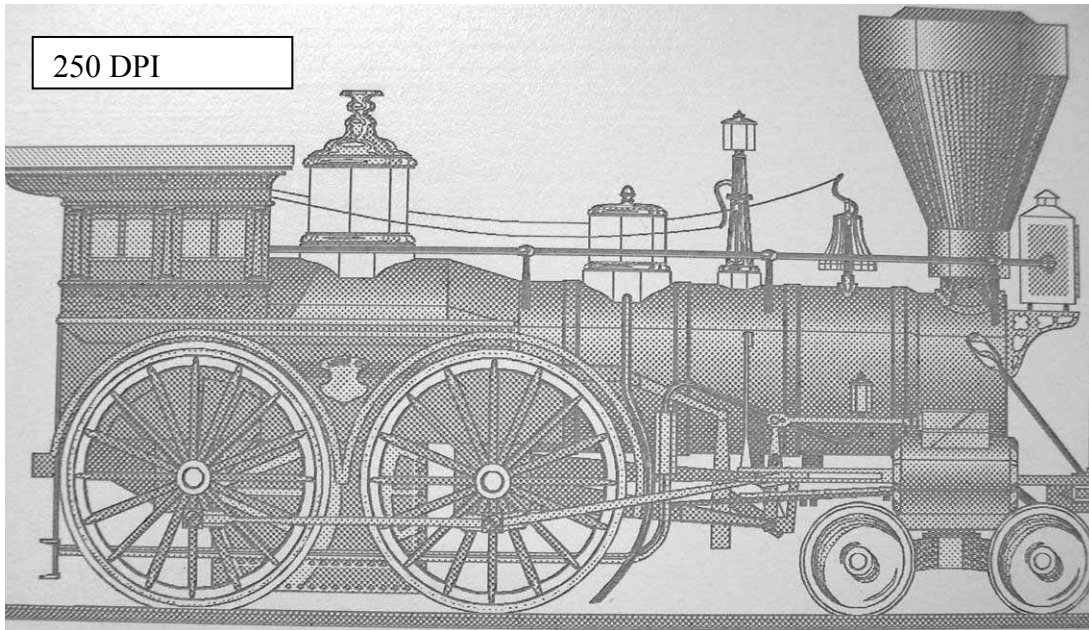

# Section 7: Using the Epilog Dashboard


---

## *Piece Size*

Many users like to create their artwork on a page size in CorelDraw or other software program that matches the size of the piece that is to be lasered. Compensating for beveled edges or placing an image in an exact location is easy when there is a one-for-one relationship between the material and the page size of the artwork. If this method works for you, set the Piece Size dimensions to match the page size you have set in your graphics software.

On the other hand, many users do not want to change the Piece Size dimensions every time they print something new. They prefer to use a page size that matches the table size (16" x 12" for example) and place their artwork into the upper left corner of the page.

Both methods are effective and it is a matter of personal preference which method is used.

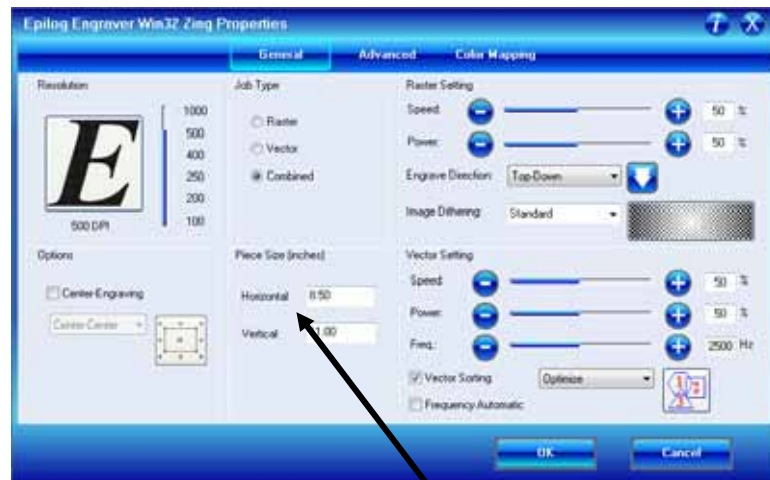


Set the *Piece Size* in the driver to match the page size from your Corel file.

# Section 7: Using the Epilog Dashboard




## *Engrave Direction*

This feature applies to Raster engraving only and allows you to engrave your project either from the top down, or the bottom up. This is very helpful for some materials like plastic or rubber stamps. In standard top-down engraving there can be a large amount of engraving debris generated. As the debris moves towards the exhaust plenum, some of it collects in the area that has just been engraved. Bottom-Up engraving prevents the debris from collecting in the freshly engraved spaces.

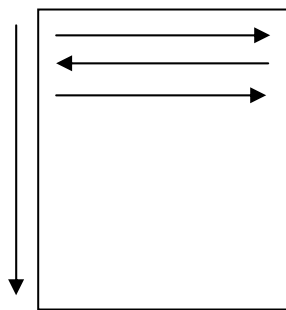

Top-down engraving starts from the top and works its way down.

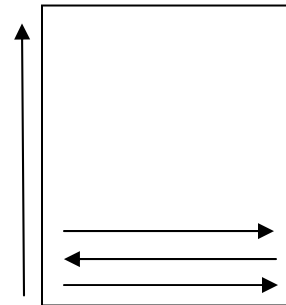


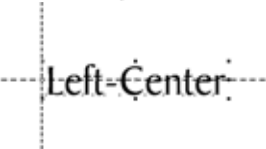


Bottom-Up engraving starts from the bottom and works its way up.

# Section 7: Using the Epilog Dashboard

## *Center Engraving*



The Center Engraving Option allows you to define the center of your artwork as the primary reference point (Home position) of your engraving or cutting. The Center Engraving Option has been designed to be used in conjunction with the Set Home feature of the laser. This differs from standard printing where the upper left corner of the page and the upper left corner of the laser table define your primary reference point. There are four options for centering your artwork:

1. 
2. 
3. 
4. 

# Section 7: Using the Epilog Dashboard

---

## Center-Center

It's important to think about setting up your artwork for Center-Center differently than you think about most jobs. Setup for most jobs that do not use the Center-Center feature begin with a determination of page size with the idea that the page size in your graphics package will match the actual size of your work piece. Additionally, the upper-left corner of the laser table is referenced to the upper-left corner of the page size you have set up in your graphics package. This makes it easy to visualize how your artwork will look on the work piece when it is finished. Think of this method as the "Upper-left justified" method.

When using Center-Center, the overall size of your work piece and the upper-left corner reference point are not very important. Here, the important starting points are the size of your artwork and the available space for it on your work piece. With Center-Center, you're interested in positioning the center of your artwork to a specific point on your work piece, no matter where your work piece is on the laser table. When using Center-Center you can place your artwork on almost any size of page and almost anywhere on that page. The detailed examples on the next few pages show how easy it is to think differently about Center-Center jobs.

As you read these instructions you will find that there are four easy steps to using Center-Center.

1. Measure the size of the area that you have available on your work piece.
2. In your software package, size your artwork so that it will fit into that available space.
3. Move your carriage by hand (using the red dot pointer as your visual indicator) to locate the center of your work piece.
4. Print using the Center-Center option in the Dashboard.



***Words of caution:***

Whatever size page you use in your graphics package should also be used when setting the Page Size in the Dashboard.

## Section 7: Using the Epilog Dashboard


---

There are some limits to the maximum size page you can use and the placement of your artwork on the page. If you have a mismatch with your artwork placement and your page size you will see a “**Position Error**” on the keyboard at the laser. You will need to adjust your page size and/or artwork placement and print the job over again if this happens.

5. If your page size in your graphics program is gigantic in relation to your artwork size, you may need to reduce the size of your page. There is no formula for what page size will not work, but normally the only time a job will not print is if the page size is way out of proportion to your image size.
6. Also, don't place your artwork too close to the lower-right corner of your graphics page. If your artwork is too close to the lower-right edge of your page – and the page size is too big – you may need to adjust where you place your artwork.

The Center-Center concept is best illustrated with an example:


**Example #1:** Let's say a customer brings you an odd shaped piece that already has artwork on it and he wants to have a name engraved to finish the piece. Because of the shape of the piece, the location of the engraved name is not easily defined by using traditional X-Y coordinates.

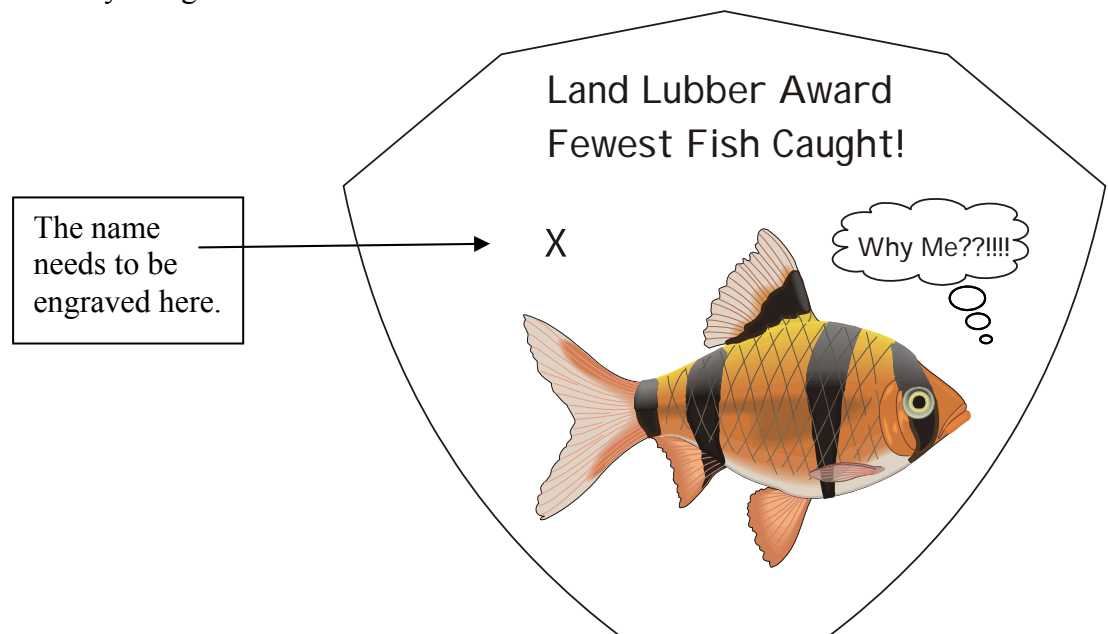

# Section 7: Using the Epilog Dashboard

---

1. To make engraving the name simple, use the Center-Center feature in the driver to quickly and accurately place a name

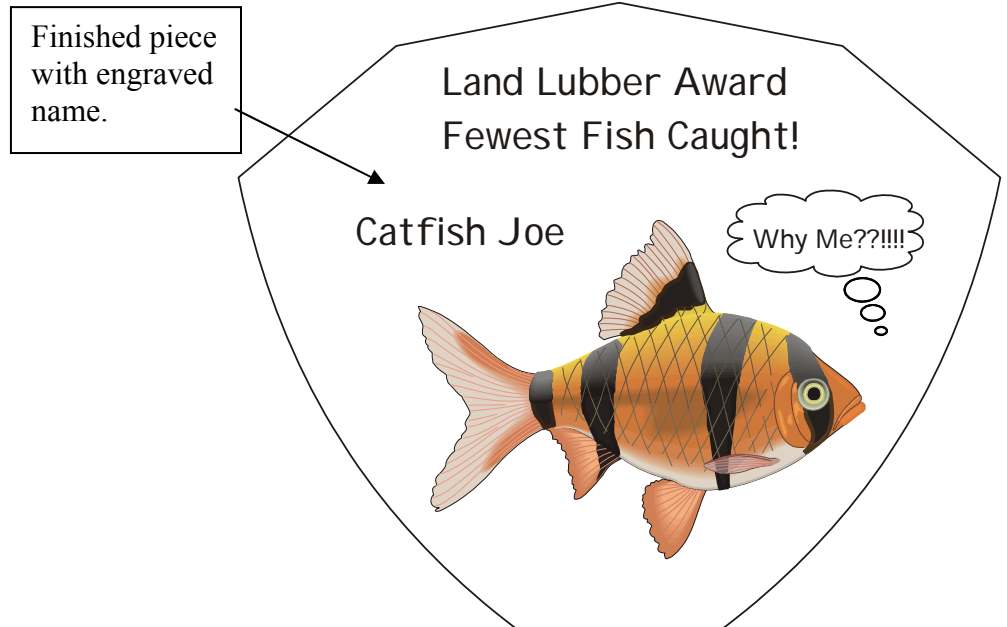

2. To set up your artwork, first measure how much engraving space is available on the work piece.

- a) Measure the area (defined by the box) so you know how much area is available for engraving. In our example the box measures 2 inches x .4 inches (51 mm x 10 mm).



- b) Don't worry about the size of the whole piece. It's not as important for Center-Center work.

# Section 7: Using the Epilog Dashboard

---

3. Open a page in Corel. The page size is not very important for using the Center-Center feature, so the page can be almost any size.



**Note:** If you are using a large page size, place your artwork towards the upper left corner of the page. In this example we're going to use a small page that is 4" x 4" (102 x 102 mm).



4. Create your artwork so that it is sized to fit into the available engraving area. In this example, we sized the text to fit within the available engraving area. 18 point text fits nicely into our box. Notice that the exact location of where you place the artwork is not important. At this point your artwork is ready.

**Hint:** Remove the box, or print *Selected Only* when you print to the laser. The box is used only to define the available engraving area and you do not want to print it with the text.


After your artwork is ready, the next step is to set up the laser before printing.

Place the work piece in the machine and activate the Red Dot Pointer. We want to set a new Home position by moving the carriage by hand so the Red Dot Pointer is at the center of where you want to engrave. To move the carriage by hand and set a new Home position, use the following instructions referring to the control panel shown below.



## Section 7: Using the Epilog Dashboard

---

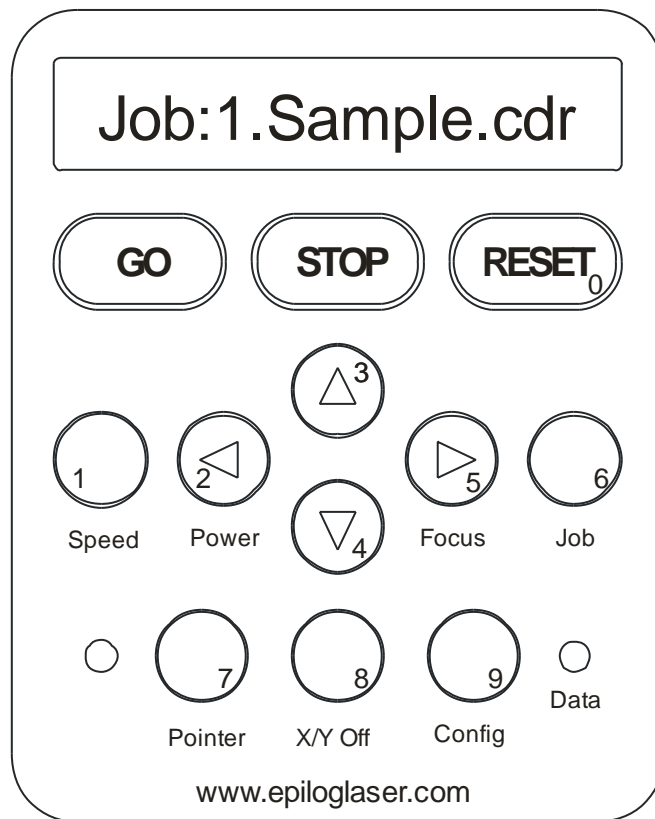

1. Press the ***XY OFF*** key on the keyboard of the laser system
2. Move the carriage by hand so that the Red Dot Pointer is at the center of the available engraving area.
3. Once the red dot is where you want it, press the ***GO*** key. This is now your new temporary Home position.
4. Press the ***RESET*** key.

The machine is now ready. To set the proper print parameters use the following steps:

1. From CorelDraw select **File | Print** to prepare the job for printing.
2. Select **Preferences** to establish the laser parameters.
3. Click on the **Center-Center** selection and then set all other laser parameters as you normally would.
4. Make sure to set the page size in the driver to match the page size in Corel.
5. Print the job to the laser.


## Section 7: Using the Epilog Dashboard

---

Additional information about using the Center-Center feature:

The Center-Center feature is designed to be used in conjunction with the Set Home feature of the laser system. If you do not use the Set Home feature to create a new Home Position at the machine, the Center-Center feature will produce a “Position Error” at the keyboard when you attempt to run the job.

When a Center-Center job has been sent to the laser, the Keyboard will indicate that it is a Center-Center job by displaying an asterisk (\*) at the end of the job name as it is displayed on the LCD.

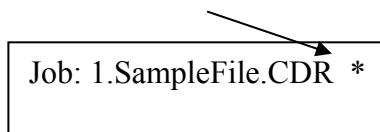

Where you place your work in the machine is not very important when using the Center-Center feature. Your new Home position defines where the engraving will take place, but you can get a “Position Error” if your artwork is going to go outside of your available work space.

Where you place your artwork on the Corel page is not too important. The size of your graphic just has to be sized so that it fits within the area available for engraving on your work piece.


# Section 7: Using the Epilog Dashboard

---

**Example #2:** Laser engraveable pens:


The Center-Center feature makes locating the name on a laser engraveable pen very easy to do.

1. First, measure the available engraving area on the barrel of the pen. For our example the engraving area is 2" x .375" (49 x 9.5 mm).

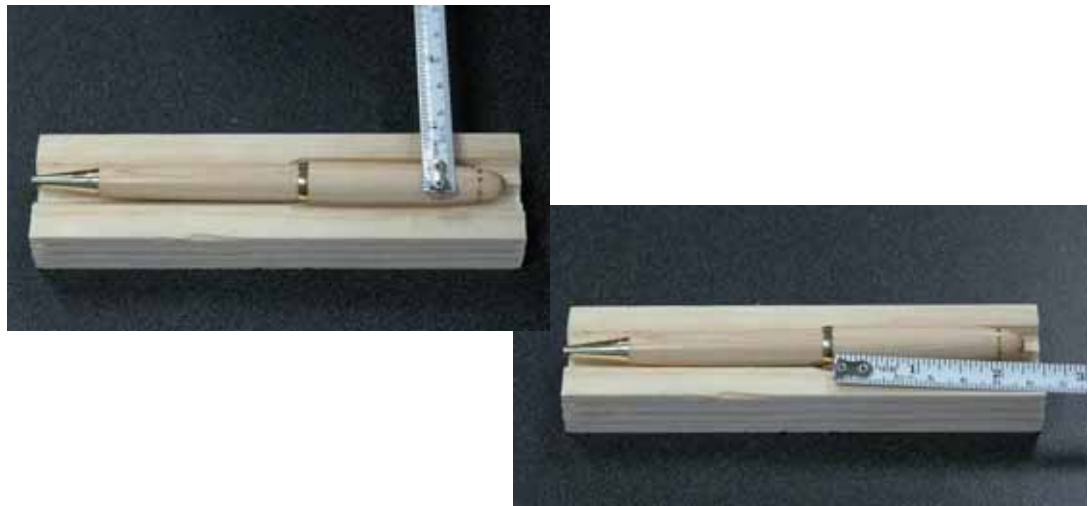

2. In Corel, create an area that is the same size as the available engraving area on the pen. There are several different ways that you can establish the engraving area in Corel:
  - a) draw a box to represent the engraving area
  - b) create a page that matches the engraving area
  - c) use guidelines to represent the engraving area– this is shown in our example.

3. Size the text or image so that it fits nicely within the engraving area.

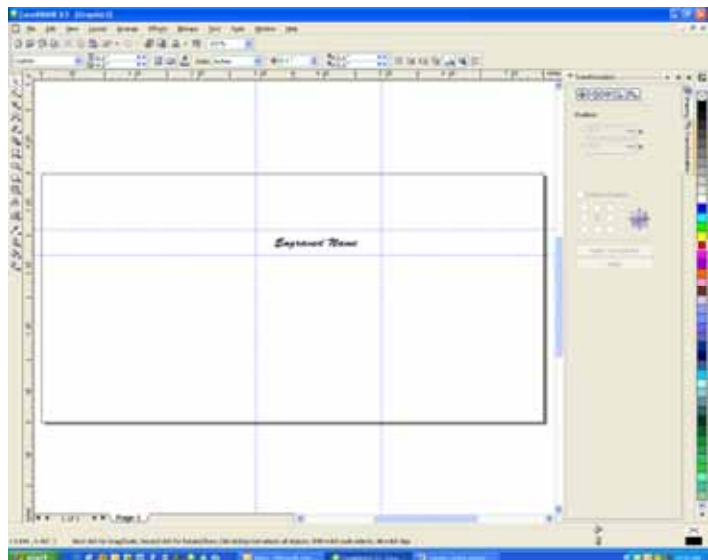

## Section 7: Using the Epilog Dashboard

---


4. Place the work piece in the machine and activate the Red Dot Pointer. We want to set a new Home position by moving the carriage by hand so the Red Dot Pointer is at the center of where you want to engrave. To move the carriage by hand and set a new Home position, use the following instructions:
  - a) Press the ***XY OFF*** key on the keyboard of the laser system
  - b) Move the carriage by hand so that the Red Dot Pointer is at the center of the available engraving area.
  - c) Once the red dot is where you want it, press the ***GO*** key. This is now your new temporary Home position.
  - d) Press the ***RESET*** key.



Position the Red Dot over the center of the area to be engraved.

The machine is now ready.

5. Print using the Center-Center option in the Dashboard.

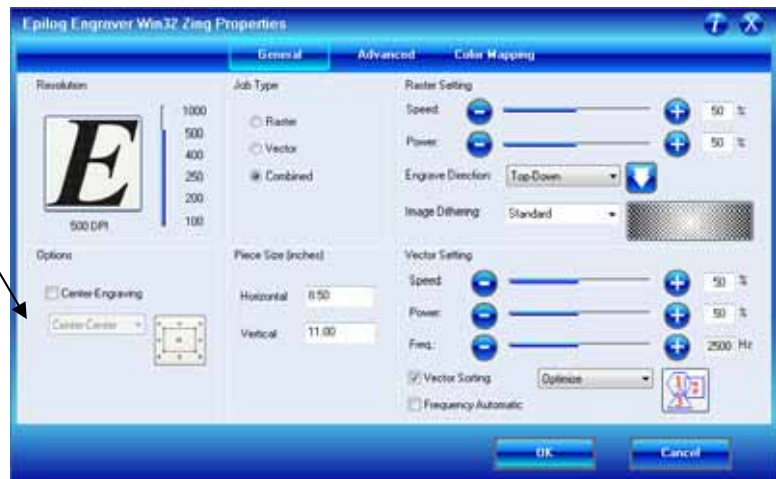

# Section 7: Using the Epilog Dashboard

---

## Left-Center or Top-Center

Left-Center and Top-Center are used when you want to use a different starting reference point than the center of the object to start your engraving. These two options are most commonly used in situations when you can easily identify the location in one axis.

Left-Center uses the left and center location as its starting reference point.



Top-Center uses the top and center location of the object as its starting reference point.



In the example below we use both the Left-Center and the Top-Center features to accurately mark text to the right and bottom of a pre-drilled hole. Being able to move the carriage by hand and use the center-left and center-top features saved us the trouble of trying to find an accurate X-Y coordinate for the pre-drilled hole.




# Section 7: Using the Epilog Dashboard

---

## Page-Center

The use of Page-Center option is a difficult concept to explain, but it's a feature that professional engravers are eager to use. The best way to explain it is to first compare it to one of the other centering options – Center-Center engraving. Page-Center engraving is used most often when engraving text on an arc. Medallions are a good example. Many people want to engrave text – different names, for instance – across the top of the medallion. The difficulty of doing this is that each name is a different length, which means that the center of each name is in a different location. Many users want to use the Center-Center option, but they quickly find that each name is in a slightly different position on the arc. The following diagram shows that if you use Center-Center engraving the center of each name is at a different location (the center of the names is indicated by the star in the diagram).

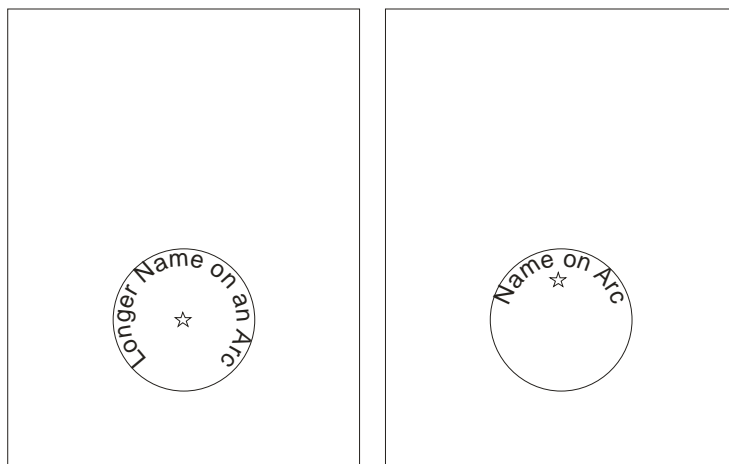


The problem of using Center-Center is that you have to figure out the precise location of each star (Center-Center of each name) to get the name on the arc correctly. Obviously, this would be difficult to do.

So, instead of using the center of our artwork as our reference point, we'll use the center of our page as our reference point. We'll find that using the exact same artwork we're able to perfectly position the names on the arc. In Page-Center mode we set up a page size that corresponds to our medallion size, and then all we have to do is use our red dot pointer to find the center of the medallion and set this as our new Home position.

## Section 7: Using the Epilog Dashboard

---

For the following example we used a three inch (76 mm) page size to match the three inch medallion size. Use your red dot pointer to find the center of the medallion and then print to a 3" x 3" (76 x 76 mm) page using the Page-Center mode. You'll find that every name will be precisely placed on the arc because the center (indicated by the star) has not changed position.

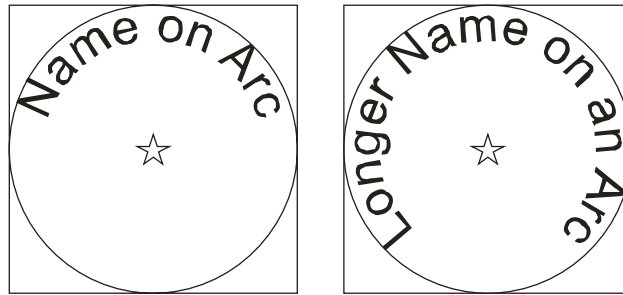


The important thing to remember is that for a Page-Center project you want to use the center of the page as your reference point (Page-Center mode). In most other centering applications you use the center of the artwork as your reference point (Center-Center mode).

Once users understand how to use Page-Center mode, they are still faced with finding the exact center of the medallion (or circle) with the red dot pointer. Admittedly, this can be difficult to do, especially if the circle is large. Most users create a simple template to place over the medallion to find the center. To create a template, measure the diameter of the medallion you are engraving. In your graphics package, create a circle of the same diameter and place a crosshair or an "x" in the middle of the circle. Use raster mode to mark the crosshair or "x" and vector mode to cut out the circle. Place this template on top of the medallion and move your red dot pointer until it is at the intersection of the crosshair or "x". Set this as your Home position using the front keyboard on the machine and then Print using Page-Center mode. You can use almost anything to make a simple template. Many users use scrap plastic and in addition to the "x" they engrave the size of the circle on it so they can easily keep track of the different sizes of each template.

To review:


1. Make sure your page size is the same as your medallion (or circle) size.
2. Create a template to find the center of your circle. Place the template on top of your medallion and use the red dot pointer to pinpoint the "x".
3. Set a new Home position using the "Set Home" button on the keyboard.
4. Print using the Page-Center option in the driver.

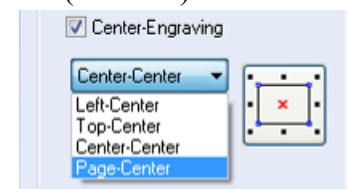

# Section 7: Using the Epilog Dashboard

---

## *Raster Settings*

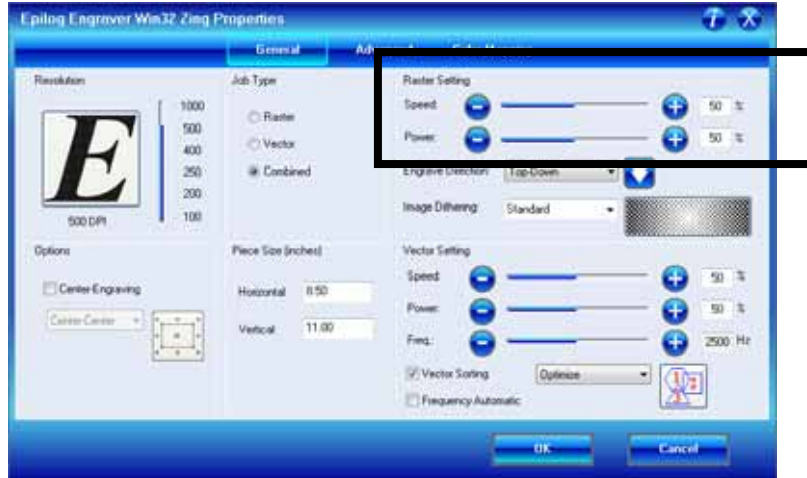

### Speed

The Speed setting determines the travel speed of the carriage in Raster mode and is adjustable in 1% increments from 1 to 100%. The slower the speed, the deeper the engraving. Speed settings are heavily dependent on the hardness and the thickness of the material being engraved, with harder materials requiring slower speeds for deeper engraving. Slower speed settings will produce greater depth of engraving. Please refer to the *Speed & Power Recommendations* section of this manual.



**An important note:** Speed and Power settings can sometimes be confusing because not all materials that *can* be marked at the highest speeds and powers *should* be marked at the highest speed or power. Many users feel that if a mark *can* be made at high speed, it's just a matter of adjusting the power to produce an acceptable mark. Usually, this is the case, but unfortunately, for some difficult materials it doesn't always work. For some materials, the length of time the laser reacts with the material is much more important to producing a good mark than the raw speed of the system or the amount of laser power that is output by the laser.

The interaction of the laser with different materials is a complex process, and this is especially true for some materials that are actually two different materials that have been bonded together. Since the laser interacts differently with each layer of material (and sometimes even the bonding agent), you may be better off slowing the machine down to give the laser time to properly interact with the different layers in the material.



# Section 7: Using the Epilog Dashboard

---

If you have a multi-layered material that you can mark easily, but not well, at high speeds, try lowering the speed to see if that produces a better mark. If you're able to produce a better mark, but it's overpowered, lower the power also.



## Power

The Power setting determines the amount of laser energy that is delivered to the piece being cut and is adjustable in 1% increments from 1 to 100%. The higher the power, the deeper the engraving. Please refer to the *Speed & Power Recommendations* section of this manual.

## *Dithering*

Dithering defines how the dot patterns will be engraved in raster images that contain grayscales, blends, or color. The Dashboard offers six different dithering patterns to enhance your engraving projects. The default mode is Standard. This mode can be used for all images including photographs. Dithering is used only for Raster engraving and has no affect on vector cut lines.



The dropdown list of dithering patterns is easier to think about if you separate the six options into two categories that we will refer to as Clipart and Photograph:

**Clipart Modes** – **Standard**, **Brighten** and **Low Res** modes are typically used for clipart images or anything that has been created using a software application like Corel. Standard mode is the default mode and is by far the most commonly used. It produces a very structured pattern to the dot patterns being engraved. Brighten and Low Res decrease the number of dots in the engraving pattern and can be used effectively to remove the washed out appearance of some images (including photographs).

## Section 7: Using the Epilog Dashboard

---

**Photograph Modes** – **Floyd Steinberg**, **Jarvis** and **Stucki** modes are designed to modify an image by replacing the very structured dot patterns with a more random dot pattern. Engraving in one of these modes can make a photograph engraved on marble or anodized aluminum look more appealing than using an unmodified image. These modes can also be used for special effects of clipart images.

Experiment with the different dithering patterns to determine which effect is most pleasing. It is not mandatory that you use the clipart modes with only clipart images or photograph modes with all photographs. Many users prefer one of the photograph modes for many clipart images, and one of the clipart modes for photographs. The choice is entirely up to you!

We have included some sample photographs on the Epilog driver disk for you to experiment with. Use these photographs to engrave on different materials using the different dithering options so you can get a feel for how each dithering pattern affects the image and the material.

## Section 7: Using the Epilog Dashboard

---

***What is Dithering?*** - The best way to show dithering is with an example. In the example below, we engraved the exact same photo in Standard mode and Stucki mode. Both photos were engraved at 300 DPI. As you can see, the photos look dramatically different. As you can also see, the Standard mode shows a very structured pattern, while the Stucki pattern shows a much more random pattern that is much more pleasing to the eye.



250 DPI using Standard mode



250 DPI using Stucki mode



250 DPI using Standard mode



250 DPI using Stucki mode

# Section 7: Using the Epilog Dashboard

---

## **Clipart Modes:**

**Standard** - This mode is the default mode and will be used for most engraving jobs that include text and clipart at 500 DPI.

**Brighten** – Many users find this mode good for engraving photographs onto wood or marble at 500 DPI.

**Low Res** - Adds an artistic half-tone type look to the engraving.

## **Photograph Modes:**

**Floyd-Steinberg** – Produces an almost wave-like pattern to an image. This works well for some photos containing a great deal of detail. Photos with more monotone swatches of color may not be as pleasing as Jarvis or Stucki modes.

**Jarvis** – Many users find this mode good for engraving photographs at 250 DPI. This mode produces a very nice looking pattern on almost all photos.

**Stucki** - This mode produces results that are only marginally different than the Jarvis dithering pattern. It is also very good for engraving photographs at 250 DPI. The differences between Jarvis and Stucki are very subtle.

Dithering is a great way to enhance your engraved products, but it can be frustrating sometimes because the look that is achieved will be different from one material to the next. A graphic image that looks good on wood may not look as good on plastic. Give yourself some time to experiment with the different dithering patterns. It's easy to do and once you have a feel for it, you will be able to use it with confidence!

# Section 7: Using the Epilog Dashboard

---

## *Vector Settings*



### Speed



The Speed setting determines the travel speed of the carriage in Vector cutting mode and is adjustable in 1% increments from 1 to 100%. The slower the speed, the deeper the cut. Most cutting applications require relatively slow speed settings, and the speed is heavily dependent on the hardness and the thickness of the material being cut. Slower speed settings will also produce better edge quality. Please refer to the *Speed & Power Recommendations* section of this manual. High speeds are provided for draft mode only and are not intended for production applications.

### Power



The Power setting determines the amount of laser energy that is delivered to the piece being cut and is adjustable in 1% increments from 1 to 100%. The higher the power, the deeper the cut. The amount of power necessary to cut completely through a given material is also heavily dependent on the hardness and the thickness of the material. Please refer to the *Speed & Power Recommendations* section of this manual.


# Section 7: Using the Epilog Dashboard

---

## Frequency

Frequency is the number of laser pulses that the laser fires per inch of travel and is set in the dashboard and can be adjusted from 10 to 5000 pulses per inch. A lower frequency number will have the effect of less heat applied to the material being cut. Lower frequency rates are helpful for products like wood where charring is evident at higher frequencies. High frequencies are useful on material like acrylic where a large amount of heat is desirable to melt, or “flame polish”, the edges.

Very low frequencies will produce a perforation, as opposed to a continuous cut.

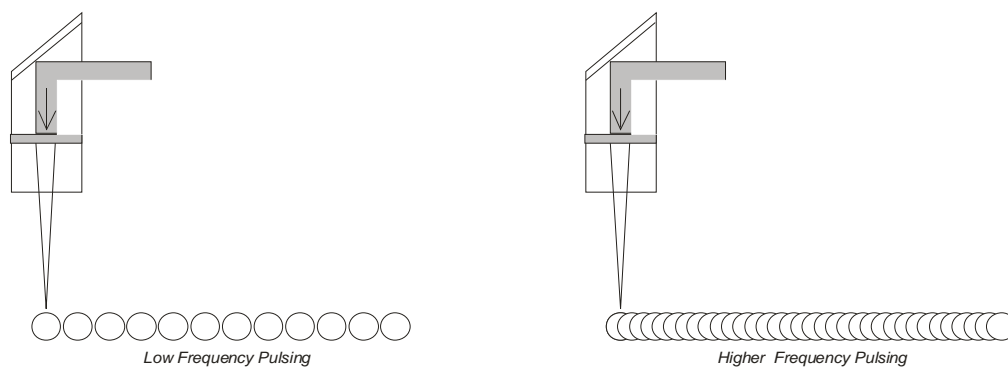

## Frequency Automatic

The laser frequency, or “pulsing”, can be manually set or set to **Frequency Automatic**. When **Frequency Automatic** has a checkmark, the laser will automatically adjust the pulsing of the laser to a value of 5000. If **Frequency Automatic** is not checked you can control the pulsing of the laser in the **Frequency** box. Suggested frequencies are included in the tables showing suggested Speed and Power settings. The frequency range is 1 to 5000. Setting the frequency at a low value (50 to 100) will produce a perforation. Midrange values are used to reduce over burn when cutting, and high values are often used when more heat is desired to melt the sides when cutting acrylic.

# Section 7: Using the Epilog Dashboard

---

## Vector Sorting



A checkmark in the vector sorting box will order the sequence of vector cuts. If sorting is enabled, you have two choices of how the vector lines will be sorted: Optimize and Inside-Out. In Optimize mode, vectors will be cut in the most efficient manner, and will generally vector the next closest line to the one just finished. This is by far the most preferred method as it saves the most time, is the most predictable and will create a continuous line path out lines that look connected, but are actually discrete line segments in the artwork. The continuous path of discrete lines is most often found in AutoCAD or other CAD programs.

Inside-Out mode will vector from the inside object first to the outside objects last. As an example, if you have a small circle surrounded by a large circle, the small circle will cut first. If sorting is not checked, the vectors will cut in the order in which they are presented, which with most software applications will mean in the order they were drawn.

# Section 7: Using the Epilog Dashboard

---

## *Advanced Tab*

The Advanced tab provides more options for controlling your laser system. These advanced functions are an extension of the functions found on the General tab.



## *Raster Type*

### Basic

This is the default setting and is by far the most commonly used setting for raster engraving. This setting is used to raster engrave clipart, photographs, text and the vast majority of images that people associate with laser engraving. Below is a brief explanation of how artwork is interpreted and produced with our laser system.

In Basic raster engraving mode the laser fires whenever there is a dot. *Every time the laser is fired in Basic raster engraving mode, the laser output power is always the same.*



## Section 7: Using the Epilog Dashboard

---

In Basic mode we interpret dots in a couple of different ways depending on the type of artwork that is being used:

1. If the image being engraved is black and white, the laser fires wherever there is black.
2. If the image is a grayscale image (photograph or clipart) or a color, the laser fires wherever there is a black dot. Grayscale is defined in percentages of dot density (also known as dot spacing). A 10% gray has one black dot for every ten available dot spaces and produces an engraving pattern with widely spaced dots. A 50% gray has 5 black dots for every ten available spaces and produces a pattern with a higher dot density. Colors are interpreted as shades of gray, where darker colors (red for instance) correspond to darker shades of gray and lighter colors (yellow) correspond to lighter shades of gray. A box with a 10% fill (left side in diagram below) and a box with a 50% fill (right side) are shown:



When you place different shades of gray next to each other it produces a rich and complex look that makes laser engraving so attractive. You can see this in many of the samples we produce. The lighter shades of gray tend to be better for producing nice images. Many users will place a 10% fill next to a 30% or 40% fill. Gray shades over about 50% or 60% are so dense that they start to run together and begin to look like the color black is being used.

## Section 7: Using the Epilog Dashboard

---

The image at right will engrave very nicely on acrylic, coated metals or plastics, and will create very nice contrast. This will give the bird better definition and character than if it were just black.

The filled areas are 10% and 50%, with a black outline around most areas.



You will find that the shaded artwork above will usually produce a much more attractive image than the same artwork that is just black and white (like the image on the right).



The images on this page are available in Corel 11 format as Pelican1.cdr and Pelican2.cdr, and as bitmaps (Pelican1.bmp and Pelican2.bmp) on the Drivers and Documentation disk that came in the accessories disk with your machine.

# Section 7: Using the Epilog Dashboard

---

## 3D Engraving



Earlier in the manual we discussed dot patterns and how those patterns are used to create raster images. 3D mode looks at the dots and the dot patterns in a very different way than Basic raster engraving mode, especially where it concerns either color, or grayscale images.

In 3D mode, instead of looking at the dots and determining where to fire the laser based on the dot spacing, we look at the dots and determine how much laser power (wattage) to apply to each dot, and that's the big difference between Basic raster engraving mode and 3D. In Basic raster engraving mode, every dot is fired at the same laser output (wattage). In 3D mode we have the ability to adjust the laser output for every dot.


An additional aspect of 3D mode is that, unlike Basic mode, the laser fires continuously between most dots – even if it is engraving from a 10% fill pattern to a 30% fill pattern. This is by design so there is a gradual change in the depth of engraving when the artwork transitions from one shade of gray to another. The only time that this is not true is when the artwork changes from 100% black to 100% white (or visa versa). Because we adjust the way the laser fires in 3D mode we also have to adjust the artwork that is used to create good 3D images, and this is where 3D engraving gets difficult.

In 3D mode, since we're going to vary the laser power output for every dot, we want artwork that will produce more than one level of gray. We want artwork that gradually blends from one shade of gray to another. Engraving either of the two gray boxes on the previous page will not produce a 3D affect because each

## Section 7: Using the Epilog Dashboard

---

box is only a single shade of gray. You need an object that looks something like the circle below to create a 3D image.

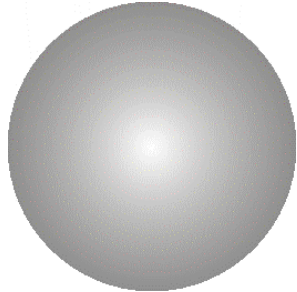

Engraving this circle in 3D mode will create a dome with center being the high point (because it's a light shade of gray) and the outside edge being deep (because it's a darker shade of gray).

This explanation describes the most basic functions of 3D engraving and some of the theory behind it. What it doesn't describe is the difficulty that most users will have in creating acceptable 3D artwork. Creating a 3D image that will look good after engraving can be very difficult to achieve because most software packages do not provide the necessary tools to take complex objects and blend them in more than one direction from dark to light (or, visa versa). There are some 3D graphics software packages available that will create 3D images, but they are very expensive. Ask your Epilog representative if you would like more information on these software packages.

## Section 7: Using the Epilog Dashboard

---



3D engraving usually requires more than one pass to get the depth of engraving necessary to produce the dimensional relief that makes 3D engraving look good. Many users will engrave an image using two or three passes to get the depth they are looking for. As long as you do not move the piece that is being engraved, the multiple passes will align perfectly with the first pass. The following images show examples of a simple piece of 3D artwork.

In this sample, the black background would be engraved away. Using this technique, the leaf stands up away from the background, with the edges of the leaf being the highest points and the stems being engraved the deepest.



This image would engrave deepest around the edges of the leaf and less deep in the body.



These images are available in Corel 11 format as Leaf1.cdr and Leaf2.cdr, and as bitmaps (Leaf1.bmp and Leaf2.bmp) on the Drivers and Documentation disk that came in the accessories disk with your machine.

# Section 7: Using the Epilog Dashboard

## Stamp

The stamp option automatically converts your artwork into to a format that will produce a laser engraved stamp. This function automatically inverts your artwork so that the background is engraved away while your text and graphic images are left standing. It also puts a supporting shoulder around every component of the artwork.



Because of the unique nature of Stamp mode, we have devoted a sub-section on all aspects of stamp making and printing. Please see *Material Engraving Techniques - Engraving Rubber Stamps* section of this manual for detailed instructions on producing and printing stamps.



Select Stamp for all Stamp jobs.

Stamp Settings become active after selecting Stamp mode. These settings can be used to change some of the Stamp variables.

Please see the *Material Engraving Techniques - Engraving Rubber Stamps* section later in this manual for detailed instructions on producing and printing stamps.

# Section 7: Using the Epilog Dashboard

## *Configurations*



The “Configurations” feature is a comprehensive data management tool that is used to save all of your Dashboard settings for individual jobs. Saving the Dashboard settings as a database file allows you to retrieve the job parameters at a later time. This saves you the trouble of trying to remember what speed and power and other settings you used on a job you did three months ago. All of your settings can all be stored as a permanent record!



The columns in the configurations settings follow Windows protocol and can be sized to suit your needs. There are nine columns that can be viewed by using the slider bar.

# Section 7: Using the Epilog Dashboard


To establish a configuration file, first set all of the desired settings (Speed, Power, Piece Size, Color Mapping values, etc. for a particular job.



To save the settings you have established, go to the advanced tab and click on **Save**.




# Section 7: Using the Epilog Dashboard

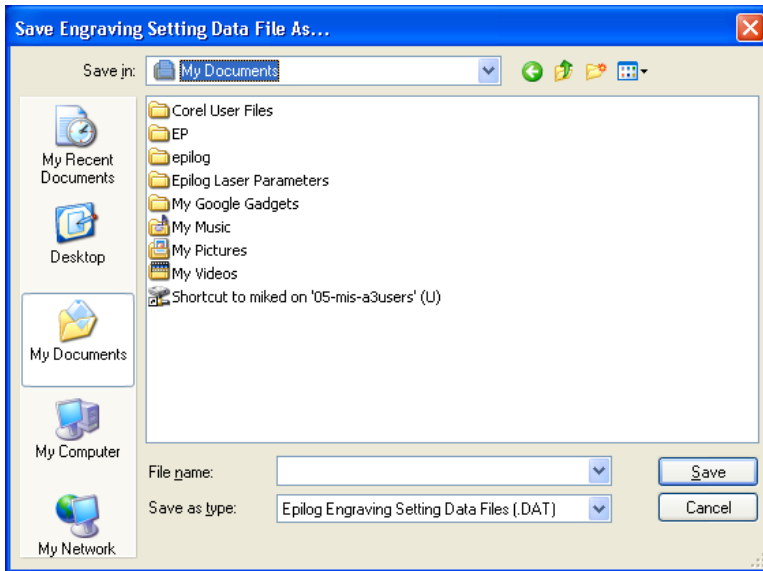

The Dashboard uses standard Windows protocol to save the configuration files.

When you installed the Epilog Dashboard there was a dedicated configurations folder created where you will need to save the configurations.

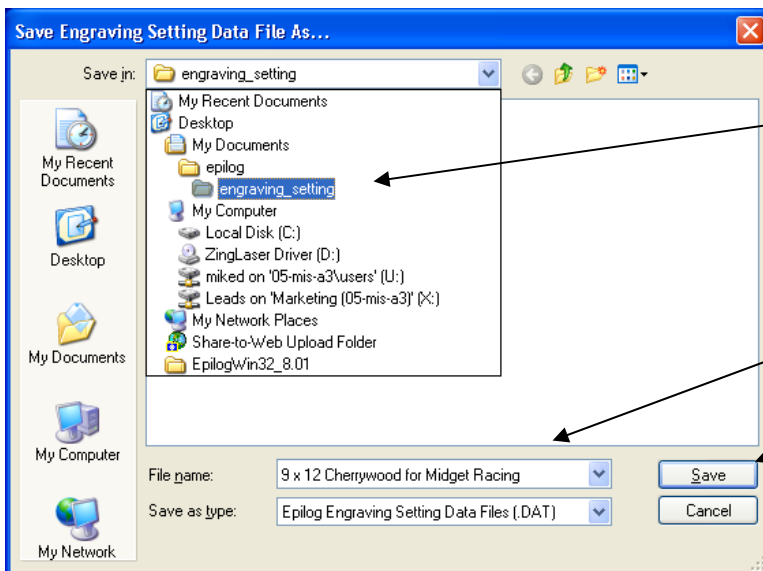

The path for the Configurations folder is shown here:  
My Documents  
/Epilog/engraving\_setting.

Give your file a name and then click on Save. You now have a custom Configuration file that can be used the next time you need to run this job or material.




**HINT!** Many users find it helpful to save the configurations with a name that associates the configurations with one of two things:

1. The customer. For example, Jones Pharmacy 04 Awards Banquet.dat
2. The material size and type. For example, 9 x 12 Wood.dat

# Section 7: Using the Epilog Dashboard


## Notes on Saving Configuration Settings:

If you would like to expand your folder options it is best to make changes from Windows Explorer (My Computer). You can create as many folders under the “engraving\_setting” folder as you wish and structure your saved configuration files in a way that best suits your needs.

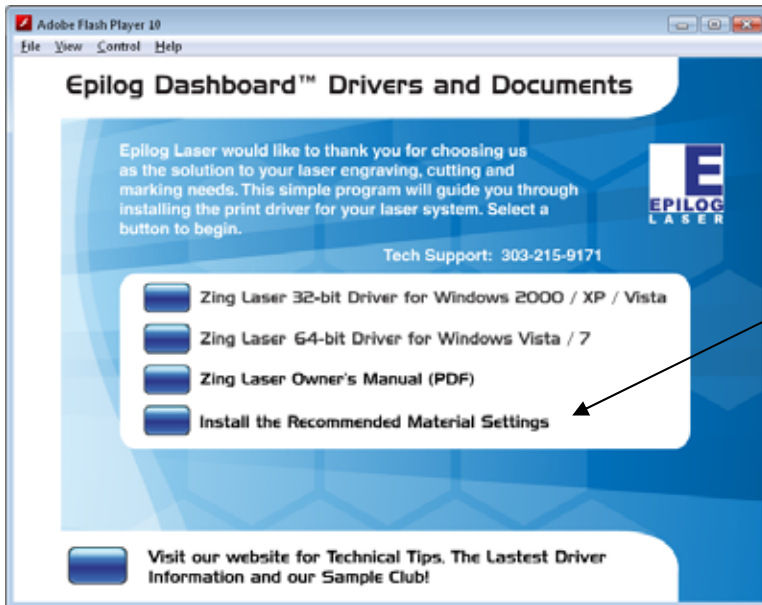

Epilog provides a database of configuration files on the Epilog Dashboard Drivers and Documents disk that you used to load the Dashboard onto your computer.


These files can be used and organized just like the configuration files you create yourself.

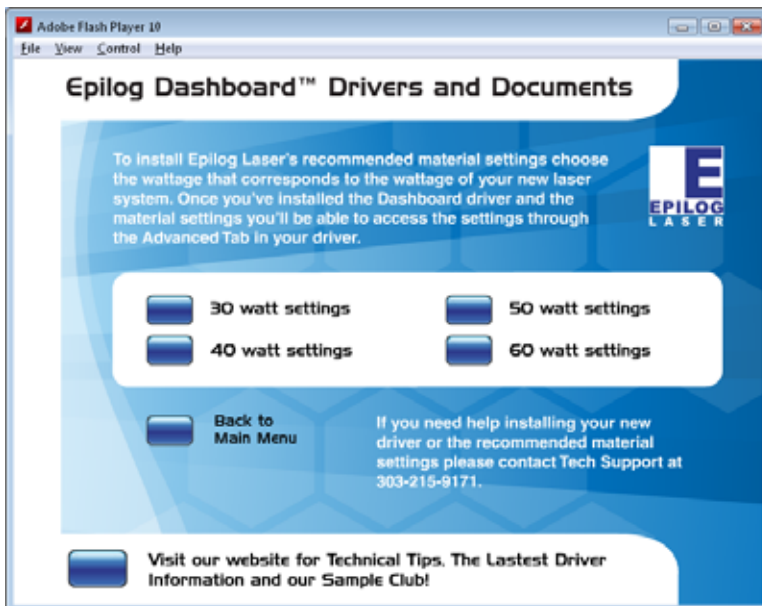

After clicking the Install button, you can select the files that match the wattage of your laser.

# Section 7: Using the Epilog Dashboard

## Loading Configuration Files:

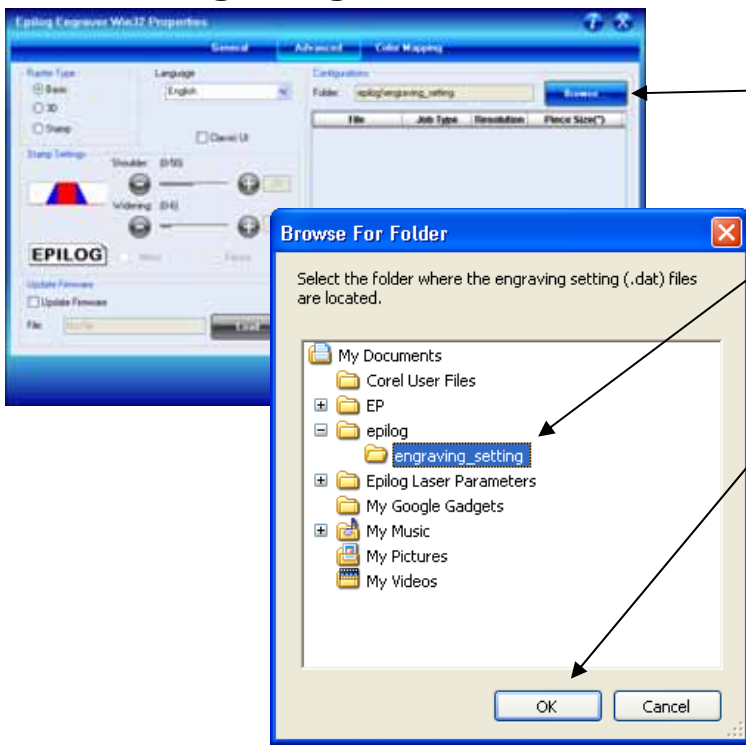

To load a configuration file, click on the Browse... button.

The Browse for Folder window will open. Select the epilog/engraving\_setting folder.

Click Okay.

After selecting your folder all of the configuration files will now show in the Dashboard.

*Note* – The individual files will not appear in the Browse for Folder window. They only appear in the Configurations window



Highlight the configuration file that you want to use. Then, click on the Load button.

You **MUST** click on the Load button. Double clicking on the selected file will not load the settings.

# Section 7: Using the Epilog Dashboard

---



Click on the General tab to see the settings that the loaded file brings up.

## Section 7: Using the Epilog Dashboard

---

### *Color Mapping Tab*



The Color Mapping feature is an advanced feature that must be checked to activate. While Color mapping is a very powerful tool, most users use it for two main reasons:

1. Using color so that multiple Speed and Power setting can be used in a single print job. Multiple speed and power settings are most commonly used in Vector mode when one color is used for marking and another color is used for cutting.
2. Using different colors allows users the ability to sequence the order that objects will be cut or engraved.

Color Mapping accomplishes these two tasks by assigning different attributes to the different colors in your artwork. The functions that can be controlled by color are: Speed, Power, Frequency (vector cutting only), Focus, Raster, and Vector.







Color Mapping can be used in Raster, Vector, or Combined modes. Color Mapping only works in Basic engraving mode. It has no affect in 3D or Stamp mode. To understand Color Mapping, we will create a couple of examples that show the common uses for Color Mapping, but first a quick note about the use of colors.

# Section 7: Using the Epilog Dashboard

---



**A Note About Colors!** It's best to use one of the six basic colors (red, green, blue, cyan, yellow, magenta) when color mapping, because the values in Color Mapping **MUST** match exactly the colors that are used in your graphics package. The RGB color scheme uses numbers to define all colors and the six basic colors have the following numerical definitions:

<u>Color</u>	<u>Red Color Value</u>	<u>Green Color Value</u>	<u>Blue Color Value</u>
Red 	255	0	0
Green 	0	255	0
Blue 	0	0	255
Cyan 	0	255	255
Yellow 	255	255	0
Magenta 	255	0	255

The six basic colors are easiest to use because they only use combinations of 255 and 0 (255 is the highest number value and 0 is the lowest in the RGB color scheme). Because all graphics packages use the six basic colors, this is easy to do.

Your drawing program may use a CMYK palette to define colors. The Epilog Color Map driver will automatically convert the six primary colors to RGB values. If you want to use a CMYK color other than the six primary colors, you will need to determine what the equivalent RGB color value is and convert that color manually.

The Epilog Dashboard loads the six primary colors as presets for your convenience. Any color can be added or deleted to meet your needs.

# Section 7: Using the Epilog Dashboard

---

Color Mapping allows you to control the following six laser functions for each color in the Map List:

**Color** – Select the color you want to use or modify.

**Speed** – Sets Raster speed and Vector speed for all objects of the color.

**Power** – Sets Raster power and Vector power for all objects of the color.

**Freq.** Frequency is a parameter that is only used on vector objects. It will have no effect on raster engraving. Color Mapping allows you to set different frequencies for different vector colors within a single job setup.

**Focus** – Each increment of one will change the table height by 0.0005 inch (0.0125 mm). A minus sign in front of the number, -.250 for example, will move the table up (closer to the X-beam) by 1/8 inch (approx 3 mm). Because the adjustment increments are so small it may be easier to think of the change as a two digit change being equal to 0.001 inch.


**Raster** – Colors that are set to “Yes” will raster engrave at the speed and power settings for that color. Colors that are set “No” will be prevented from raster engraving.

**Vector** - Colors that are set to “Yes” will vector cut at the speed and power settings for that color. Colors that are set “No” will be prevented from vector cutting.

# Section 7: Using the Epilog Dashboard

## *Using Color Mapping*

Setting up colors to be mapped is a very easy process. The color mapping tab is separated into three functions:

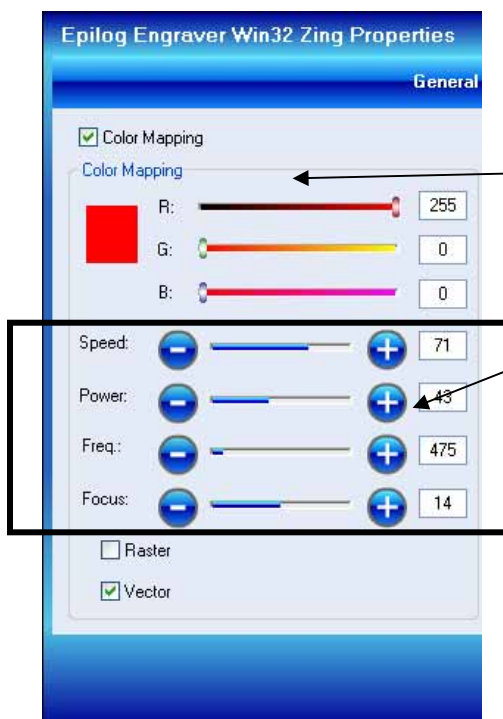

- 1) The left side of the Advanced tab is used for two purposes:
  - a. Creating new colors. Use the slider bars to create any RGB color.
  - b. Defining the values we want to set for the color that has been selected from the right side of this tab. Defining the values on the left side of the tab does not actually change the values. That is done with the buttons in the middle of the tab.

In this example we have defined the values for this color to be 71 for Speed, 43 for Power, 475 for Freq, Raster is unchecked, so it is turned off, Vector is checked, so it will be on.

Another way to think about the settings in this example is that the selected color will be a vector only job, running at 71% Speed, 43% Power, 2500 Freq. and Focus offset by 0.140 inches.



# Section 7: Using the Epilog Dashboard

Once the values have been defined on the left side of the tab, you will want to change them by pressing the Modify button.



Modify button.

After pressing the Modify button, the selected color values will be changed and displayed on the right side of the tab.

Color	Speed	Power	Freq.	Focus	Raster	Vector
Red	71%	47%	475	14	No	Yes
Green	50%	50%	2500	0	Yes	Yes
Blue	50%	50%	2500	0	Yes	Yes
Yellow	50%	50%	2500	0	Yes	Yes
Magenta	50%	50%	2500	0	Yes	Yes
Cyan	50%	50%	2500	0	Yes	Yes

The other buttons in the middle of the tab are defined here:



Add a custom color.

Delete a color.

Scroll buttons. These buttons move the selected color up or down in the table. This is important because Color Mapping always starts at the top color and works its way down. This is explained in more detail on the next pages.


# Section 7: Using the Epilog Dashboard

## *Vector Color Mapping*

Usually when using Color Mapping in Vector mode users want to both cut and mark a single piece of material in a single job setup. Since the cutting and marking processes have different speed and power requirements, this is a perfect job for Color Mapping. Wood and acrylic are common materials used with vector Color Mapping.

The following screen shows a simple architectural drawing. The drawing is set up so that when we use Color Mapping, we will assign one Speed and Power setting to first mark the window frames using the color green set at one Speed and Power, then cut all the way through our material to remove the window panes using the color red for a different speed and power.

The outside frame of the house will not be Color Mapped; however, it, and any other lines that might be in the drawing will be cut at the Speed and Power settings for Vector mode in the General Tab of the Dashboard.

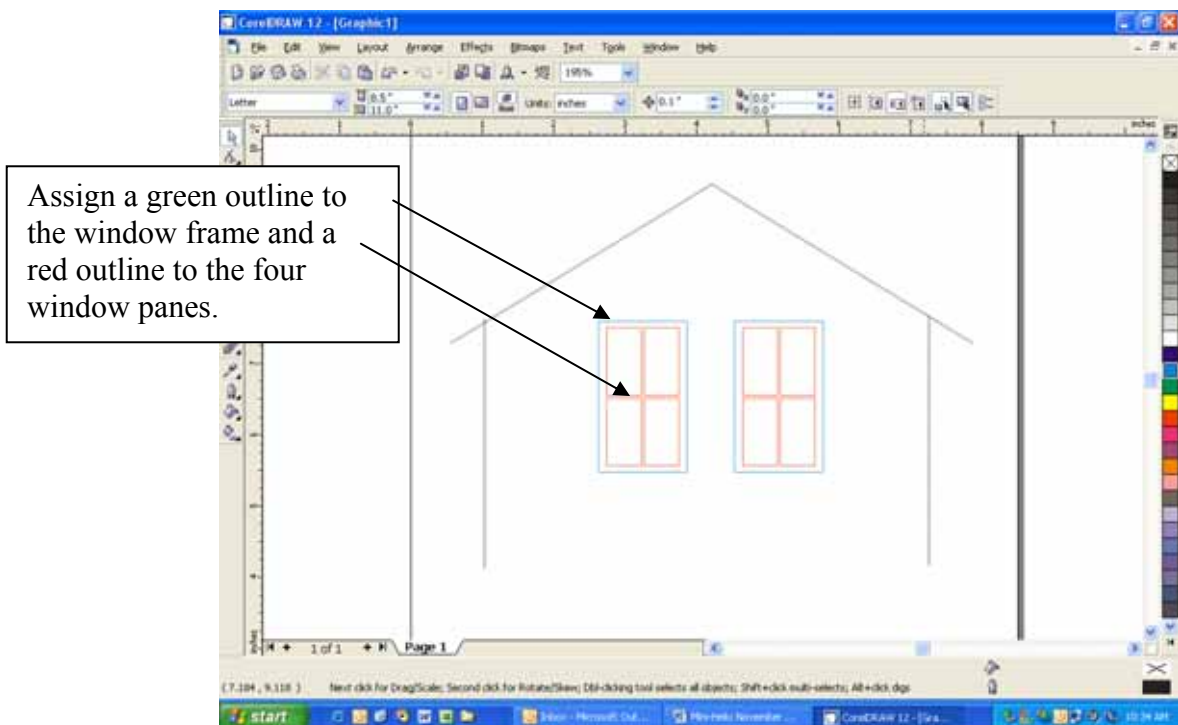

## Section 7: Using the Epilog Dashboard

---

Once your vector outlines are set up in your artwork, Select **File/Print** and go to the Color Mapping tab in the **Epilog** Dashboard.



Make sure Color Mapping is checked so we can set up our color mapping scheme.

In our example we want to mark the green window frames first, so green must be the first color at the top of the list. Normally the color green is the second color down in the list. In order to move it we just select it and use the Up cursor arrow to move it up one position.



**Note** – It's important to know that the values do not move with the colors. You must move the colors first, and then change the values.

We now have green at the top and red is the second color down. This is the order that the colors will be processed. You do not need to delete the other colors unless you want to. If there are no objects in your artwork that match the remaining colors, they will be ignored.


# Section 7: Using the Epilog Dashboard

We will set the green color at a higher speed and lower power than the red color. This will allow us to mark the green and cut the red. For illustration purposes we deleted the other colors so it will be easier to read the values we have set for the colors we are going to use.



**Color Mapping Sequence** - When color mapping is used, it *always* cuts in sequence starting from the top color in the Map List and working down. In our example red will cut first and green second.

Non-Mapped colors will be cut at the Speed and Power settings from the Vector Settings in the General tab. The image below shows that non-mapped colors will be cut at 50% Speed, 50% Power and 2500 Freq.

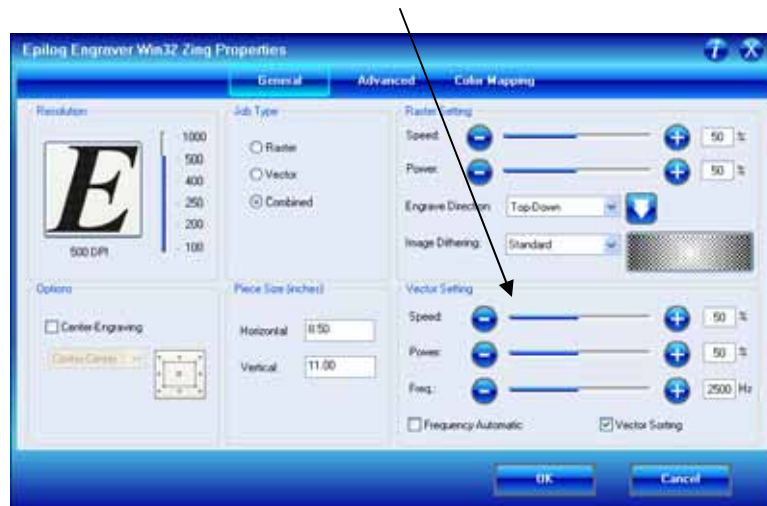


# Section 7: Using the Epilog Dashboard

## *Raster Color Mapping*

Raster Color Mapping usually has a different purpose than Vector Color Mapping although the process for setting up colors to be mapped is the same. In Raster Color Mapping mode most users want to reduce the amount of time it takes to engrave a job that uses most of the table but has very little actual engraving. Saving time is accomplished by setting the different colors to all engrave at the same speed and power.

In the following example we show a standard setup where Raster Color Mapping will reduce the time it takes to engrave the entire table (let's pretend we're engraving a large number of pens). In non-Color Mapping mode, the laser carriage would need to travel the full width of the table to engrave just one row of pens. This is wasteful because the laser beam is not firing most of the time that the carriage is moving. Raster Color Mapping will allow us to decrease the amount of time it takes to engrave a full bed of pens by engraving in columns instead of rows.

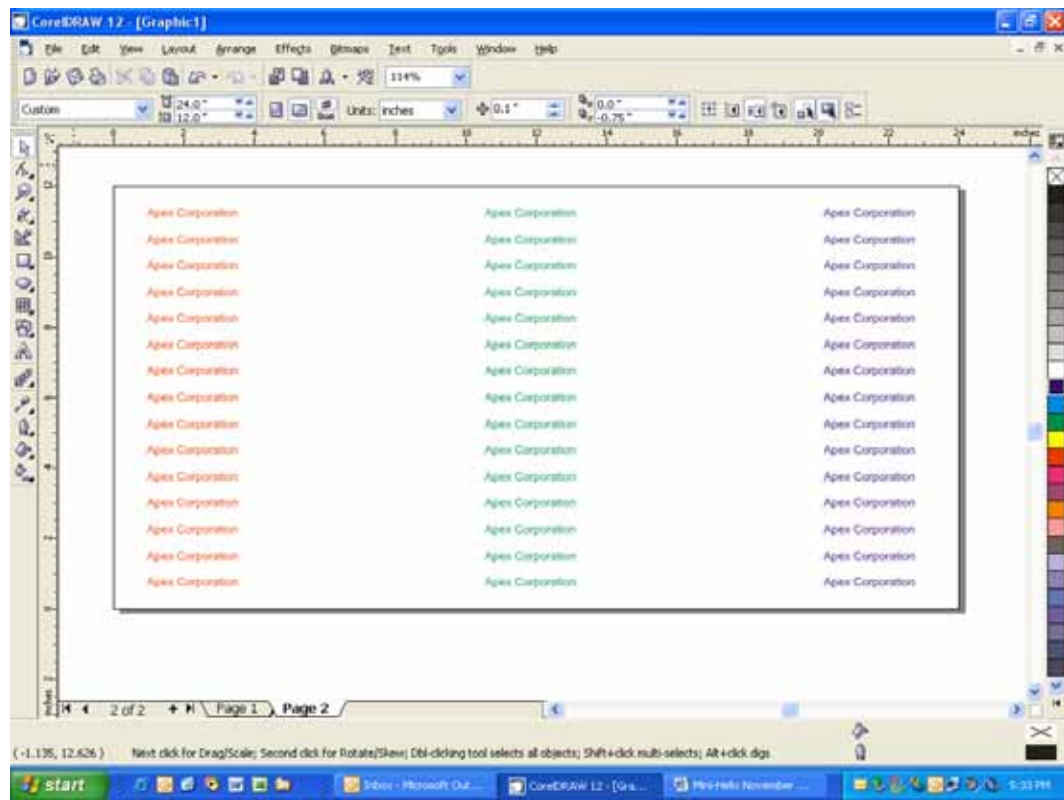

For the above example we've assigned all of the names in the first column the color red, the second column the color green, and the third column, blue. In the

# Section 7: Using the Epilog Dashboard

---

Dashboard you will follow the same process that was used in Vector Color Mapping for setting up the Raster Color Mapping colors, but for this example we will assign all colors the same speed and power (see following diagram).



We want all three of the pens to engrave at the same depth, so we have set all of the Speed and Power settings the same (100% Speed and 100% Power). The engraver will engrave the red column first, the green second and the blue third.

When you run this Raster Color Mapping job, the laser beam will be on most of the time that the carriage is moving so the total amount of time to engrave the pens will be decreased.

Color Mapping is most efficient as a time saver whenever there is a large amount of white space between engraving objects.



**Note:** There's one important distinction to recognize about how colors are raster engraved in standard engraving mode vs. Color Mapping mode:

- In standard engraving mode different colors are interpreted as different shades of gray that will produce different fill patterns when engraved.
- In Raster Color Mapping mode all of the different colors are engraved as if they have a black fill. There is no way for a color to produce both a fill pattern and be color mapped at the same time.

# Section 7: Using the Epilog Dashboard


---

**Combined Mode** – Color Mapping in combined mode requires a little more planning than Raster only or Vector only modes. Below are the sequencing considerations you will need to account for when using combined mode:

1. Any object that is color mapped will be raster engraved first in the color order from the right side of the tab. Any other raster objects that are not color mapped will then be raster engraved using the Raster settings found in the General Tab of the Dashboard.
2. After all of the raster objects have all been engraved, the vector objects will be vectored in the color order from the right side of the tab. Any other vector objects that are not color mapped will then be vectored using the Vector Settings found in the General Tab of the Dashboard.

## *Additional Dashboard Driver Features*

### *Multiple Passes*

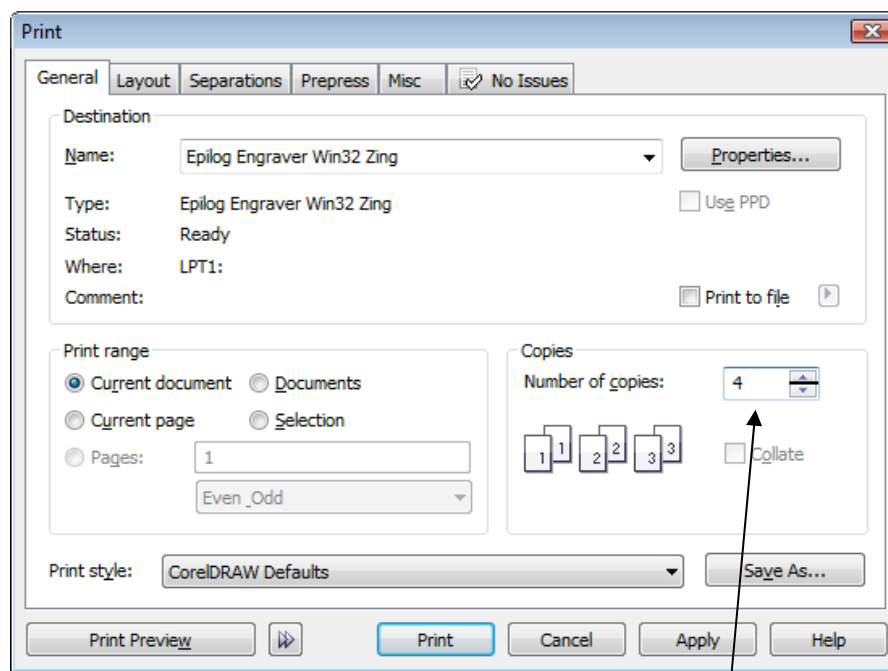


You can automatically engrave or cut a job multiple times by setting the Number of Copies to the number of passes that you want to make. When each pass is finished the laser will automatically start another pass until all passes are complete.

# Section 7: Using the Epilog Dashboard

## *Multiple Pages*

CorelDraw allows you to set up and print multiple pages. The screen shot below shows the Corel print window that is set up to print all three pages of a three page document. You can print all of the pages, or you can specify which ones you want to print by adjusting the settings in the Print range box.

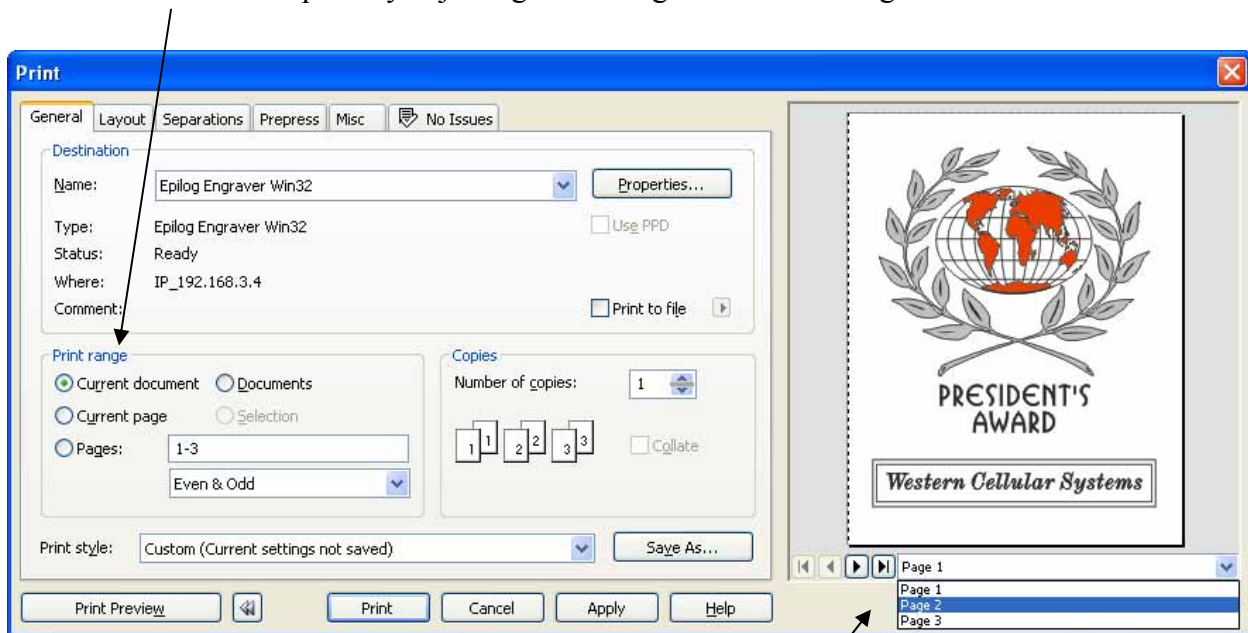

You can view the different pages in the Print Preview screen.

When a multiple page job is printed to the laser, the job will be displayed on the LCD as Job:3.Page 3. Note that the last page of the job (in this case there were three pages) is what is shown on the LCD – not the first page! For this print job you will see as you scroll through the jobs on the LCD that the second page is displayed as Job:2.Page 2, and that the first page is displayed as Job:1. File Name (where the file name is the name of the file as it was saved in Corel).



# Section 7: Using the Epilog Dashboard

---

The list below shows the file names a little more clearly:

**Job:1. File Name**

**Job:2. Page 2**

**Job:3. Page 3** – This file shows on the LCD when the file is received at the laser.

If you already have jobs in the laser system, the naming structure will change. The Job number will pick up the first available number. For instance, if you have two jobs already in the laser system and then print a multi-page job of five pages, the file names for those five pages will be:

**Job:3. File Name**

**Job:4. Page 2**

**Job:5. Page 3**

**Job:6. Page 4**

**Job:7. Page 5** – This is the job that will show after the entire file has been received.

If you start engraving the jobs and become uncertain about which pages are which, you can refer back to your print preview screen and the Page number in the laser will correspond to the page number in the print preview (see the screen shot on previous page).

## *Changing Dashboard Driver Defaults*

All of the Dashboard driver default settings can be modified to suit your engraving needs.

1. Go to Start | Control Panel | Printers
2. Right mouse click on the Epilog Engraver
3. Click on Properties
4. Click on Printing Preferences
5. Change any of the settings. These changes will become the default settings for each new print job.
6. Click Okay and close out all open windows.

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**


# Section 8: Using the Front Control Panel

---

## *In This Section*

- Keyboard Commands
  - Job Storage
- 

As you start using your Epilog laser system, you will notice that the Keyboard Commands which are located on the Control Panel are helpful tools for operating your laser system. The keyboard commands make the laser system extremely user friendly. The functions of each control panel key and other operations are described herein.

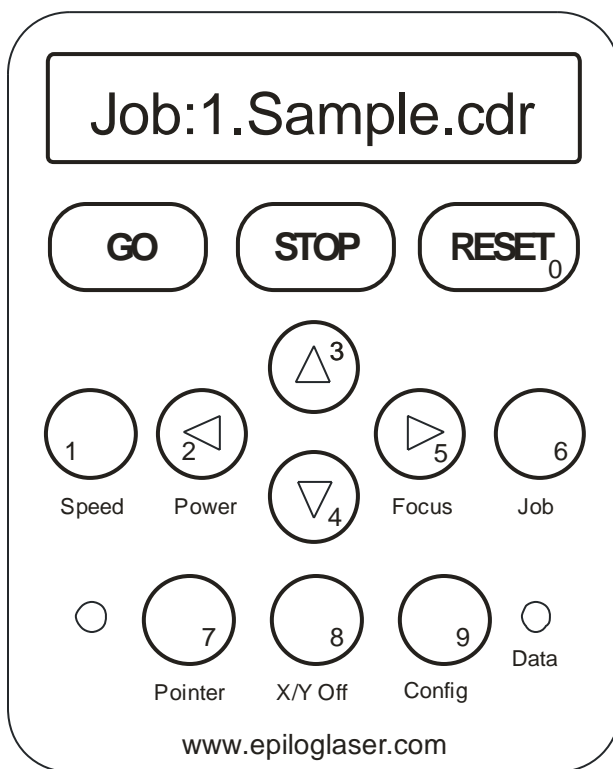


## Section 8: Using the Front Control Panel

---

### *Keyboard Commands*

The keyboard is located at the right side of the laser system. All of the keys have specific purposes, but using the laser can be as easy as pressing the “Go” button once a job has been sent to the laser.


The diagram below shows the keyboard that has a job in queue and is ready to start engraving. At this point, simply pressing the “Go” button will start the engraving job. The name of the job will be the same as the file name from CorelDraw.

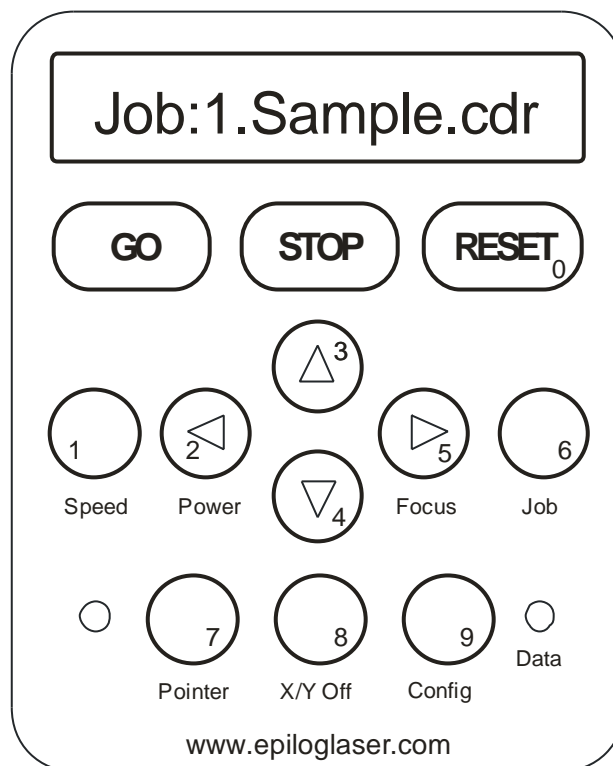

## Section 8: Using the Front Control Panel

---

Once the job starts, the display changes to show a job timer and the engraving resolution. The timer is a useful production tool that displays the elapsed time of engraving.

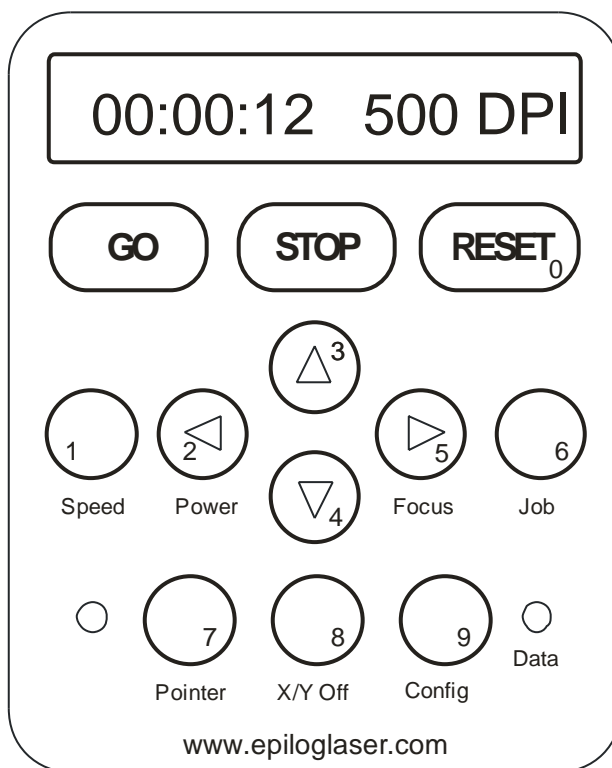

### *Function Keys and Indicator Lights*

#### **DATA**


This green indicator light flashes as data (raster engraving / vector cutting job) is being received at the laser system. For normal jobs, the DATA light will be illuminated for only a few seconds. Once the data has been received at the laser system the DATA light turns off.

## Section 8: Using the Front Control Panel

---

### SPEED

During an engraving job, or when the laser is idle at Home Position, the Speed of the job can be viewed on the control panel by pressing the **SPEED** button. In Raster mode you can change the speed on the fly. Speed can only be changed on the fly in Raster Mode. You cannot change the Speed on the fly during Vector cutting.

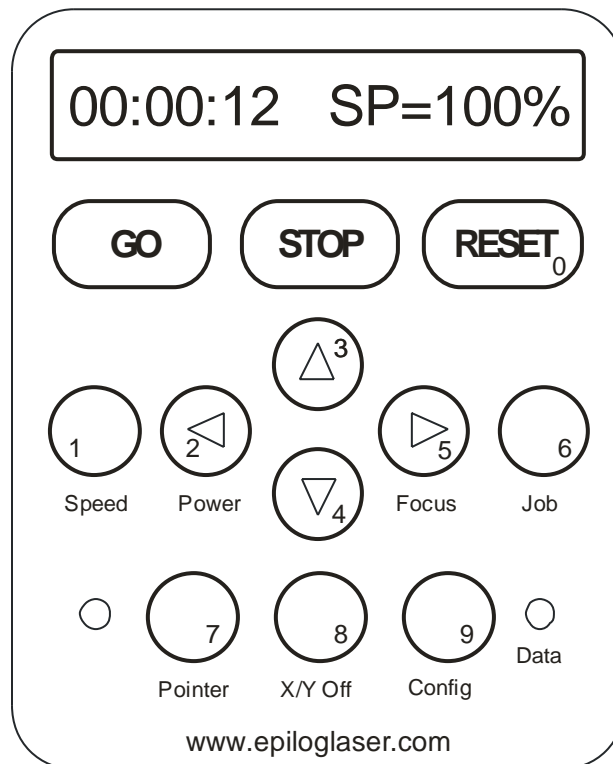

Pressing the **SPEED** button while engraving will change the display to show the Speed setting of the job while it is running (see diagram above). Pressing the **UP** or the **DOWN** key will increase or decrease the speed of the carriage. Normally you will need to increase or decrease the Speed by 20% or more before you start to notice a visible change in the speed. Changing the Speed on the fly is a useful way to experiment to get just the right Speed setting for a material that you are not used to engraving. You cannot change Speed on the fly in Vector mode.

You can also change the Speed from the laser system when it is in idle mode. To do this, press the **SPEED** button, then press the **UP** or **DOWN** button to change the Speed. Press **GO** and the job will run at the changed Speed setting, not the setting that was sent from the computer.


## Section 8: Using the Front Control Panel

---

### **POWER**

During an engraving job, or when the laser is idle at Home Position, the Power of the job can be viewed on the control panel by pressing the **POWER** button. In Raster mode you can change the power on the fly. Power can only be changed on the fly in Raster Mode.

Unlike Raster Mode, you cannot change the Power on the fly during Vector cutting.

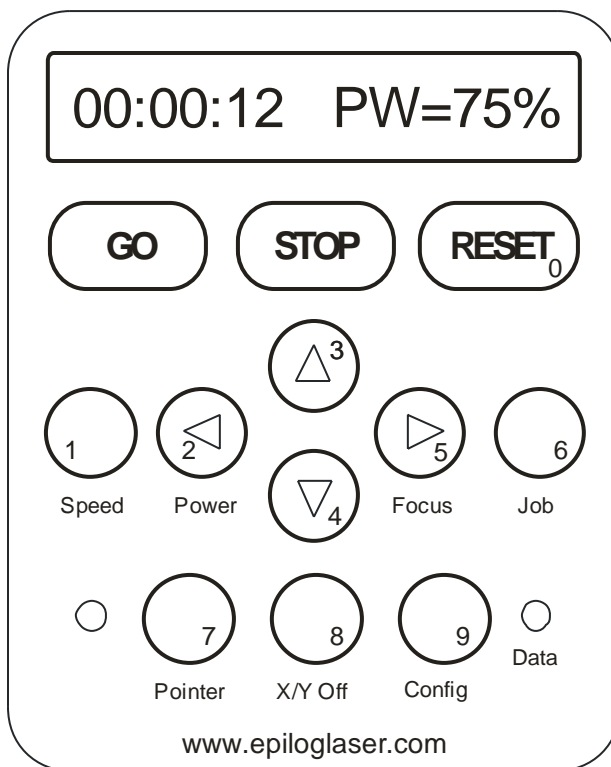

Pressing the **POWER** button while raster engraving will change the display to show the Power setting of the job while it is running (see diagram above). Pressing the **UP** or the **DOWN** key will increase or decrease the power output of the laser in Raster Mode. Normally you will need to increase or decrease the Power by 10% or more before you start to notice a visible change. You cannot change Power on the fly in Vector mode.

You can also change the Power from the laser system when it is in idle mode. To do this, press the **POWER** button, then press the **UP** or **DOWN** button to change the Power. Press **GO** and the job will run at the changed Power setting, not the setting that was sent from the computer.

# Section 8: Using the Front Control Panel

---

## X/Y OFF

Pressing the **X/Y OFF** button disables the X and Y motors and allows the operator to move the carriage by hand to any location on the table (*be careful to avoid touching the optics while moving the carriage!*). Moving the carriage by hand allows you to perform several different functions:

1. Focus anywhere on the table. To focus anywhere on the table, disable the axes by pressing the **X/Y Off** key. Move the carriage to the desired focus position. Move the focus gauge to the position where you want to focus and then press the Up or Down cursor keys on the keyboard to move the table up or down until the focus spring is just touching your work. Your focus is now set to the proper focus height. After you have focused, press the Reset key to send the carriage back to its Park position.
2. Create a new, temporary, home position. Using the red dot pointer helps to locate the precise position where you want your new home position to be. Use the X/Y Off button to move the carriage and create a temporary Home position.



**Note:** Creating a new home position will reduce the engraving / cutting area. Make sure the image to be engraved / cut will fit within the remaining area of the laser system.

3. After moving the carriage by hand you have two choices of what to do next:
  - a) Press the **Reset** button and the carriage will go back to its normal upper left hand corner “Park” position.
  - b) Press the **GO** button to create a temporary Home position.

## FOCUS

Pressing the **FOCUS** button allows the operator to raise or lower the table by pressing the **UP** or **DOWN** buttons. When in Focus mode, the LCD displays a digital readout of the relative location of the table.

You can “Zero out” the readout by pressing the Up and Down arrow keys simultaneously to generate a relative position of 0.000. This is useful for determining exactly how far from nominal focus you would like to be. Some materials, like acrylic, are better engraved when slightly out of focus. Setting the digital readout to 0.000 first and then going out of focus a predetermined amount is an easy way to accomplish a custom focus.

To focus anywhere on the table see the description for the **X/Y Off** key for a full explanation of this useful feature.



# Section 8: Using the Front Control Panel

---

## POINTER

The **POINTER** button is a toggle switch that turns the laser systems visible Red Dot Pointer on and off. When the Red Dot Pointer is on, the green indicator light directly adjacent to the **POINTER** button will be illuminated.

## *General Purpose Buttons*

### GO

This key is used to start a job. Once the desired job is selected, pressing the **GO** button will start the job. If a job is paused (**STOP** button) it can be resumed by pressing the **GO** button. The **GO** button is also used to repeat a job – simply select the job you want to run on the display panel and press **GO**.

### STOP

Pressing the **STOP** button will stop the lens carriage and the laser beam will be shut off. If the **STOP** button is pressed during raster engraving mode the lens carriage will stop on either the far left or far right of the engraving line that is in process. If the **STOP** button is pressed while in vector cutting mode, the lens carriage will stop at the end of a line segment or at the next line node location. Once the lens carriage has stopped, you can open the door to examine the engraving. By closing the door and pressing the **GO** button, the engraving / cutting job will commence where it left off. If the item being engraved is not moved the engraving / cutting registration will not be affected.



**Note:** Opening to door on the laser during engraving or cutting will stop the laser from firing; however the lens carriage will continue to move. It is important to STOP the job before you open the door to ensure the engraving / cutting is completed.

### RESET

This button is used to reset the carriage to home position after you have stopped a job in progress. **RESET** does not erase the job from the laser systems memory; rather it will stop the engraving job in process and send the carriage back to the home position. The **STOP** button should always be pressed before pressing the **RESET** button.


### JOB

Pressing the **JOB** button displays the file name of the last job stored in memory. After pressing the **JOB** key, pressing the **UP** or **DOWN** keys allows the operator to scroll through all of the saved jobs that are stored in the laser systems on-board memory.

## Section 8: Using the Front Control Panel

---

The *UP* or *DOWN* buttons will loop continuously through all jobs stored in the laser system. Pressing the *GO* button will start the job that is displayed on the control panel.

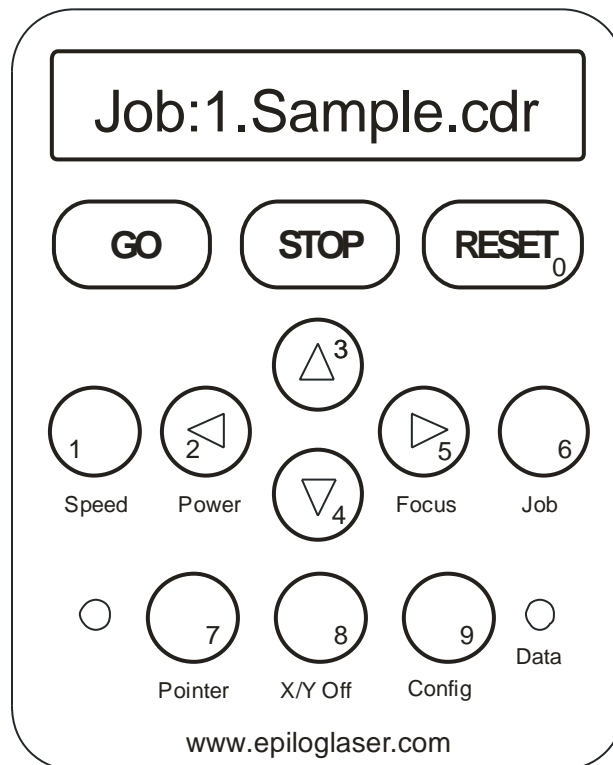

Notice that the Jobs are numbered. If you send the same job more than once, you will still be able to distinguish it from the other jobs with the same name by the job number.



**Note:** Jobs stored in the laser systems will be erased when the laser system is turned off. Turning off the laser system also serves to clear the laser systems memory if so desired.

### UP / DOWN

The *UP* and *DOWN* buttons work in conjunction with several primary functions:

1. Focus Adjustment
2. Job Selection
3. Speed and Power Adjustment
4. Navigate through the menus on the keyboard
5. Change factory set defaults

# Section 8: Using the Front Control Panel

---

## Config

The Config key takes you into the factory settings that do not normally need to be reset by the end user. These functions are listed below.

To access and move from one Config setting to another use the following instructions:

1. Press the Config key – **Config Menu:** will appear on the keyboard display.
2. Press the **Focus** key to scroll through the different menu items.
3. Once you reach the menu item you are looking for use the **Up** or **Down** cursor keys to change the value of the item. Press and release the Up or Down keys to change the settings by one unit. Press and hold the Up or Down keys to produce a rapid change of the setting.
4. The numerical range of adjustment is shown in the table below. Each single digit change is equal to a half thousandth of an inch - .0005" (0.00125 mm) (except the Laser and Stamp Match values, which are in pixels). For example, changing the X-Home position value from 350 to 395 would move the X-Home position 0.0225 inches (0.55 mm) to the right.
5. Because the adjustment increments are so small it may be easier to think of the change as a two digit change is equal to 0.001 inch.

<u>CONFIG SETTINGS</u>	<u>RANGE</u>
<u><b>X - Home:</b></u> Increasing this value will move X-Home to the left.	<u><b>Range: +999 to -999</b></u>
<u><b>Y - Home:</b></u> Increasing this value will move Y-Home up.	<u><b>Range: -100 to +999</b></u>
<u><b>Laser Match:</b></u> Establishes the left to right vertical alignment of alternating raster lines.	<u><b>Range: -20 to +20</b></u>
<u><b>Stamp Match:</b></u> Establishes the left to right vertical alignment of alternating raster lines for stamp mode.	<u><b>Range: -20 to +20</b></u>
<u><b>Sys Unit:</b></u> Set the units of operation in the laser system to <b>Inches</b> or <b>mm</b> .	<u><b>Range: Inch or mm</b></u>

# Section 8: Using the Front Control Panel

---

## *Job Storage*



The laser has the capability to store multiple jobs in temporary memory. The machine will save any and all jobs sent until there is no free memory left. At that point, the oldest job will be deleted automatically to make room for new jobs. **Note:** Jobs stored in the laser systems will be erased when the laser system is turned off. Turning off the laser system also serves to clear the laser systems memory if so desired.

# Section 9: Standard & Optional Machine Features

---

## *In This Section*

- Red Dot Pointer
  - Air Curtain
  - Air Curtain Pump – Optional Feature
  - Vector Grid/Vacuum Table - Optional Feature
  - Pin Table – Optional Feature
- 

The laser system is very versatile and has many standard features that are very useful for making engraving and cutting applications easier to perform! Features that are either included with the system or sold separately make the Epilog a high performance tool. Following is information regarding operation of these features.

Standard Features included with the Epilog Zing systems include:

- Red Dot Pointer
- Air Curtain

Optional Features that can be purchased with the Epilog Zing Systems include:

- Air Curtain Pump
- Vector Grid/Vacuum Table
- Pin Table

These optional items can be purchased with your original order or at any time after the purchase of your laser system.

# Section 9: Standard & Optional Machine Features

---

## *Red Dot Pointer*



The Pointer setting allows for manually turning **ON** or **OFF** the Laser Diode Pointer (Red Dot Pointer). This visible red beam is much like a hand held laser pointer, and has a bright red beam. This beam allows the operator to visually note where the laser is engraving or cutting. The Red Dot beam is potentially hazardous if it is directed into the eye. When the Pointer is turned on, **DO NOT** place your head inside the engraving area, as you may look into the beam. For additional information, please refer to the *Safety* section of this manual.

## *Air Curtain*

The air curtain is used for vector cutting applications where there is a need to keep combustible gases away from the cutting surface. This helps to reduce charring, scorching and flaming when vector cutting materials such as wood, rubber, acrylic, and other flammable materials. The air curtain directs a constant stream of air across the material surface at the point of burn, directing the air both down and back towards the exhaust vent.

Vector cutting should never be performed without the use of the air curtain.

## *Air Curtain Pump*

The air curtain pump can either be purchased through your Epilog representative or you can connect your existing air supply into the ¼ inch (6 mm) receptacle at the back of the machine (60 PSI max).



The Air Curtain should always be activated during vector cutting operations to reduce the risk of fire!



Optional Air Curtain pump.

## Section 9: Standard & Optional Machine Features

---

### *Vector Cutting Grid/Vacuum Table*

The Vector Grid is the ideal tool for vector cutting. The Vector Grid reduces backside burning by lifting the material off the table and supporting it on an aluminum grid.

A precise cut and crisp edges are achieved when the laser beam passes cleanly through the material into the air space created below. The Vector Grid is design so that the exhaust air from your exhaust fan pulls from the bottom of the table as well as the top side of the table. This prevents buildup of smoke and vapor, which are drawn directly into the exhaust outlet. In addition to providing better edge quality, the vector table keeps your laser clean by trapping the resins and debris associated with cutting materials such as wood or acrylic.

Because the Vector Grid pulls air from below the work surface it can also be used as a vacuum hold-down table. The exhaust fan pulls enough air to create a vacuum that it will flatten slightly warped sheet stock, paper, thin wood, aluminum sheet stock and other materials.

As long as the exhaust is operating, and your material is no more than an about ½ inch (12.7 mm) thick, the vacuum table will work. If you have a piece of sheet stock that does not flatten out because it is not covering enough of the grid, you can use any material (including paper) to cover the exposed holes. Simply blocking most of the grid holes will be enough to flatten most sheet stock. The vacuum table is designed to flatten material that is flexible and slightly warped. It will not flatten severely warped, bent or material that is too rigid.

# Section 9: Standard & Optional Machine Features

---


## *Installation*

The vector grid is designed to mate to the table so that your rulers and Home position do not change. To install the vector grid, lower the table:

There are three oval slots that are cut into the rulers; two in the top ruler and one in the left side ruler.



There are three mating pins on the bottom side of the vector grid.

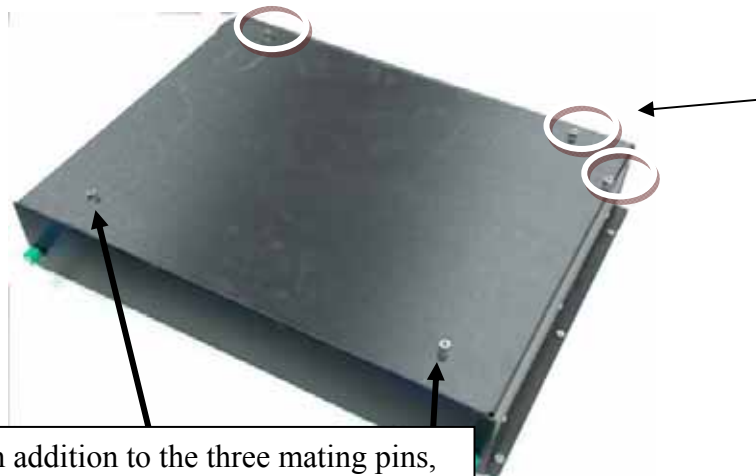

These three mating pins fit into slots that are cut into the rulers.


In addition to the three mating pins, there are two pins to keep the vector grid level. The two leveling pins are at the front of the vector grid.



## Section 9: Standard & Optional Machine Features

---

To install the vector grid, place it inside the cabinet and move it so that the back of the grid is almost touching the back of the machine. There will only be about a 1/8 inch (3 mm) gap between the vector grid and the back wall of the machine.

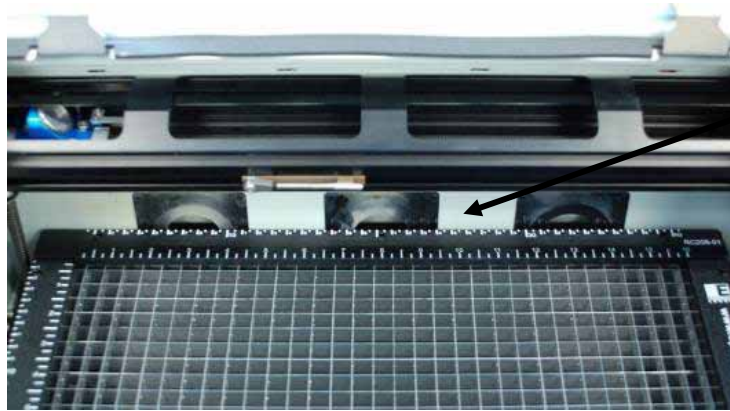

When the vector grid is properly located, you should feel the locating pins click into place. Gently press down on all four corners of the grid to insure it is level. Your vector grid is now installed.

If the vector grid is not level, move it further back towards the back wall and then move it around again until the locating pins click into position. Moving it as far back as it will go usually solves any placement issues.


### *Cleaning the Vector Cutting Grid*



**Important!** Whenever you are vector cutting with the grid there is the potential for small pieces to fall through the vector grid and collect in the table tray. These small pieces of debris present a very dangerous fire hazard. To clean your tray, remove the vector grid from the machine. Unscrew the two green thumb screws to remove the front panel so you can empty the Vector Grid of debris that has fallen through the grid. Follow by using a handled small brush to loosen pieces stuck to bottom of tray. Completely remove the debris in the bottom of the tray. The vector tray should be cleaned out after every use!

## Section 9: Standard & Optional Machine Features

---

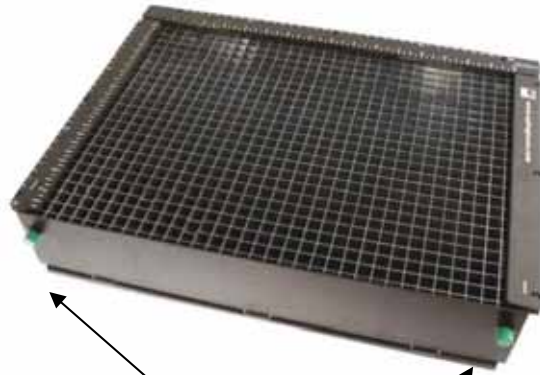

Green thumb screws

***Always keep the table tray clean!***

Remove all debris that has fallen through the vector grid.

Debris and soot build up in the table tray create a dangerous fire hazard!



Vector grid with front panel removed. Empty the debris that collects in the bottom of the grid on a regular basis. ***Do not allow the debris to accumulate.***

## Section 9: Standard & Optional Machine Features

---


### *Zing 24 Rotary Attachment*

The optional Rotary Attachment allows you to mark, engrave or cut cylindrical objects. The Rotary Attachment works in both raster and vector modes.

#### *Machine Preparation*

If you already have a Zing laser system and have just received your rotary attachment, there is a bracket that needs to be installed before using the attachment. This bracket is supplied with the rotary attachment and is used to route the connector cable that leads from the rotary attachment to be connected at the machine.

The bracket does not need tools to install. Adhesive is used to bind it to the chassis. To install the bracket, remove the protective plastic from the adhesive and press the bracket into place at the location shown in the photo below.

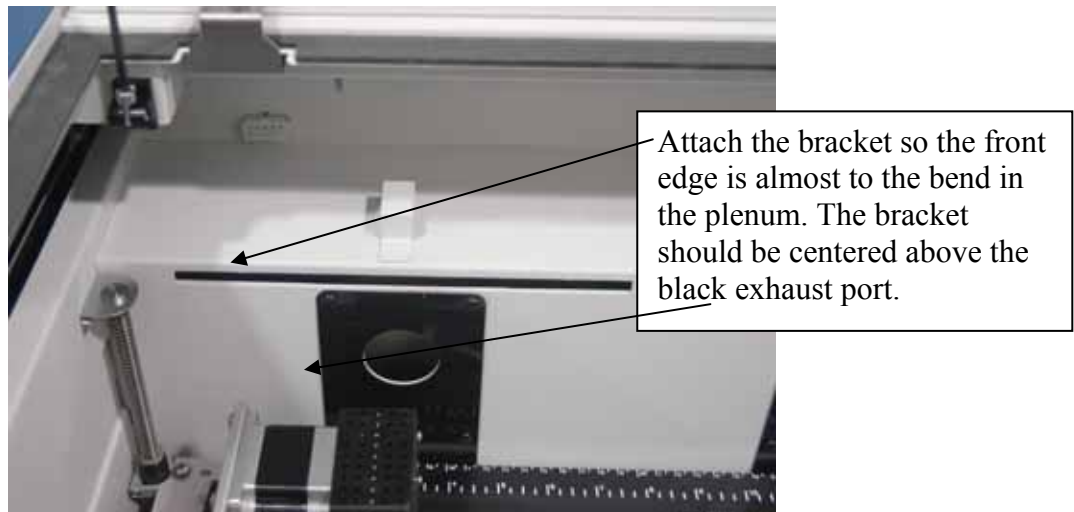

#### *Firmware Preparation*

Your Zing 24 laser system needs firmware version 1.0.0.6 or higher to operate the rotary attachment. To determine what version of firmware is installed into your machine, turn on your machine and watch the display as the machine goes through its initialization sequence. At the end of the sequence the display will show you the firmware version. If your machine has a lower version number of firmware you will

# Section 9: Standard & Optional Machine Features

---

need to upgrade your firmware by accessing the Epilog web site at [www.epiloglaser.com/downloads](http://www.epiloglaser.com/downloads) under the Tech Support tab. Instructions on how to download and then upgrade the firmware can be found on the download page as well as in your owner's manual.


## *Rotary Attachment Installation*

1. Lower the engraving table to its lowest point.



**Turn off the power to the engraver. It's important that the laser system is turned off before installing the rotary attachment.**


2. Manually move the X-beam towards the front of the machine. This provides better access for plugging in the rotary attachment.
3. Place the rotary attachment with the motor end of the attachment in the upper left corner of the table. The rotary base plate should be positioned against the left side ruler and the top side ruler. The rotary rests on the table against the rulers and does not need to be locked in place.
4. Insure the rotary base plate is not resting on top of the rulers.

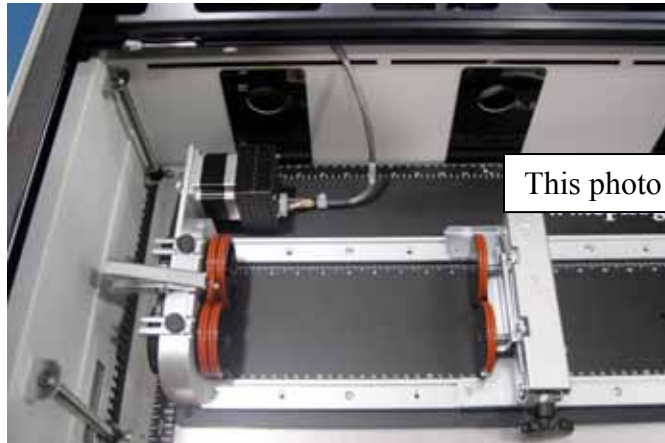

5. Route the connector cable as shown below. This routing prevents the cable from being pinched by the X-Beam when it travels to the back of the machine during the initialization sequence at power-up.

## Section 9: Standard & Optional Machine Features

---

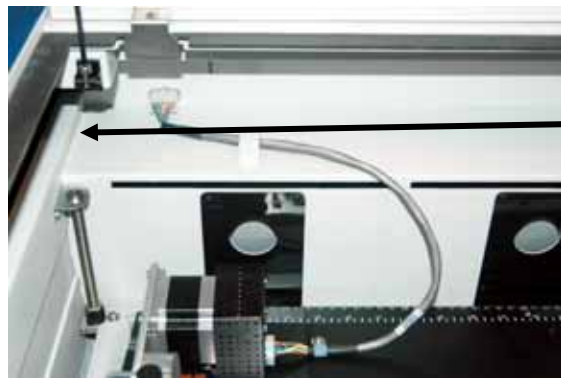

Route the cable through the bracket.

Once your rotary is connected you can power-up the laser system.

### ***Setting Home (First time use only).***

New installations may need to set the Rotary Home Position.

1. Install the rotary and power up the system. The X-beam will go through its standard power up sequence and will come to rest over the rotary.
2. Turn on the red dot pointer (you may need to raise the table to focus the red dot pointer). The red dot will show you the location of your Home position. For proper operation, the Home position should be at the middle edge of the black bumper as shown below. If your red dot is not at this location, you will need to adjust the X and Y axis settings to establish the correct rotary home position.



# Section 9: Standard & Optional Machine Features


---

There is an adjustable numerical setting for both the X and Y axes that allow you to adjust your red dot pointer so it is calibrated to the edge of the bumper. To change the Rotary Home settings follow the instructions below:

3. Press the Config button on your Zing keyboard.
4. Use the left or right cursor arrows to scroll to X R Home to change the x-axis (Y R Home for the Y-axis)
5. Use the Up or Down cursor buttons to adjust the numerical setting.
6. After adjusting the setting, press the Go button to save the new setting.
7. Press the Reset button to move the carriage to its new position.
8. Repeat these steps to fine tune your position.

Once you have set and saved the X and Y rotary Home position you will not have to set it again.


We have found the following diagram along with the red dot pointer is helpful in visualizing how to set the Home position. The drawing represents the black bumper. The standard rotary Home position is at the East (E) edge of the bumper. The numbers represent the total range available for adjustment, although the available adjustment is far greater than what is necessary to set the red dot at the East edge of the bumper. The larger numbers are used for very specialized applications where an entirely different Home setting is desirable.

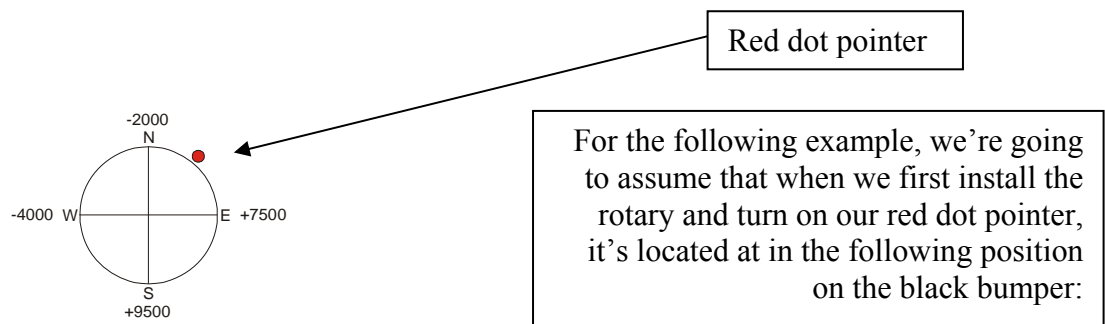

We need to move the red dot a little South (S) and a little East (E). We'll adjust the Y-axis first. We need to move the red dot to the South (towards +9500). Press the Config button, and then the left or right cursor buttons until you get to the Y R Home: menu item. We need to increase this number, but not by much, so we'll press the Up cursor button to increase the number to +0150. Next press Go, and then Reset. The red dot will move to its new Y Home position:


# Section 9: Standard & Optional Machine Features

---

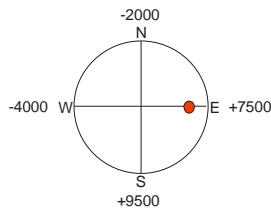

We've now moved the red dot in the South direction. Next, we want to move it east.

Set the X-axis by moving the red dot to the East (towards +7500), Press the Config button, and then the left or right cursor buttons until you get to the X R Home: menu item. Press the UP cursor button to increase the number to +0270. Press Go, and then Reset. The red dot will move to its new X Home position:

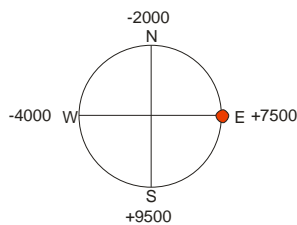

On new installation we have found that the following settings are a good place to start for getting the red dot close to the East edge:

- X R Home: +0150
- Y R Home: +0270

Each numerical increment is a  $\frac{1}{2}$  step, so a full step is an increment of 2. Each full step is 0.001inch (0.025 mm).

## *Rotary Setup*

The rotary attachment works in either raster or vector mode, and the setup is the same for both modes. Set your cylinder on the wheels as shown in the photo below.

The wheels on the left are the drive wheels which spin the cylinder. The wheels on the right are for support. The right side wheels are mounted on a scissor jack so they can be raised or lowered to level the top surface of your cylinder with the X-beam. The scissor jack can also be moved left and right to accommodate cylinders of different lengths up to 22 inches (559 mm).


In most cases you will want to load your cylinder with the larger diameter on the left (drive wheel side). The scissor jack is used to elevate the right side of your cylinder

## Section 9: Standard & Optional Machine Features

---

so that the top surface is horizontal (see the flashlight on following pages). Insure your cylinder is positioned so that the left end is close to, but not touching, the black bumper. Using the clamp to hold the glass in place is optional. Some odd shaped glasses rotate better if they are clamped to the drive wheels, but most glasses and other cylindrical objects do not require clamping.

The clamp is holding a glass against the drive wheels.

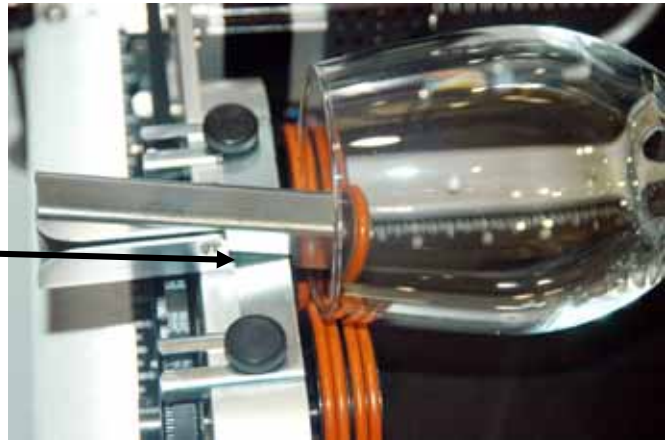


The glass in the photo does not require the use of the clamp. In fact, most standard cylindrical shapes do not need the clamp. The clamp is used mostly for hard to rotate cylinders or very light weight objects that need more than just gravity to hold in place.






## Section 9: Standard & Optional Machine Features

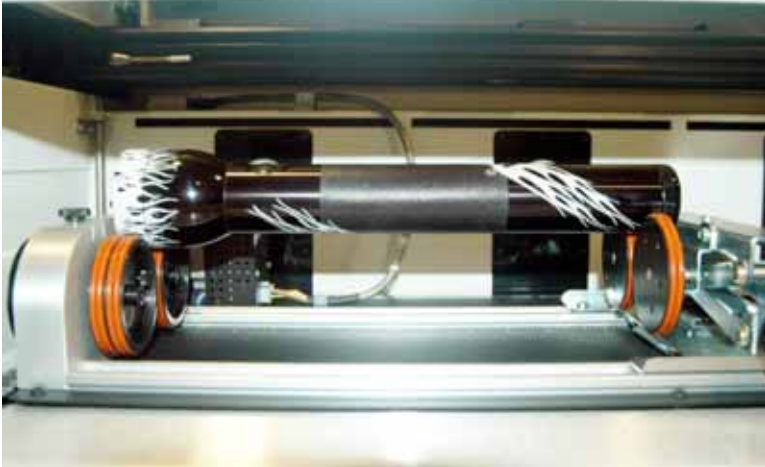

Use the scissor jack to raise the right side of the cylinder so that the engraving/cutting surface is horizontal.

**Correct Setup** – The flashlight is horizontal to the X-Beam.

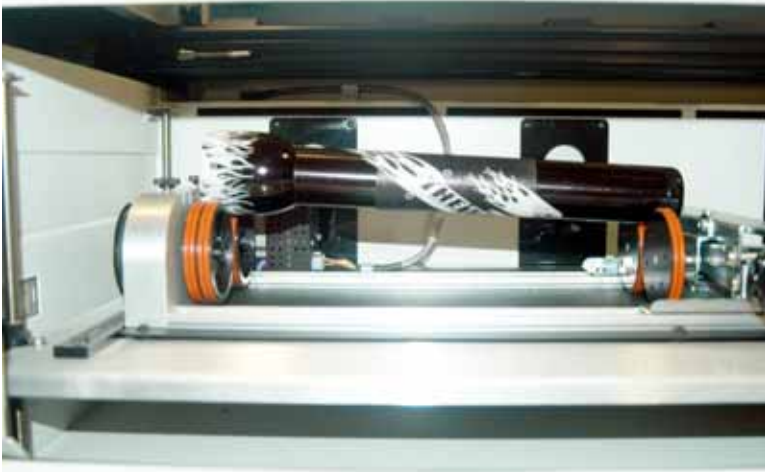

**Incorrect Setup** – The flashlight is not horizontal. Raise the right side of the flashlight by turning the jack screw.

The photo above shows the same flashlight at a severe angle to horizontal. If your cylinder is not horizontal to the X-beam the laser will lose focus as the carriage head moves across the flashlight. This causes the engraving quality on the right hand side to suffer dramatically.

# Section 9: Standard & Optional Machine Features

---

## *Artwork Layout*

Because the Rotary Attachment automatically compensates for the diameter of the glass, artwork setup is relatively easy. The most important thing to remember when working with the rotary is that your artwork needs to be rotated 90 degrees to the way it would normally be setup for flat work. There are several visual tools later in this procedure that will help make artwork setup easy.

Page size is not overly important, but the following descriptions will give you a good starting point. Many people set the page to roughly match the size of the piece to be engraved because this helps to visualize artwork placement.



**Note:** The artwork in the following examples does not fill up much of the Corel page. You can normally get by with using small pages for most artwork because the entire page is only necessary when you are lasering all the way around the cylinder (360 degrees) and/or if you are lasering from the top to the bottom of the cylinder.



For the width (x-direction) of your page, lay the glass flat and orient it as it will be oriented on the rotary attachment. For this glass, the width of the page will be six inches (152 mm).


## Section 9: Standard & Optional Machine Features

---




For the height (y-direction) of your page, use a flexible tape and measure the circumference of the glass at its largest diameter. For this glass, the height of your page will be 11 inches (279 mm).

For the glass used in the prior picture, set up your page size to 6 x 11 inches (152 x 279 mm).

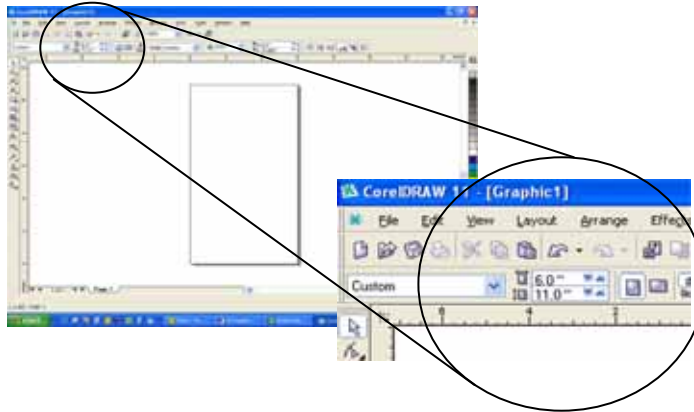

Place your artwork close to the top edge of the page layout. When the job starts, the first part of the process is for the cylinder to rotate through any white space that is between the top of your page and the top of your artwork. Once it has rotated through the white space it will begin to laser your artwork.

## Section 9: Standard & Optional Machine Features

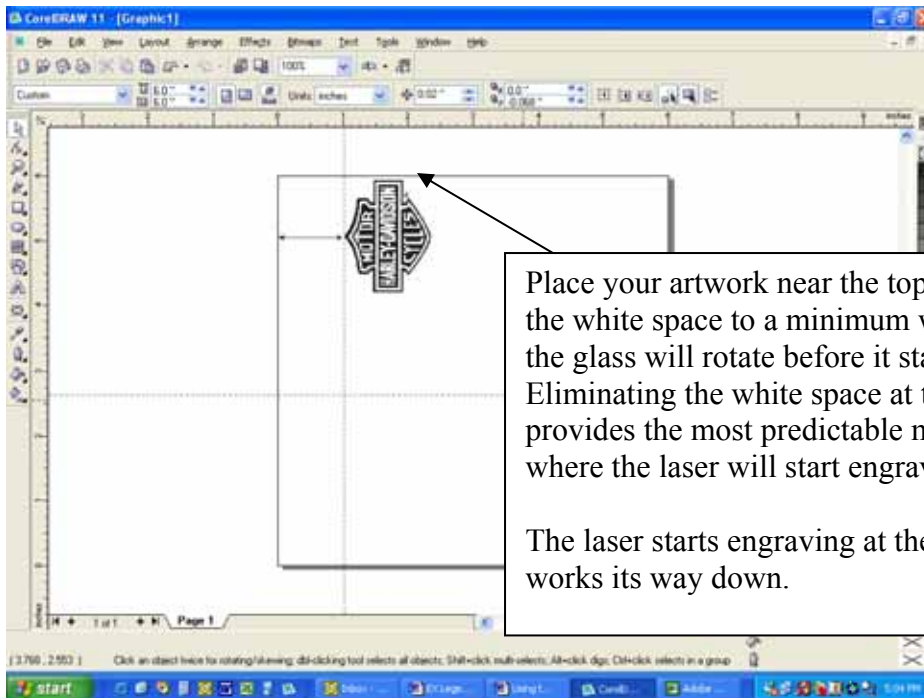


The edge of the black bumper on your rotary attachment corresponds to the left edge of your page in CorelDraw.



Set your cylinder on the rotary attachment so that it is close to the black bumper, but not touching it. The cylinder may not be able to rotate freely if it is rubbing against the bumper.

The “top” of a cylinder can be at either end of the rotary attachment. It is useful to visualize the orientation of the cylinder when it’s being engraved.


# Section 9: Standard & Optional Machine Features

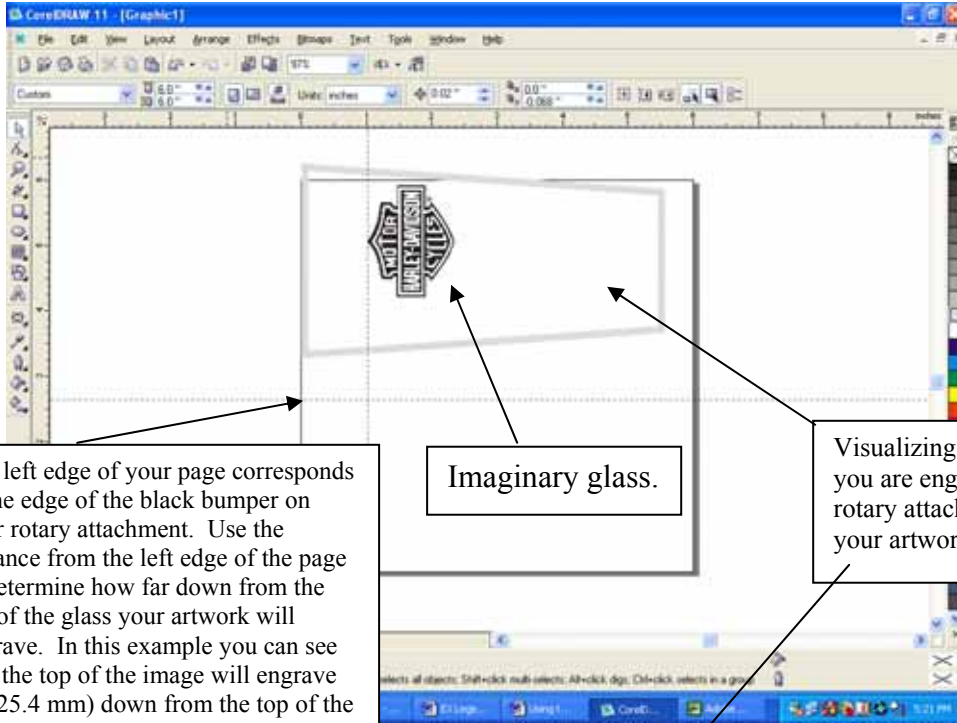

The left edge of your page corresponds to the edge of the black bumper on your rotary attachment. Use the distance from the left edge of the page to determine how far down from the top of the glass your artwork will engrave. In this example you can see that the top of the image will engrave 1" (25.4 mm) down from the top of the glass.

Imaginary glass.

Visualizing the orientation of the piece you are engraving as it rests on the rotary attachment will help in orienting your artwork.

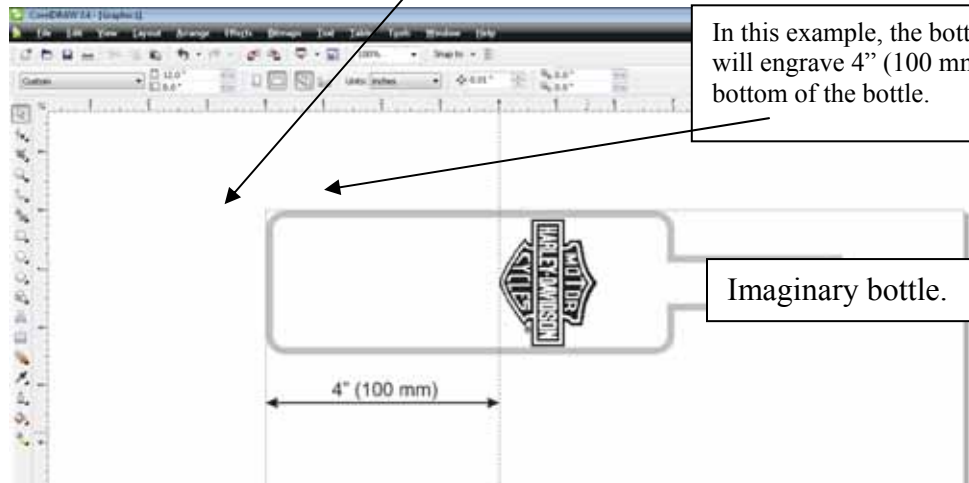

In this example, the bottom of the logo will engrave 4" (100 mm) up from the bottom of the bottle.

Imaginary bottle.

# Section 9: Standard & Optional Machine Features

---

## *Additional Artwork Tips and Tricks*


### Creating a new Home position for Center-Center engraving.

Another way to set up your artwork is by using the Center-Center feature in the Epilog Driver. There are detailed instructions in your Owner's Manual that describe how to use Center-Center engraving, but one of the most useful methods for the rotary attachment is described here.

Using the rotary attachment sometimes requires you to think in three dimensions rather than the standard two dimensions normally used for flat work. For some cylindrical jobs it would be convenient to be able to set up your artwork simply by defining the center of the job and working from there, rather than think about it in 3 dimensions.

In the photo below, the glass has a handle and we want to engrave exactly opposite of the handle. Here's how to do it.

1. Press the Pointer button to turn on the red dot pointer.
2. Press the X/Y Off button
3. At this point in the process we want to move the carriage by hand in the X axis (to our right) and then rotate the glass so the red dot is at the exact center of where we want our artwork to be processed. Only move the carriage in the X-axis. If the X-beam is moved forward or backwards, it will have the effect of displacing our artwork.

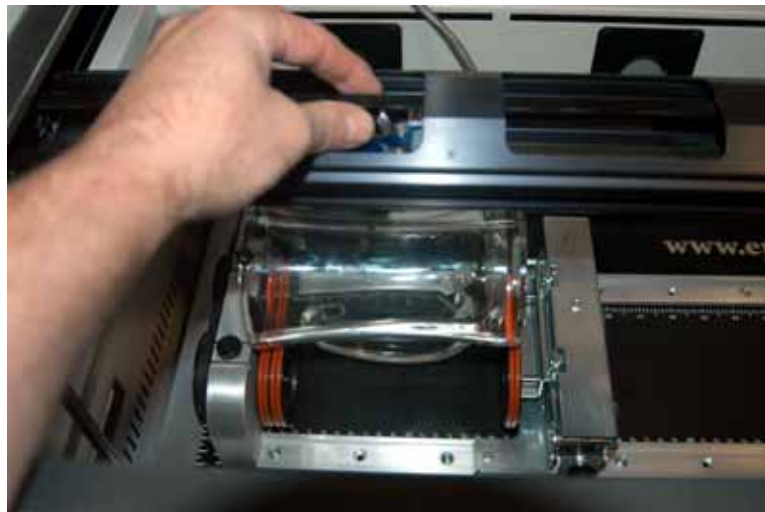

# Section 9: Standard & Optional Machine Features

---

4. Press the Go button. You now have a new Home position and the laser is set to engrave in the center of our glass.



**Note** – It can be useful to put a black mark on the center of the glass as a reference point so you can easily see it when you place the glass onto the rotary attachment.

5. From your software package (Corel, etc) rotate your artwork at 90 degrees as you would for any rotary job. You can place your artwork almost anywhere on the page for Center-Center engraving as long as it's not too close to any of the edges of the page.
6. Print and go to the Epilog driver.

Select the Center Engraving option and choose Center-Center. Set your other laser parameters as normal, then click OK.



7. Your artwork should be perfectly placed!
8. You can continue to use this new Home position or you can set another one using this process.

There is no reset feature that will send the carriage back to its standard Home position, but there are two ways to accomplish this. To reset the machine to the standard rotary Home position at the edge of the black bumper, you can either turn off the machine and then power it back up, or you can press the X/Y Off button, move the red dot manually to the edge of the black bumper, and then press the Go button.

## Section 9: Standard & Optional Machine Features

---

### Stretching or shrinking your artwork for objects with multiple circumferences.

The instructions below show you how to shrink or expand your artwork to accommodate a cylinder where the area being engraved is a different circumference than the circumference at the drive wheels. The rotary attachment works with the assumption that the cylinder is the same circumference from end to end and that your artwork doesn't need to be stretched or shrunken. But some cylinders have a big difference in circumference from the middle to the ends that it affects how the engraved image looks, so sometimes it's necessary to stretch or shrink your artwork so it looks proportional on odd shaped items. The photo below shows a glass that fits this category.



This glass has a circumference of 4 inches (100 mm) at the ends and a circumference of 3.2 inches (81 mm) in the middle, where we want to engrave.

Most artwork will look acceptable on this glass without stretching or shrinking, but because the middle of the glass is a smaller diameter than the ends, some artwork will look compressed (more as an oval than a circle), so we'll want to adjust the artwork before engraving.

To determine how much to adjust your artwork, we'll need to do a simple calculation that tells us the percentage of stretch or shrinkage we need to perform. You can use either the diameter or the circumference to make the calculation; just don't mix the two.


Determining whether you use diameter or circumference is a matter of which one is easier to measure. If you want to measure circumference, use a flexible ruler and wrap it around the glass. To calculate circumference, measure the diameter and multiply by Pi (3.1416):

$$\text{Circumference} = \text{Diameter} \times 3.1416.$$



# Section 9: Standard & Optional Machine Features


## For objects with a larger middle section – shrink artwork:

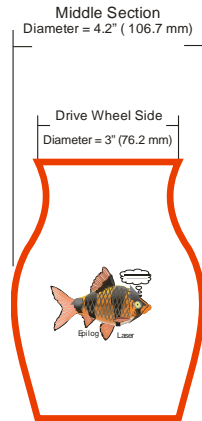

Divide the drive wheel side by the middle diameter and multiply by 100 to calculate the percentage of adjustment. For our example the calculation is:

$$\frac{3''}{4.2''} = .715 \times 100 = 71.5\%$$


Because our calculation percentage is less than 100, we need to shrink the artwork to 71.5% of its original size.

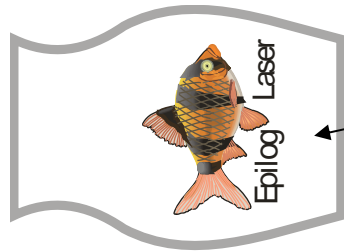

Normally, you would set up your artwork something like the top image.


After shrinking the artwork it appears like the bottom image. We're now ready to print.

(The grey outline of the glass is for reference purposes to show how the glass will be mounted on the rotary and would not be part of the printed artwork.)

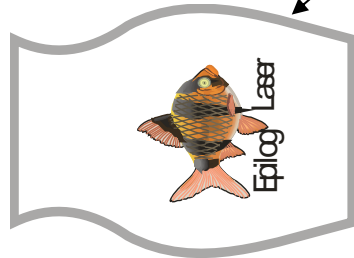


The easiest way to precisely shrink or expand your artwork in Corel is to select the artwork and then type in the amount of adjustment.

Notice that you only want to adjust the vertical aspect of your artwork.

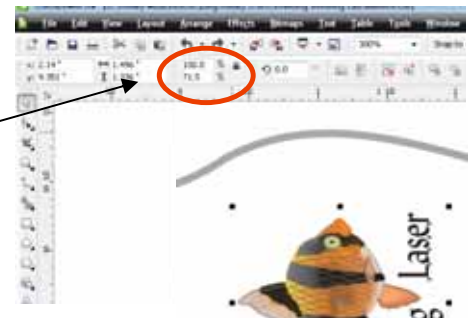

# Section 9: Standard & Optional Machine Features



**For objects with a smaller middle section – expand artwork:**

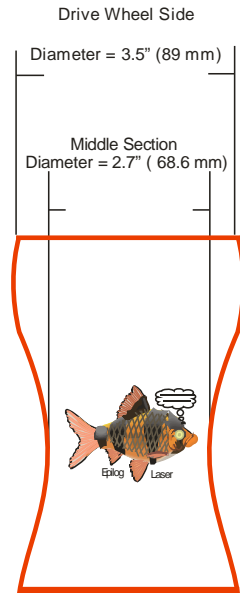

Divide the drive wheel side by the middle diameter and multiply by 100 to calculate the percentage of adjustment. For our example the calculation is:

$$\frac{3.5''}{2.7''} = 1.296 \times 100 = 129.6\%$$

Because our calculation percentage is greater than 100, we need to expand the artwork to 129.6% of its original size.

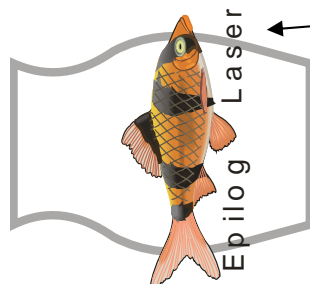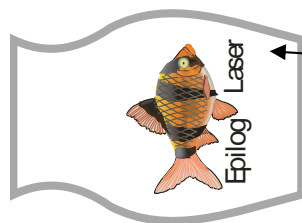

Normally, you would set up your artwork something like the top image.

After expanding the artwork it appears like the bottom image. We're now ready to print.

(The grey outline of the glass is for reference purposes to show how the glass will be mounted on the rotary and would not be part of the printed artwork.)

# Section 9: Standard & Optional Machine Features

---

Other considerations:

9. In these two examples you'll notice that the "middle" varies depending on where you measure. Because of this, you'll never be able to get every piece of artwork perfectly sized. Depending on how much room the artwork takes up, you may want to experiment with the expansion or shrinkage of your artwork to fit your particular glass shape.
10. Adjust only the vertical aspect of your artwork.

## *Setting Focus with the Rotary Attachment*

***Focus*** – With your cylinder in place, press the Focus button on the Zing keyboard. The X-beam will move away from its Home position and towards the back of the machine so the focus gauge is directly over your part.

Lower the Focus gauge and focus on your cylinder.

Press Reset and the X-beam will move back to its Home position. You are now ready to start the job.

### **Loading/ Unloading your cylinders**

For some larger cylinders it is desirable to move the X-beam completely out of the way when loading or unloading. To do this, press the Focus button *twice*.

The first time you press the Focus button the X-beam will move away into the focus position. Pressing it a second time will move it back another 2.5 inches (64 mm).

Pressing Reset from either the focus position or the load/unload position will move the X-beam back to its home position at the edge of the black bumper.


## ***Rotary Removal***

1. Open the door
2. Turn off the power to the laser
3. Unplug and remove the rotary attachment.

# Section 9: Standard & Optional Machine Features

## *Pin Table*

The Pin Table option offers a method for users to keep all back reflections of the laser beam from marking the sides or back of the material being cut. The Pin Table lifts the cutting material completely off the vector grid and provides a means to eliminate the tick marks that can be created when the laser beam comes into contact with the grid material.

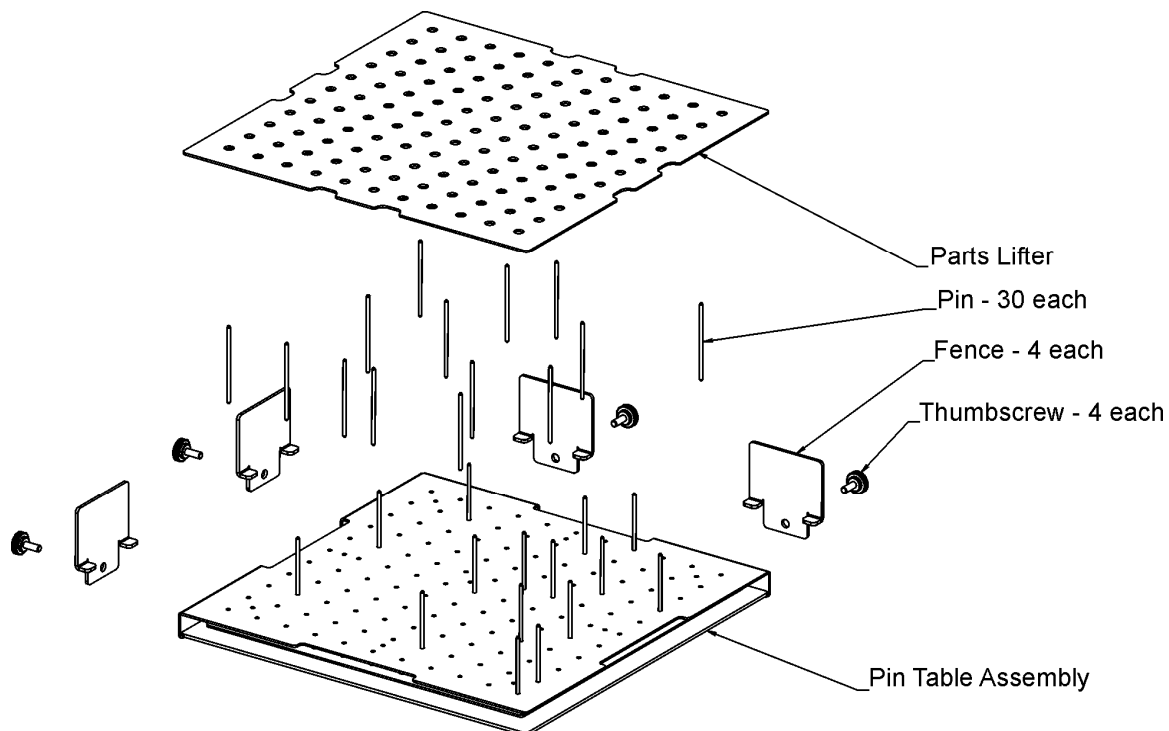

The Pin Table is a 12" x 12" (305 x 305 mm) anodized aluminum table that holds moveable support pins that can be placed anywhere on the table's one inch (25.4 mm) grid pattern. The moveable support pins allow the user to place the pins anywhere on the grid in such a way that they support the material being cut while avoiding the cutting path of the laser. This method of supporting the material produces cut edges that do not have any marks from laser reflections. By setting up a grid pattern in your graphics package to match the grid pattern of the Pin Table, you can easily ensure that your cutting path will not contact the support pins.

# Section 9: Standard & Optional Machine Features

---

## *Assembly Instructions*

After unpacking the Pin Table, remove the four thumbscrews from the Pin Table assembly.

1. Install the four fences along the two sides using the thumbscrews you just removed.
2. At this point the Pin Table is almost ready to use. The next step involves placing the pins anywhere on the grid so that they support the piece you are going to be cutting, and are out of the laser beam cutting path.


## *Users Guide*

1. Install as many pins as necessary to support your work piece and waste pieces.
  - a. The pins are held in place with plastic supports and need to be pressed firmly into place to be fully seated. You may need to use a wooden block to press them in fully.
  - b. If all pins are not fully seated, the top of the pins will not be level and your work piece will wobble.
  - c. The grid design allows you to strategically place the pins where they will support your work piece and stay out of the lasers path at the same time.
2. Once the pins are located, place the pin table into the upper left corner of your laser system with the fences resting against the left and top edge guides (rulers). If the pin table is resting properly against the edge guides you will maintain your 0,0 (zero, zero) Home position in the upper left corner.
3. Once the pin table is in your laser system, place your work piece onto the pin table so that the left and top edges of your material rest against the fences.
4. Send your job to the laser. If the pins are properly located, your job will cut all edges cleanly without the laser contacting any of the pins.
5. When cutting is complete, use the handy Parts Lifter to lift your parts from the pin table.
6. When you're ready for your next vector cutting job, you can remove the pins and place them into a new position. The pins are designed to be held snugly in place by the plastic supports. It may be necessary to remove them with the use of pliers.
7. Additional pins can be purchased from Epilog. Ask for P/N LF231.
8. The Pin Table is designed so that multiple Pin Tables can be set next to each other and maintain the one inch (24.4 mm) grid pattern.


# Section 9: Standard & Optional Machine Features

The following illustrations show tips on how to easily use the Pin Table.

In CorelDraw, set up a 12 x 12 inch (305 x 305 mm) page:

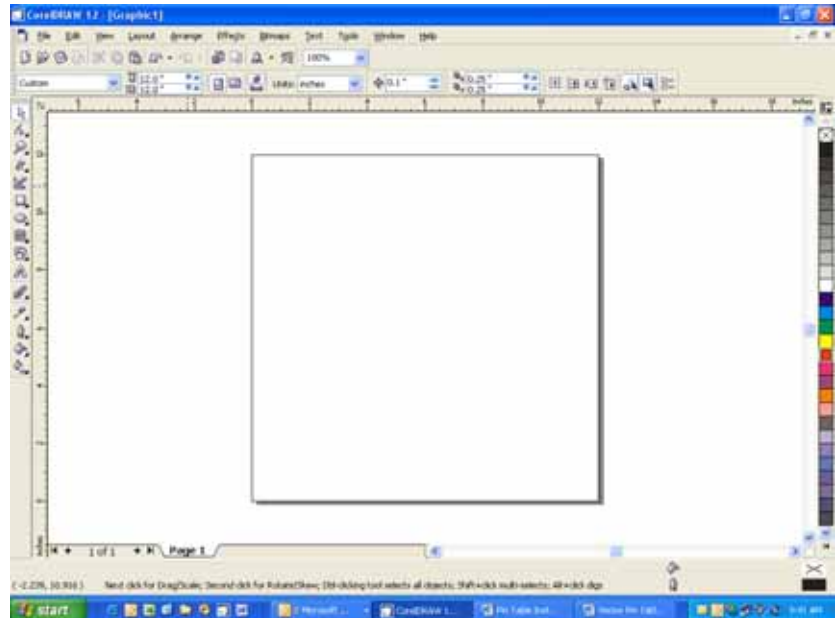


Select View, and scroll down and click on Grid and Ruler Setup.

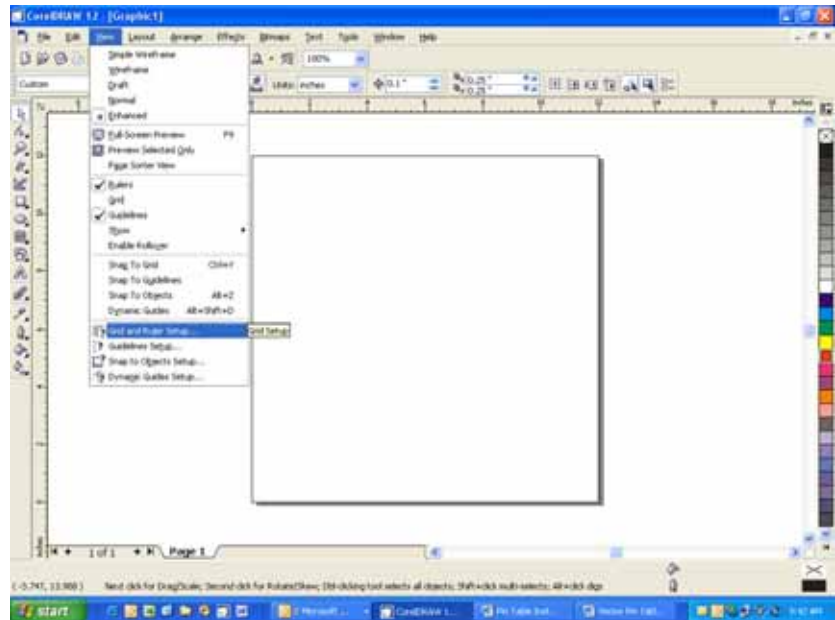


# Section 9: Standard & Optional Machine Features

---

Set the Frequency to 1.0 per inch (both Horizontal and Vertical), and put a check mark in the Show grid box. Click OK

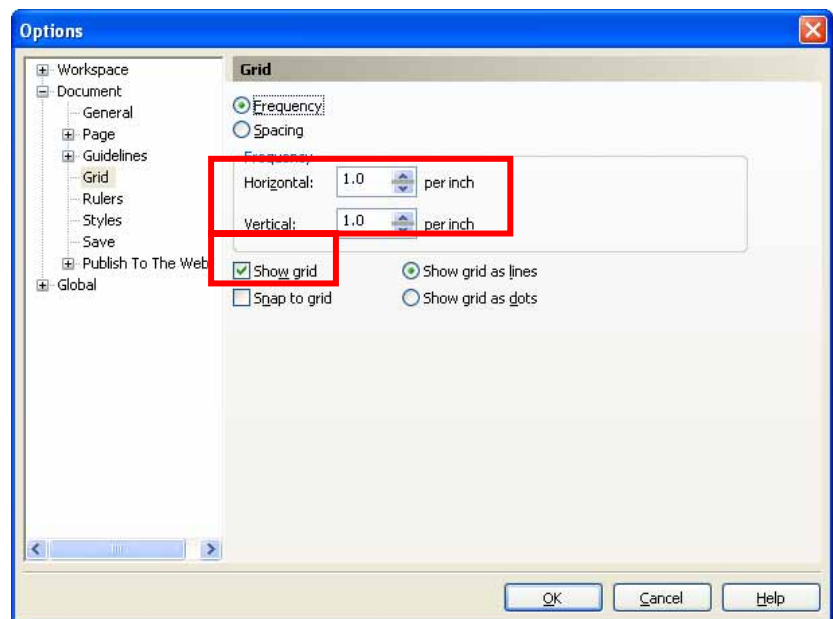


Your Corel page now shows a grid pattern that matches the grid of the Pin Table.

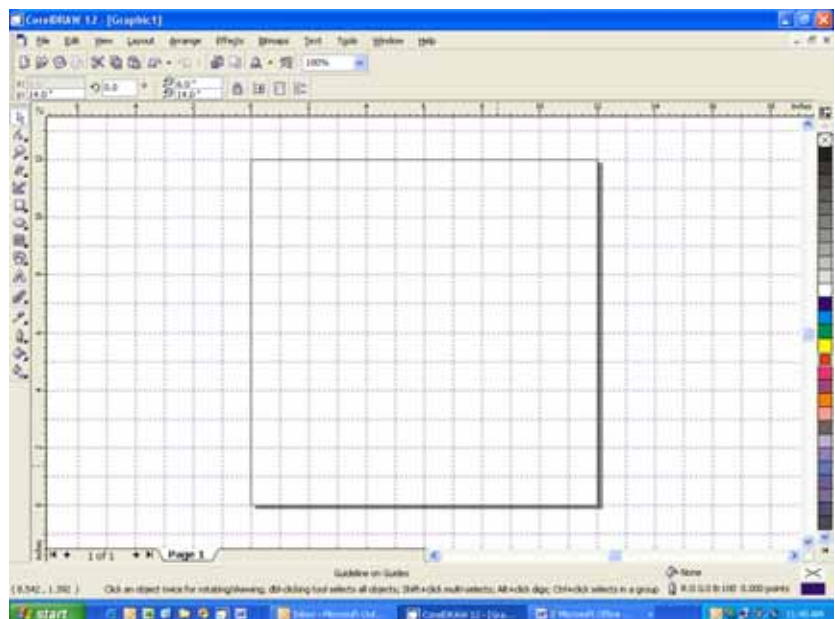


## Section 9: Standard & Optional Machine Features

---

Set up your artwork on the grid so that the vector lines do not cross the path of any of the pins. The small black circles within the letter “B” show the location of the pins. Notice that you do not need to place pins in every available space, they just need to be placed where they will support the work piece. For this piece we have also supported the middle of the “B” to show how to support the waste pieces if you do not want them to fall out after cutting. The circles outside of the “B” are to support the long piece of wood that we are going to use for cutting.

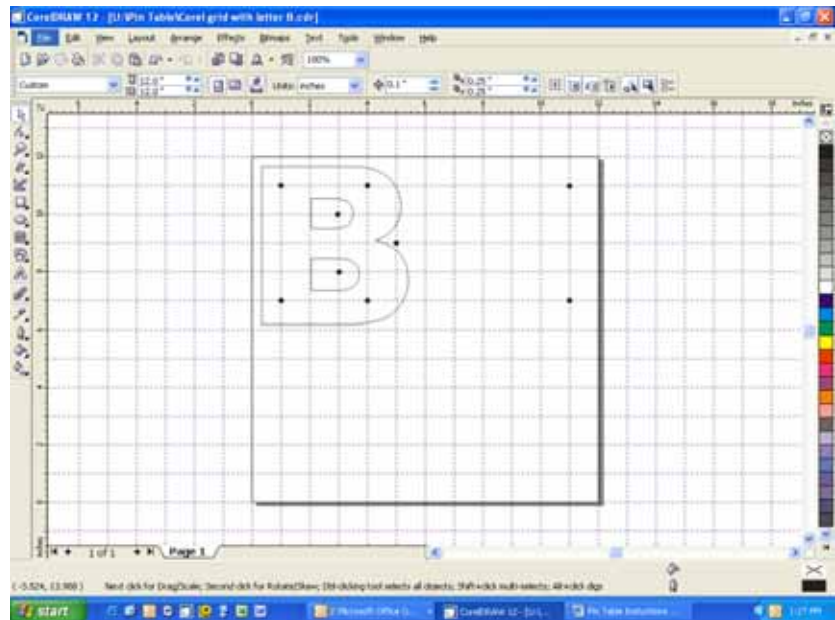

The next photo shows the Pin Table in the machine with the letter “B” cut out and resting on the pins.

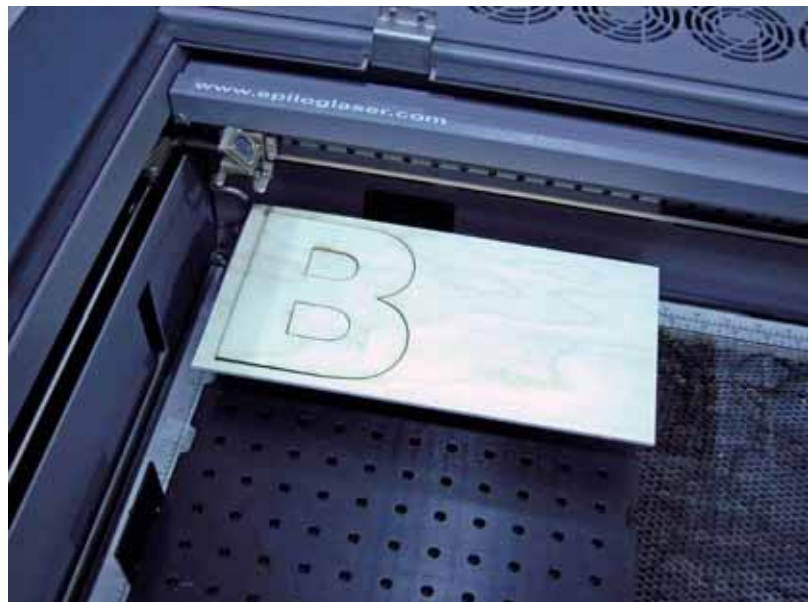



## Section 9: Standard & Optional Machine Features


---

The previous example is a relatively simple example of how to use the Pin Table. The following photos show a more complicated Combined Raster/Vector job.

This photo shows a job that has been raster engraved and then vector cut. You can see that all of the small pieces have been completely cut out and have separated from the material.



The photo below shows the small pieces from the previous photo laying on the Parts Lifter. Simply lift the Parts Lifter from the Pin Table and throw away the pieces. Cleaning up with the Parts Lifter makes clean up easy because you do not have to remove the Pin Table from the machine, nor do you have to pick up each individual waste piece from the machine. Simply clean off all of the waste pieces and replace the Parts Lifter onto the Pin Table.

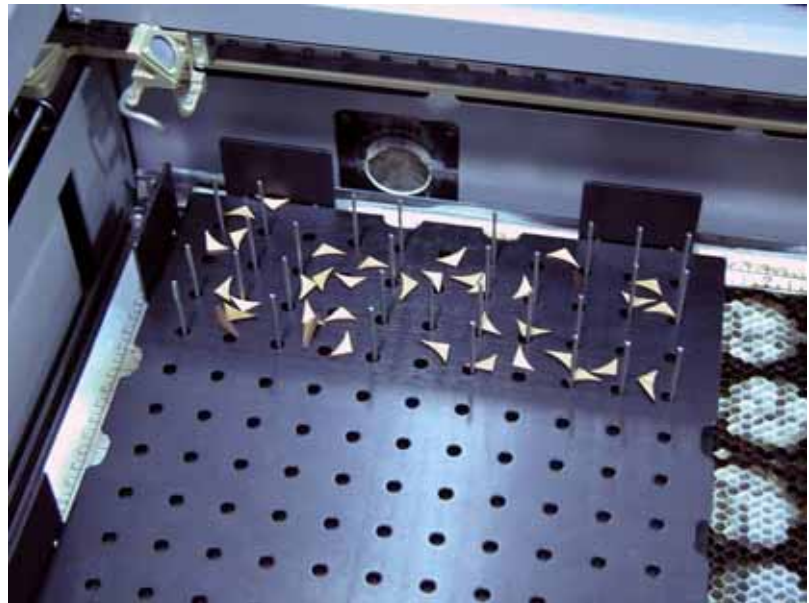

# Section 10: Engraving Machine Cleaning

---

## *In This Section*

- Cleaning Important!
  - Laser Tube
- 

## *Cleaning - Important!*



## *Fire Warning!*



Through normal use your laser system can collect debris and soot that are potentially flammable. Keeping your laser system clean and the area around it clean are important parts of laser maintenance. Some materials are extremely flammable and can easily ignite and burst into open flame setting the machine afire. This open flame is very dangerous and has the potential to destroy not only the machine, but the building in which it is housed.

Please read the following warnings and recommendations and follow them closely at all times!

- **NEVER** let the laser system operate if it will be unattended.
- **KEEP** the area around the machine clean and free of clutter, combustible materials, explosives, or volatile solvents such as acetone, alcohol, or gasoline.
- **ALWAYS** keep a properly maintained and inspected fire extinguisher on hand. Epilog recommends a Halotron fire extinguisher or a multi-purpose dry chemical fire extinguisher. The Halotron extinguishers are more expensive than a dry chemical, but offer certain advantages should you ever need to use an extinguisher. The Halotron extinguisher discharges a clean, easily removable substance that is not harmful to the mechanics or wiring of the laser system. The dry chemical extinguisher discharges a sticky, corrosive powder that is very difficult to clean up.
- **ALWAYS** use the Air Curtain when vector cutting.

# Section 10: Engraving Machine Cleaning

---

- **BE CAREFUL!** when vector cutting. Many materials have the potential to burst suddenly into flames – even materials that may be very familiar to the user. Always monitor the machine when it is operating.
- **KEEP YOUR LASER SYSTEM CLEAN** – A build up of cutting and engraving residue and debris is dangerous and can create a fire hazard in its own right. Keep your laser system clean and free of debris. Regularly remove the vector grid to clean any small pieces that have fallen through the grid.

The single most important thing that you can do to keep your laser working as if it were new is to keep it clean! Five minutes once a day will keep the residue and debris from building up and causing problems. There is almost no maintenance required for your laser if you **KEEP IT CLEAN!**

To keep your system clean use a soft cloth and a mild solvent like Isopropyl alcohol to remove the smoke and debris from the table, X-beam and anywhere else that collects dirt and debris.

Cleaning the optics requires special care. Please see the instructions on the following pages.

## *Cleaning the Optics*

About once a week, or if you notice the optics are dirty, you will need to clean the mirrors and lenses of your laser. If smoke, resin, or other contaminants are allowed to accumulate too heavily, they will reduce the available laser power and may cause damage.

The two optical components most likely to require cleaning are the focus lens and the mirror directly above it.

To clean the optics use a high-quality cotton swab moistened with the optics cleaner supplied in the accessory kit. Please read the label on the bottle carefully. Rubbing alcohol should be used only to remove fingerprints. If you run out of the cleaner supplied by Epilog, acetone can be used as a temporary measure, but should not be used for regular cleaning as it contains impurities which can damage the optics. If you run out of optics cleaner, pure ethyl (grain) alcohol such as "Golden Grain" and "Everclear" are highly recommended because of their pure nature and because they are readily available.

Wet the swab thoroughly with the solvent, and then blot it against a piece of cotton so that it is no longer soaking-wet. Then daub the optic gently, rotating the swab after

# Section 10: Engraving Machine Cleaning

---

each daub to expose clean cotton to the surface, until the optic is free of visible contamination. At that point, prepare a fresh swab and clean the surface with a gentle zigzag motion across it. Avoid any hard "scrubbing" of the surface, especially while there are visible particles on it, and try not to use repetitive circular motions. When you are done, be careful to remove any cotton threads that may have snagged on the mountings. Allow the optics to dry before you operate your engraver.

## *Cleaning the Bearings and X-Beam*

The bearing system in the laser should be inspected and cleaned about once a week depending on use. Use a soft cloth or cotton swab with some alcohol or similar mild solvent to clean the X-axis beam. Try to wipe clean the inner part of the X-axis beam where the bearings ride. The inside of the beam is accessible and should be kept clean, but our experience shows that with proper exhaust ventilation it will stay very clean by itself.

## *Cleaning the Exhaust*

Make sure the exhaust blower you are using receives proper maintenance. Periodically clean the exhaust blower and duct system to remove built-up debris. If you detect odor while engraving, or if the smoke in the cabinet is visible in the area of the lens carriage, inspect the exhaust system. Check for loose or broken pipe/hose connections, or obstructions. The photos below show where to clean the duct work of your machine. You should also occasionally check your exhaust blower and the duct work that is connected to it.


# Section 10: Engraving Machine Cleaning

---

The photos below show how to clean the plenum, the downdraft ports and the exhaust port at the rear of the machine. While these photos are of a different Epilog model, the concept is identical to the cleaning required of the Zing.



Clean the vents from the inside of the machine. It is best to use a flexible plastic or wire brush that can access the inside of the vent.

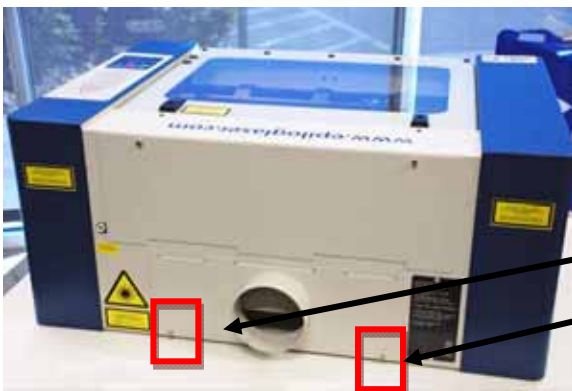

Periodically clean the exhaust plenum at the back of the laser. To access the plenum, remove the two small screws to the left and right of the exhaust port.



Clean the plenum with a flexible plastic or wire brush that can access the inside of the port.

Inspect and clean your exhaust fan and the duct work connected to the port.

# Section 10: Engraving Machine Cleaning

---

## *Laser Tube*

The laser tube used in your system does not have a maximum service life, and there is very little maintenance that is required. At some point in the life of the laser you will need to replace it for gas recharge, electrical repair or mechanical repair. Replacing laser tubes is common practice and Epilog has made the process of changing tubes extremely easy for users to perform with a minimum amount of effort. The laser tubes can be refurbished and are available on an exchange basis by contacting Epilog technical support.

Insure that all of the laser cooling fans are properly working at all times. The fans keep the laser tube cool and prevent it from overheating. An overheated laser tube will produce erratic output and may fail completely.

If the laser system is in a dirty or dusty environment, make sure that the cooling fins on the laser tube are kept free of dust buildup. Use compressed air to blow the dust and debris off of the laser tube fins. **Be sure that the system is unplugged before performing any maintenance on the machine!**

# Section 11: Engraving Machine Calibration / Maintenance

---

## *In This Section*

- Config and Calibration Settings
- 

## *Calibration Settings Using the Keyboard*

There are a number of factory settings that normally only need to be set once at the factory to calibrate the system.

The numerical range of adjustment is shown in the table below. Each single digit change is equal to a half thousandth of an inch - .0005" (0.00125 mm) (except the Laser and Stamp Match values, which are in pixels). For example, changing the X-Home position value from 350 to 395 would move the X-Home position 0.0225 inches (0.55 mm) to the right.

Because the adjustment increments are so small it may be easier to think of the change as a two digit change is equal to 0.001 inch.


## *Config*

The Config key takes you into the factory settings that do not normally need to be reset by the end user. These functions are listed below.

# Section 11: Engraving Machine Calibration / Maintenance

To access and move from one Config setting to another use the following instructions:

1. Press the Config key – **Config Menu:** will appear on the keyboard display.
2. Press the **Focus** key to scroll through the different menu items.
3. Once you reach the menu item you are looking for use the **Up** or **Down** cursor keys to change the value of the item. Press and release the Up or Down keys to change the settings by one unit. Press and hold the Up or Down keys to produce a rapid change of the setting.

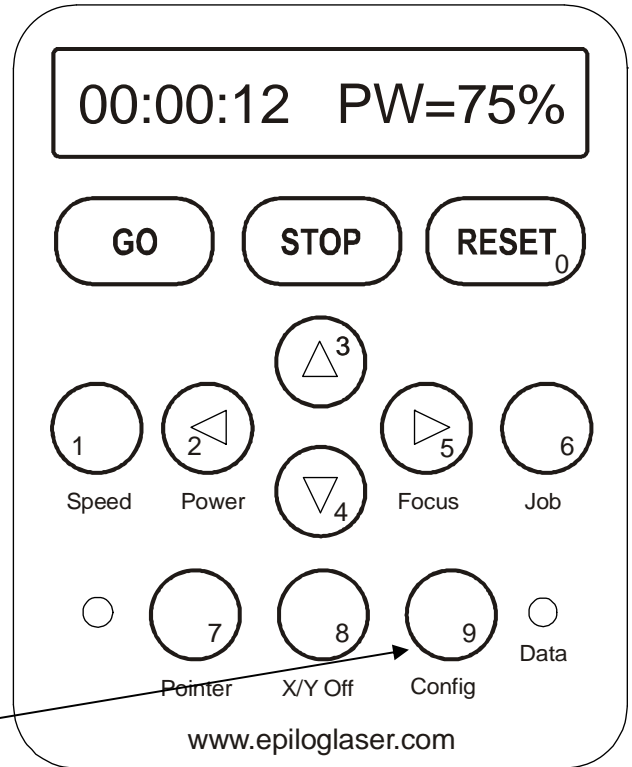

## CONFIG SETTINGS

## RANGE

### X - Home:

Range: +999 to -999

Increasing this value will move X-Home to the left.

### Y - Home:

Range: -100 to +999

Increasing this value will move Y-Home up.

### Laser Match:

Range: -20 to +20

Establishes the left to right vertical alignment of alternating raster lines.

### Stamp Match:

Range: -20 to +20

Establishes the left to right vertical alignment of alternating raster lines for stamp mode.

### Sys Unit:

Range: Inch or mm

Set the units of operation in the laser system to **Inches** or **mm**.



# Section 11: Engraving Machine Calibration / Maintenance

---

In addition to the Config key, there are a couple of hidden calibration settings that are accessed through the keys on the front control panel. These settings are accessed by simultaneously pressing a two key combination. The two key combinations are described below as well as the function to be set.

<u><b>SETTINGS</b></u>	<u><b>TWO KEY COMBINATION</b></u>	<u><b>RANGE</b></u>
<u><b>Laser T.M.</b></u> Activates laser tickle mode. 0 is off, 1 is most common if used.	<u><b>Reset + Up</b></u>	<u><b>Range: 0 to 3</b></u>
<u><b>Laser T.I.</b></u> Activates laser tickle duration. 0 is off, 1 is most common if used.	<u><b>Reset + Down</b></u>	<u><b>Range: 0 to 3</b></u>
<u><b>Auto Delete</b></u> Automatically deletes every job after it has finished running or if the job is stopped and Reset. The factory default is No.	<u><b>Reset + Job</b></u>	<u><b>Range: Yes or No</b></u>
<u><b>Bed Size</b></u> Sets the bed size of your system. This setting should never need to be changed.	<u><b>Reset + Config</b></u>	<u><b>Range: 16 x 12, 24 x 12</b></u>
<u><b>IP Address</b></u> Set your IP Address using this key combination. See the section for Setting IP Address earlier in this manual.	<u><b>Go + Pointer</b></u>	

## ***Changing Calibration settings:***

- Press the two-key combination for the setting you want to change.
- Increase or decrease the numerical value using the Up and Down keys. To speed the process of changing a number, apply constant pressure to the Up or Down key to change the number by units of ten. Single click to change by units of one.
- Press the Go button. The setting is now changed.
- If you want to just see what the setting is, but do not want to change it, press the Stop button after you have viewed the calibration setting.

## Section 11: Engraving Machine Calibration / Maintenance

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# Section 12: Speed and Power Recommendations

---

## *In This Section*

- Engraving Speed
  - Engraving Power
  - Recommendations
  - Multiple Passes
  - Speed and Power Recommendation Tables
- 

## *Engraving Speed*


Speed settings determine the travel speed of the carriage as it moves back and forth in Raster Mode and as it profile cuts in Vector Mode. Speed is adjustable in the print driver in 1% increments from 1 to 100%. The slower the speed, the deeper the engraving or cutting. Speed settings are heavily dependent on the hardness and the thickness of the material being engraved, with harder materials requiring slower speeds for deeper engraving or cutting. In Raster Mode, state-of-the-art optimization software allows the carriage to skip through all white space both horizontally and vertically, increasing laser on-time rates, which further enhances overall throughput.

## *Engraving Power*


This is the amount of laser power that is applied to the material surface. At a given speed, higher power will produce deeper cutting or engraving. Adjustable in 1% increments, the power can be controlled either from your computer or from the control panel on the engraver. Power can also equate to speed. A 35 watt laser can travel faster than a 25 watt laser and achieve the same depth of cut into wood without a subsequent loss in quality. This means you can produce more products faster. A 35 watt laser will also cut through marginally thicker materials than a 25 watt laser.

For your convenience, Epilog provides a database of configuration files on the Epilog Dashboard Drivers and Documents disk that you used to load the Dashboard onto your computer. To load these files, insert your Epilog Dashboard disk and follow the prompts for loading the Material Settings.

# Section 12: Speed and Power Recommendations

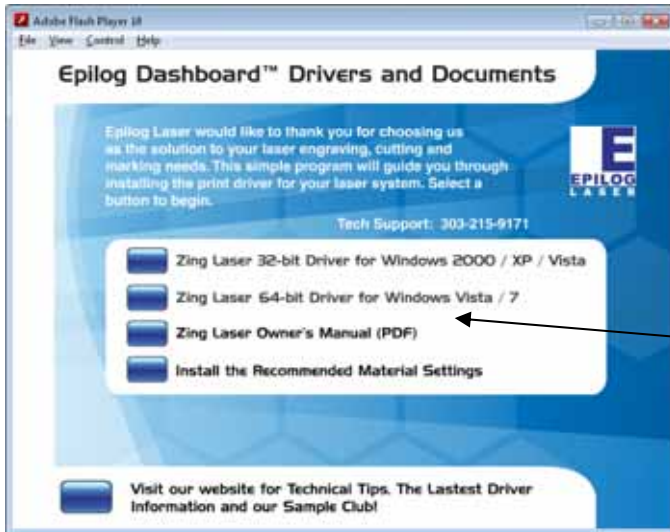

These files can be used and organized just like the configuration files you create yourself.

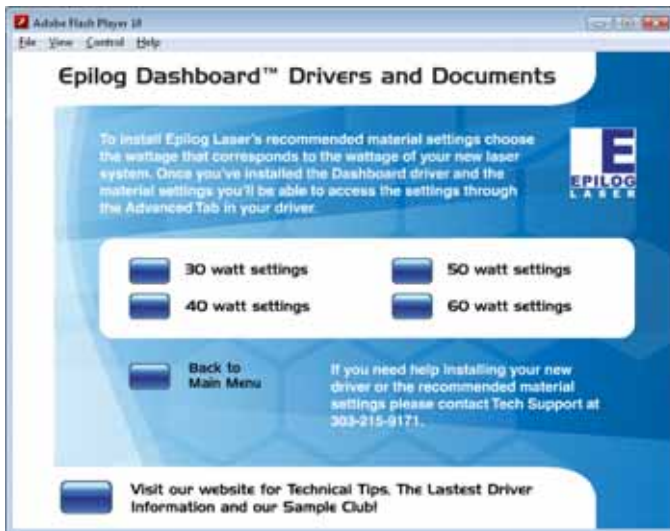

After clicking the Install button, you can select the files that match the wattage of your laser.

# Section 12: Speed and Power Recommendations

---

## *Recommendations*

The Epilog Zing Speed and Power guidelines are included on the following pages. Please remember that these are only guidelines. Depth of cut is a matter of personal preference. As such, there is no “correct” setting. Working with the Speed and Power settings becomes fairly intuitive in a very short period of time for most users. If you have a material that is not listed, try to compare its hardness and feel to some of the materials listed and use the settings of a similar material as your starting point for Speed and Power settings.

The two most basic rules for determining Speed and Power are:

1. Hard materials generally engrave and cut at low speeds and high power.
2. Soft materials generally engrave and cut at high speeds and low power.

Depth will increase if the power is increased, or if the speed is decreased. If you do not achieve the results you are looking for with the following recommended settings, try resending the job and start by changing only the Power setting. If this does not provide the desired results, revert back to the recommended Settings and change the Speed settings. Changing only one variable at a time will help to determine the correct setting for your material. It is easiest to change the speed or power variable in 10% increments when you are experimenting. This will save time and allow you to refine your settings later in 1 or 2% increments.

Because there are many factors that influence the time it takes to engrave or cut a given image, the Speed settings were designed to be reference numbers only. The Speed setting scale of 1% to 100% is not linear – i.e. 100% speed will not be twice as fast as 50% speed. This non-linear scale is very useful in compensating for the different factors that affect engraving time, but using speed to predict a jobs engraving time is not practical.

The Power settings are linear – i.e. 50% power is half as much as 100% power.



***An important note:*** Speed and Power settings can sometimes be confusing because not all materials that *can* be marked at the highest speeds and powers *should* be marked at the highest speed or power. Many users feel that if a mark *can* be made at high speed, it’s just a matter of adjusting the power to produce an acceptable mark. Unfortunately, for some materials, this isn’t always the case. For some materials, the length of time the laser reacts with the material is much more important to producing

# Section 12: Speed and Power Recommendations

---

a good mark than the raw speed of the system or the amount of laser power that is output by the laser.

The interaction of the laser with different materials is a complex process, and this is especially true for some materials that are actually two different materials that have been bonded together. Since the laser interacts differently with each layer of material (and sometimes even the bonding agent), you may be better off slowing the machine down to give the laser time to properly interact with the different layers in the material.

If you have a multi-layered material that you can mark easily, but not well, at high speeds, try lowering the speed to see if that produces a better mark. If you're able to produce a better mark, but it's overpowered, lower the power also.

## *Multiple Passes*

Some materials look better if you make more than one pass. For example, with plastics, some colors – like blue – are very aggressive and tend to leave a shadow on some substrates. It is often easier to make one pass at the recommended speed and power setting, and then make another pass at the same speed, but with a greatly reduced power setting to achieve the desired results. If the material is not moved between passes the alignment of the second pass should be identical to the first pass.

Vector cutting may also require multiple passes. If you find that you cannot cut completely through a material or if you are melting a material in a single pass, try making two or even three passes instead of just one. Some materials are not laser compatible, but can be cut anyway if a gentle touch is used. Some users like to refocus between passes, but this is a matter of personal preference. Multiple passes may also allow you to cut through thicker materials than the laser is rated for.



See how to automatically engrave or cut multiple passes at the end of the *Using the Epilog Dashboard* section of this manual.

## Section 12: Speed and Power Recommendations

### *30 Watt - Epilog Zing*

	250 DPI RASTER ENGRAVING	400 DPI RASTER ENGRAVING	500 DPI RASTER ENGRAVING	VECTOR CUTTING
	SPEED/POWER	SPEED/POWER	SPEED/POWER	SPEED/POWER/FREQUENCY
<b>Wood</b> Cherry – Alder - Walnut	40/100	50/100	60/100	1/8" (3 mm) – 70/70/500 1/4" (6.4 mm) – 15/100/500 (multiple passes may allow cutting of thicker materials)
<b>Acrylic</b>	100/100	100/80	100/60	1/8" (3 mm) – 15/100/5000 1/4" (6.4 mm) – 5/100/5000 (multiple passes may allow cutting of thicker materials)
<b>Anodized Aluminum</b>	100/80	100/70	100/60	N/A
<b>Brass-Painted</b>	100/80	100/70	100/60	N/A
<b>Marbleized Painted Brass</b>	100/90	100/80	100/70	N/A
<b>Corian Or Avonite</b>	10/100	15/100	20/100	1/8" (3 mm) – 30/100/5000
<b>Delrin Seals</b>	100/100	100/80	100/70	50/50/5000
<b>Glass</b>	15/100	20/100	25/100	N/A
<b>Laserable Plastic</b>	100/80	100/70	100/60	50/30/5000
<b>Leather</b>	100/65	100/55	100/45	1/8" (3 mm) - 50/50/500
<b>Marble</b>	8/100	10/100	15/100	N/A
<b>Mat board</b>	100/85	100/75	100/65	30/80/500
<b>Melamine</b>	40/100	50/100	60/100	N/A
<b>Stainless Steel With Cerdec Coating</b>	8/100	10/100	15/100	N/A
<b>Rubber &amp; Rubber Stamps</b>	5/100	10/100	20/100	12/100/100
<b>Rubber &amp; Rubber Stamps</b>	10/100	20/100	30/100	15/100/100

## Section 12: Speed and Power Recommendations

### *40 Watt - Epilog Zing*

	250 DPI RASTER ENGRAVING	400 DPI RASTER ENGRAVING	500 DPI RASTER ENGRAVING	VECTOR CUTTING
	SPEED/POWER	SPEED/POWER	SPEED/POWER	SPEED/POWER/FREQUENCY
<b>Wood Cherry – Alder - Walnut</b>	50/100	60/100	70/100	1/8" (3 mm) – 70/50/500 1/4" (6.4 mm) – 20/100/500 (multiple passes may allow cutting of thicker materials)
<b>Acrylic</b>	100/60	100/50	100/40	1/8" (3 mm) – 20/100/5000 1/4" (6.4 mm) – 10/100/5000 (multiple passes may allow cutting of thicker materials)
<b>Anodized Aluminum</b>	100/70	100/60	100/50	N/A
<b>Brass-Painted</b>	100/70	100/60	100/50	N/A
<b>Marbleized Painted Brass</b>	100/80	100/70	100/60	N/A
<b>Corian Or Avonite</b>	20/100	25/100	30/100	1/8" (3 mm) – 40/100/5000
<b>Delrin Seals</b>	100/70	100/60	100/50	70/50/5000
<b>Glass</b>	20/100	25/100	30/100	N/A
<b>Laserable Plastic</b>	100/70	100/60	100/50	70/30/5000
<b>Leather</b>	100/55	100/45	100/35	1/8" (3 mm) - 70/50/500
<b>Marble</b>	15/100	20/100	25/100	N/A
<b>Mat board</b>	100/75	100/65	100/55	30/50/500
<b>Melamine</b>	50/100	60/100	70/100	N/A
<b>Stainless Steel With Cerdec Coating</b>	10/100	15/100	20/100	N/A
<b>Rubber &amp; Rubber Stamps</b>	10/100	20/100	30/100	15/100/100



## Section 12: Speed and Power Recommendations

### *50 Watt - Epilog Zing*

	250 DPI RASTER ENGRAVING	400 DPI RASTER ENGRAVING	500 DPI RASTER ENGRAVING	VECTOR CUTTING
	SPEED/POWER	SPEED/POWER	SPEED/POWER	SPEED/POWER/FREQUENCY
<b>Wood Cherry – Alder - Walnut</b>	60/100	70/100	80/100	1/8" (3 mm) – 70/30/500 1/4" (6.4 mm) – 40/100/500 (multiple passes may allow cutting of thicker materials)
<b>Acrylic</b>	100/50	100/40	100/30	1/8" (3 mm) – 40/100/5000 1/4" (6.4 mm) – 25/100/5000 (multiple passes may allow cutting of thicker materials)
<b>Anodized Aluminum</b>	100/60	100/50	100/40	N/A
<b>Brass-Painted</b>	100/70	100/60	100/50	N/A
<b>Marbleized Painted Brass</b>	100/70	100/60	100/50	N/A
<b>Corian Or Avonite</b>	20/100	25/100	30/100	1/8" (3 mm) – 50/100/5000
<b>Delrin Seals</b>	100/60	100/50	100/40	80/50/5000
<b>Glass</b>	30/100	40/100	50/100	N/A
<b>Laserable Plastic</b>	100/60	100/50	100/40	80/30/5000
<b>Leather</b>	100/45	100/40	100/35	1/8" (3 mm) - 80/30/500
<b>Marble</b>	20/100	25/100	30/100	N/A
<b>Mat board</b>	100/65	100/55	100/45	40/50/500
<b>Melamine</b>	60/100	70/100	80/100	N/A
<b>Stainless Steel With Cerdec Coating</b>	25/100	35/100	40/100	N/A
<b>Rubber &amp; Rubber Stamps</b>	20/100	30/100	40/100	20/100/100

## Section 12: Speed and Power Recommendations

### *60 Watt - Epilog Zing*

	250 DPI RASTER ENGRAVING	400 DPI RASTER ENGRAVING	500 DPI RASTER ENGRAVING	VECTOR CUTTING
	SPEED/POWER	SPEED/POWER	SPEED/POWER	SPEED/POWER/FREQUENCY
<b>Wood Cherry – Alder - Walnut</b>	50/100	60/100	70/100	1/8" (3 mm) – 70/25/500 1/4" (6.4 mm) – 50/100/500 (multiple passes may allow cutting of thicker materials)
<b>Acrylic</b>	100/40	100/30	100/20	1/8" (3 mm) – 50/100/5000 1/4" (6.4 mm) – 30/100/5000 (multiple passes may allow cutting of thicker materials)
<b>Anodized Aluminum</b>	100/50	100/40	100/30	N/A
<b>Brass-Painted</b>	100/70	100/60	100/50	N/A
<b>Marbleized Painted Brass</b>	100/60	100/50	100/40	N/A
<b>Corian Or Avonite</b>	20/100	25/100	30/100	1/8" (3 mm) – 60/100/5000
<b>Delrin Seals</b>	100/50	100/40	100/30	90/50/5000
<b>Glass</b>	40/100	50/100	60/100	N/A
<b>Laserable Plastic</b>	100/50	100/40	100/30	90/30/5000
<b>Leather</b>	100/35	100/30	100/25	1/8" (3 mm) - 90/30/500
<b>Marble</b>	25/100	30/100	35/100	N/A
<b>Mat board</b>	100/55	100/45	100/35	50/50/500
<b>Melamine</b>	70/100	80/100	90/100	N/A
<b>Stainless Steel With Cerdec Coating</b>	30/100	35/100	50/100	N/A
<b>Rubber &amp; Rubber Stamps</b>	30/100	40/100	50/100	25/100/100

# Section 13: Material Engraving Techniques

---

## *In This Section*

- Acrylic
  - Anodized Aluminum
  - Brass – Painted
  - Glass
  - Notary Seals – Delrin
  - Plastic
  - Rubber Stamps
  - Wood
- 



Your Epilog Laser system is very versatile. It can mark and cut many different materials. Following is information regarding some of the materials the laser will mark and cut. Check the Epilog website [www.epiloglaser.com](http://www.epiloglaser.com) periodically for new laser applications, tips, and techniques to use with your laser. For specific information regarding materials not mentioned below, please contact your local Epilog representative for information.

## *Acrylic*



***Fire Warning!***



Your laser system uses a high intensity beam of light that can generate extremely high temperatures when it comes into contact with the material being engraved, marked or cut. Some materials are extremely flammable and can easily ignite and burst into open flame setting the machine afire. This open flame is very dangerous and has the potential to destroy not only the machine, but the building in which it is housed.

Experience shows that vector cutting with the laser has the most potential to create an open flame. Many materials are susceptible to igniting, but acrylic, in all its different forms, has been shown to be especially flammable when vector cutting with the laser.

# Section 13: Material Engraving Techniques

---

Please read the following warnings and recommendations and follow them closely at all times!

- NEVER let the laser system operate if it will be unattended.
- KEEP the area around the machine clean and free of clutter, combustible materials, explosives, or volatile solvents such as acetone, alcohol, or gasoline.
- ALWAYS keep a properly maintained and inspected fire extinguisher on hand. Epilog recommends a Halotron fire extinguisher or a multi-purpose dry chemical fire extinguisher. The Halotron extinguishers are more expensive than a dry chemical, but offer certain advantages should you ever need to use an extinguisher. The Halotron extinguisher discharges a clean, easily removable substance that is not harmful to the mechanics or wiring of the laser system. The dry chemical extinguisher discharges a sticky, corrosive powder that is very difficult to clean up.
- ALWAYS use the air curtain when vector cutting.
- BE CAREFUL! when vector cutting. Many materials have the potential to burst suddenly into flames – even materials that may be very familiar to the user. Always monitor the machine when it is operating.
- KEEP YOUR LASER SYSTEM CLEAN – A build up of cutting and engraving residue and debris is dangerous and can create a fire hazard in its own right. Keep your laser system clean and free of debris. Regularly remove the vector grid to clean any small pieces that have fallen through the grid.

Next to wood, acrylic is the most popular material to use with laser systems. It engraves and cuts very easily, is available in a wide variety of shapes and sizes, and can be relatively inexpensive.

Acrylic comes in two forms, Cast and Extruded. Cast Acrylic is used for almost all engraving purposes because the frost produced when lasered provides a nice white contrast against the clear material. Extruded Acrylic remains clear when engraved and does not produce an adequate contrast.

Extruded Acrylic on the other hand is ideal if you are only going to vector cut. Extruded is less expensive than cast and also has a lower melting point that produces an almost flame finished edge when cut with the laser.

# Section 13: Material Engraving Techniques

---

## *Acrylic Engraving Techniques*

Most acrylic is engraved on the backside to produce a look through effect from the front surface. Remove the back protective cover layer before engraving. Leave the top protective cover layer on so that it remains intact to prevent scratching while handling the acrylic. Since you are engraving the backside of the acrylic, you will need to reverse or mirror your artwork before sending the job to the laser.

Engrave the acrylic at a high speed and low power. A small amount of power is all it takes to mark acrylic and high power levels tend to distort the acrylic when engraving.

There are a large number of acrylic products that are painted on one side to add color to the clear acrylic piece. You can engrave directly through the paint into the acrylic for a very nice presentation effect. Leave the speed the same as if you are engraving clear acrylic and turn up the power about 10% to get cleanly through the paint. Applying too much power to the paint will melt it and cause distortion.

## *Acrylic Vector Cutting Techniques*

Acrylic is one of the most popular cutting materials available. It comes in a variety of colors and thickness. Laser cutting produces very nice edge quality without the need for polishing or secondary clean up.



Use the optional Vector Grid to elevate the acrylic before cutting. The air curtain will greatly reduce flaming when cutting acrylic and should always be used for this material.

Vectoring acrylic is similar to vectoring other materials. First, experiment to determine the correct speed and power setting. Cutting acrylic is usually best achieved with relatively slow speed and relatively high power. This combination allows the laser beam to melt the edges of the acrylic and produce an almost flame polished edge. Acrylics generally require only a single pass to cut, but thicker acrylics may need two passes. As with engraving, it is sometimes necessary to mask and dampen the acrylic before cutting.



**Warning!** Never leave your laser unattended when vector cutting any material! Acrylic is very flammable.

# Section 13: Material Engraving Techniques

---

## *Anodized Aluminum*

Anodized aluminum comes in a variety of colors and can usually be easily engraved with a CO2 laser. Black anodized aluminum is great to work with because it turns white when lasered. Black anodize provides the best contrast of all of the colors of anodized aluminum. Some colors of anodize – red for instance – will not turn completely white when laser engraved. Red anodize will produce a light pink color. Performing a second pass can see some improvement but usually a slight shadow of color will remain.

Engrave anodized aluminum at high speeds and low powers for crisp, clean images. Too much power applied to the anodized coating will distort the engraving and tends to over-burn the image.



**Warning!** Metals are reflective, and using full power will potentially cause damage to the machine.

## *Brass - Painted*

### *Brass Background*

Un-coated brass cannot be laser engraved. In order to engrave brass with a laser you need to use brass that has some sort of coating – typically paint. The laser removes the paint and exposes the brass substrate. There are three basic types of engraving brass available to engravers but they are not all compatible with the laser.

By far, the most popular laser brass is actually brass-coated steel. First, a steel substrate is coated with a thin layer of brass. Next, the brass is polished to a reflective finish and a coat of lacquer is applied to the brass – Victory's LaserBrite™ product has a lacquer finish. Finally, a paint coating is applied on top of the lacquer for the finished product. When laser engraving brass-coated steel, you are removing only the paint and exposing the polished brass coating that is protected by the lacquer. The lacquer prevents the brass from oxidizing and the bright reflective surface will stay bright for years.

Some manufacturers also sell painted brass that is solid brass, not brass coated steel. If the brass is polished before the paint is applied you will have a nice reflective engraved surface. If the brass is not polished, the result will be a dull, tarnished brass that will require a secondary polishing process after laser engraving. This is time

# Section 13: Material Engraving Techniques

---

consuming and most engravers do not want to spend the time and effort necessary to turn this into an acceptable product.



**Note** - Always ask before lasering painted brass if you don't know what the substrate is! If you are unsure if the piece that you have is brass-coated steel or brass, you can test the material with a magnet. A magnet will stick readily to brass-coated steel, but since solid brass is not magnetic, a magnet will fall helplessly away from solid brass.

## *Painted Brass Engraving Techniques*

Engrave painted brass at high speed and low power. It takes very little power to remove the paint coating and too much power will melt the paint and distort the image. If you are producing engraving that appears to be “fat” or has a balloon appearance to it, you are probably using too much power. Reducing the power will bring back the nice sharp images that are normally produced with painted brass.



**Note** - Use caution when trying to engrave brass coated pens. Many pens have a very hard epoxy paint that is completely unacceptable for CO2 laser engraving. You should only use pens that you have experimented with or that are specifically designed for CO2 laser engraving. Be aware that there are many pens that can be laser engraved with a YAG laser but these pens are usually not compatible with the CO2 laser that you are using.

Some pens are “almost” CO2 laser engravable. If you engrave through the paint and there is a slight shadow remaining, try to clean the engraved area with alcohol or lacquer thinner. Depending on the paint, there is a good chance that the shadow will disappear and an excellent engraving result achieved.

Use caution when trying to engrave blue painted brass. Blue paints contain very aggressive pigments that penetrate the metal surface and it can be extremely difficult to remove all of the blue color, but again, try alcohol or lacquer thinner to remove the shadow.

# Section 13: Material Engraving Techniques

---

## *Glass*

### *Glass Background*

When a laser strikes glass it fractures the surface but it will not engrave deeply or remove material. The fracturing of the glass surface will produce a frosted appearance but can cause roughness and chipping depending on the type of glass being engraved. While the frosted appearance is desired the roughness and chipping are not. Below, we explain how to eliminate the roughness and produce a very smooth frosted finish.

The composition and quality of glass varies widely and you cannot always predict the effect that you will achieve. It is always best to experiment with an unfamiliar glass source. Generally speaking, flat glass tends to have a very consistent hardness throughout, and the engraved areas do not tend to have lighter and darker areas. Bottles on the other hand, tend to have soft and hard spots that will cause the engraved area to appear lightly frosted in one area and heavily frosted in another. Engraving at medium speed and high power will somewhat compensate for this, as will two or more engraving passes.

While the laser beam itself is very hot, the heat does not build up easily and it should not prevent you from engraving onto full bottles of wine, champagne or other filled glass bottles. Laser engraving filled bottles is a very popular method of creating custom presentations for special occasions. The laser will not damage the liquid inside the bottle, and as long as you are not completely engraving away a large section of bottle you have very little chance of breaking the bottle.

### *Glass Engraving Techniques*



To produce a smooth frosted finish, follow this procedure:

- Using your finger or a paper towel, apply a thin coat of liquid dish soap – any kind will do – over the area to be engraved.
- Cut a piece of newspaper or paper towel a little larger than the area to be engraved. Completely soak the paper with water then wring out the excess water.
- Apply the paper to the glass and smooth out the paper so that there are no wrinkles.
- Place the glass into the engraver and laser through the paper while it is still wet.



# Section 13: Material Engraving Techniques

---

- Remove the glass, discard the remaining paper, and clean the glass.
- If necessary, gently polish the glass with a ScotchBrite pad.



*Note* - You need to be especially careful when laser engraving leaded crystal. The lead in the crystal expands at a different rate than the crystal does and this can cause cracking and breakage of the crystal. Using a lower power setting can help this problem, but we always recommend having a spare in case of breakage.

## *Combining Laser Engraving with Sandblasting*

Combining the best of both processes, you can use your laser to engrave the artwork then use sandblasting to provide a deep etch into glass. Using the laser to create the artwork mask is an ideal process for one-of-a-kind custom pieces as well as large production runs. This eliminates the photo process usually associated with sandblast mask.

- Apply an adhesive backed mask material to the glass that you are going to engrave.
- Laser completely through the mask and into the glass.
- Remove the glass from the engraver and sandblast to the desired depth.
- You now have a sandblasted glass presentation with the detail of laser engraving!

# Section 13: Material Engraving Techniques

---

## *Notary Seals - Delrin*

### *Notary Seals Engraving Techniques*


Notary seals can be easily manufactured using 1/16-inch (1.5 mm) thick delrin plastic. A seal consists of two pieces - a male die and a female die, both shown below. The male die consists of white lettering on a black background and the female die is an inverted and mirrored image of the male. Inverting and mirroring are easily accomplished in most graphics software packages. Simply duplicate the male die, then invert the black and white colors and then mirror the image.

The male image should be produced without the use of outlines around the text or graphics. Add a .007 to .010 inch (0.178 mm to 0.254 mm) outline to the text and graphics of the female die. This outline creates a large enough void between the male and female dies to emboss paper without tearing.

Apply a .001 outline around the seal to define the outside edge of the seal. Use the Combined mode to first raster engrave the seal and then vector cut out the seal.



Male Artwork

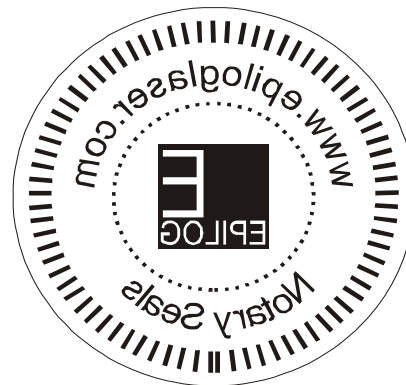

Female Artwork

# Section 13: Material Engraving Techniques

---

## *Plastic*

### *Plastic Background*

Engraving plastics have changed greatly in the past few years. Before lasers, plastic manufacturers designed plastic for rotary engraving systems. A rotary engraving system uses a mechanical spinning bit to remove material. Therefore the depth of the top layer or “cap sheet” was designed to make it easy to rotary engrave. Cap sheet thickness was approximately .010 inches (0.254 mm) thick and laser engraving was nearly impossible because by the time you applied enough power to get through the cap sheet the laser melted and deformed the plastic.

Plastic manufacturers have developed a broad range of plastics that have thinner cap sheets that are .002 to .003 inches (0.051 mm to 0.076 mm) thick that provide much better engraving and cutting characteristics. These plastics are commonly referred to as Micro Laminates; Micro surfaced, or simply laser engravable plastics. These plastics are generally very easy to engrave with a laser since they all have similar characteristics.

Because there is such a broad range of plastics it is necessary to experiment to determine if a particular type of plastic is laser compatible. Different color plastics, even if they are from the same manufacturer will have unique speed and power settings. Use the guidelines in this manual as a starting point when determining the correct speed and power settings. If you do not get acceptable initial results with the recommended speed and power settings start experimenting by first changing only the power setting. If adjusting the power setting does not work, start over and adjust only the speed setting. Once you have acceptable results, record those settings for that particular plastic so that you do not have to repeat the experimentation process.

### *Plastic Engraving Techniques*

Always remove the clear protective cover layer before engraving.

Once you have the correct speed and power settings you can improve your engraving results even more by taking the focus lens out of focus (lower the table) by about 1/16 (1.5 mm) of an inch. This technique enlarges the focus beam a little bit and provides more beam overlap on each pass of the laser. The greater overlap produces a smoother engraved surface on the plastic and eliminates the grooves that you sometimes see when engraving plastic.

## Section 13: Material Engraving Techniques

---

With some plastics it is best to engrave using two passes. The first pass cuts through the cap layer and the second pass cleans away the residue that some plastics leave behind.

Another technique that can be useful is to mask the plastic before engraving with transfer or masking tape. This will prevent a buildup of residue on the plastic surface. Misting the transfer tape with water will reduce heat buildup and melting on sensitive plastics.

### *Plastic Vector Cutting Techniques*

Use a Vector Grid to elevate the plastic before cutting. The Air Curtain will greatly reduce flaming when cutting plastic.

Vectoring plastics is similar to vectoring other materials. First, experiment to determine if the plastic can be cut with the laser. Plastics that are up to 1/16 inch thick can usually be cut in a single pass. Thicker plastics may need two passes.

As with engraving, it is sometimes necessary to mask and dampen the plastic before cutting. Even masking and wetting both front and backsides of the plastic is desirable on sensitive plastics that have very low melting points.



**WARNING!** Never leave your laser unattended when vector cutting plastics! Plastic can be very flammable.



**WARNING!** Do not engrave PVC (Polyvinyl Chloride). PVC will destroy the optics and mechanics of your Epilog system. Cutting or engraving PVC will void your warranty.

# Section 13: Material Engraving Techniques

---

## *Rubber Stamps*

### *Engraving Rubber Stamps*

The Dashboard includes settings for producing rubber stamps. Unique stamp attributes are controlled from the driver including, Speed and Power settings, Shoulders, Widening, and more.

Processing rubber stamp files requires a two step process. First, the computer must process the file to add the shoulders and widening. The second step involves transferring the data to the laser (Printing). Old, slow computers should not be used for this application. If it seems like it takes forever to print the stamp file to the laser you should consider upgrading your computer.

Many users like to create whole sheets of stamps in a single job. After processing, these files can get quite large (50 to 100 MB in size). Epilog has developed sophisticated technology that allows you to print virtually any size stamp file to the laser without fear of going over the 64 MB memory limit in the laser system.


### *Creating Your Layout for Stamps*

The Epilog Dashboard offers two different ways to set up a stamp file. The artwork for a stamp file needs to be set up so that the background of the image will be engraved away and the words and letters remain standing. The two ways of setting up a stamp file are determined by the method you use to define the area that is to be engraved away.

# Section 13: Material Engraving Techniques

---


## Fence Method

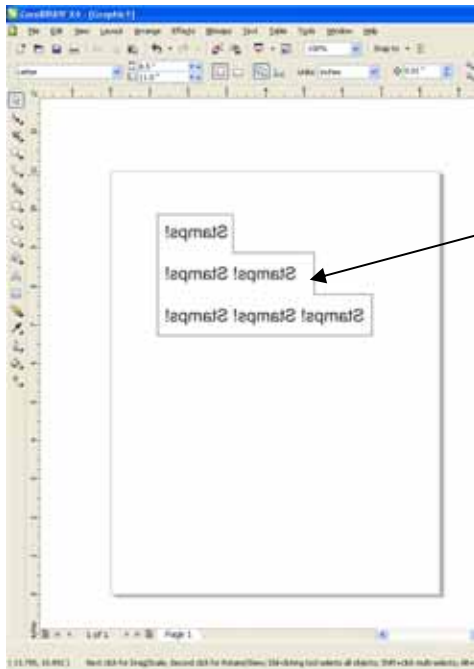

The Fence method uses a *closed outline* to define the area to be engraved away. This image shows the stair-step outline of a Fence enclosing the words to be stamped. The laser will engrave away only the background area outlined by the Fence (leaving the letters standing, of course!).

This method is useful because it allows you to be very precise about how much background you are going to engrave away, saving time and material.

## Page Size Method

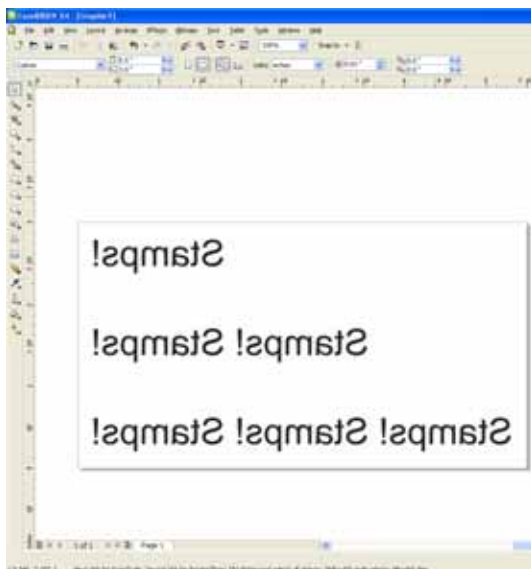

Some software programs do not recognize closed outlines. For these programs (Illustrator and some third party custom stamp packages) you need to use the page size to define the area that will be engraved away. This is not as efficient as the fence method, but it works just as well.

The laser will engrave away the entire background of the page (leaving the letters standing, of course!).

# Section 13: Material Engraving Techniques

---

You will tell the engraver which method you are using when you go to the Dashboard to print. After clicking on Stamp mode, you will want to use the Fence box to determine which method you are using.



A check in the Fence box tells the engraver you are going to use a fence to define the area to be engraved away.

No check indicates that you are using the page size to define the background area to be engraved away.

## Text and Graphics

Set up your artwork in Corel so that your computer image looks like the image that you want to stamp. Areas to be stamped should be black, with the area to be removed white. Any kind of text and/or graphics can be used. Scanned images, clipart, etc are all acceptable graphics for use in stamps. Raster Speed & Power settings determine the depth of engraving. "MIRROR" your design in your graphics software package such as CorelDraw before printing.

## Vector Cut Line



Any object within the fence with a line weight of .001 (0.025 mm) to .007 inches (0.175 mm) will be vector cut when in Combined Mode. This is a handy feature that allows the laser to cut out the stamp instead of using scissors to cut out the stamp after the stamp has been engraved. Vector Speed & Power settings determine the depth of the vector cut. Setting the Frequency below 100 provides a perforation. The perforation keeps the Stamp attached to the rubber sheet and makes cleaning easy while allowing the user to easily remove the stamp from the sheet when it is ready for mounting.

# Section 13: Material Engraving Techniques

---

## Fence

The fence defines the outer boundaries of the area to be engraved. The fence must be .001 inch (.025 mm) thick. The fence can be any closed polygon or ellipse. Rectangles, circles, ovals, etc are all acceptable fences, but they must be closed. Multiple stamps, with multiple cut lines can be placed within a single fence. There can only be one fence on the page that is sent to the engraver. Multiple fences will cause unpredictable behavior. The following drawing shows three different types of acceptable fences for engraving stamps. The fences are all closed geometric shapes.

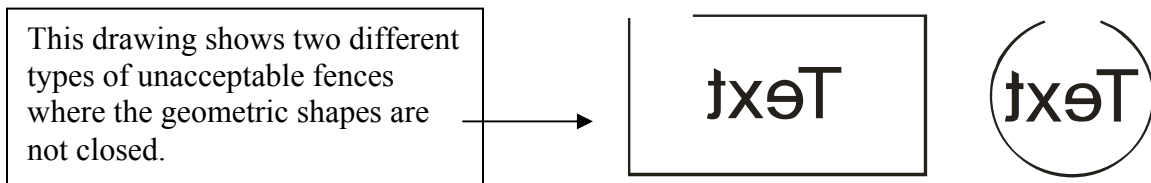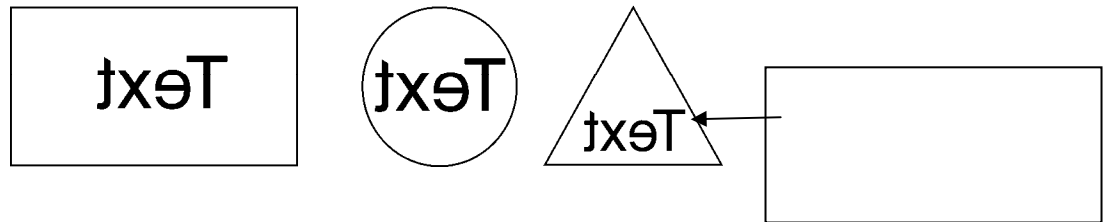





# Section 13: Material Engraving Techniques

## CORRECT SETUP USING A FENCE IN COMBINED MODE


Correct Example #1 –  
Creating a single stamp  
with a vector cut line.

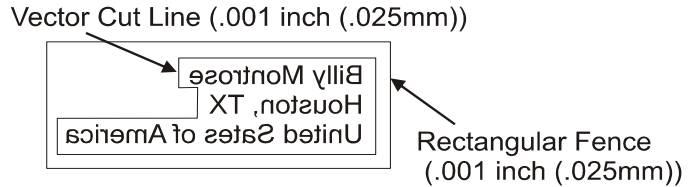

Correct Example #2 –  
Creating a single stamp  
with a vector cut line.

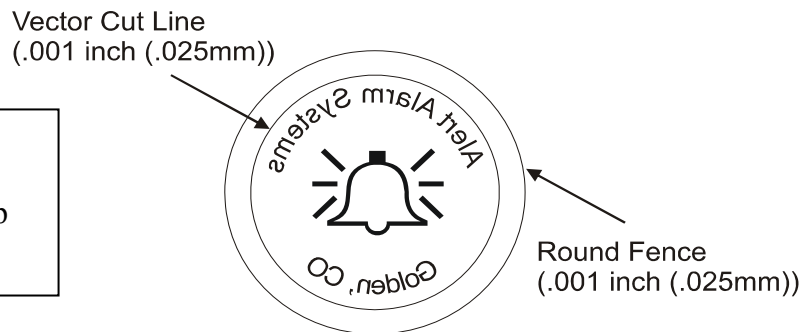

Correct Example #3 –  
Creating multiple stamps  
with vector cut lines.

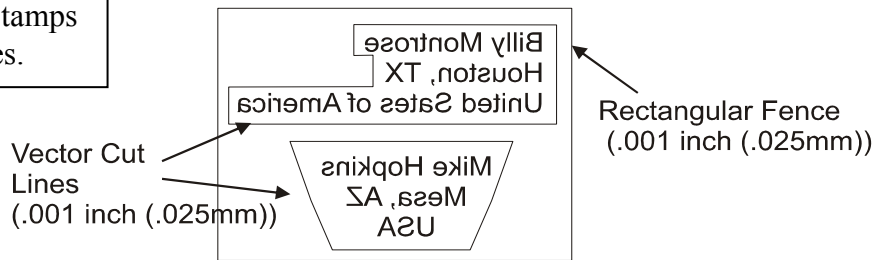

Use only one fence to  
surround all stamps on  
the page.

# Section 13: Material Engraving Techniques

## INCORRECT SETUP USING A FENCE IN COMBINED MODE


Incorrect Example # 1 –

The stamp is missing a fence.


Billy Montrose  
Houston, TX  
United States of America

Incorrect Example # 2 –

This setup contains multiple fences.

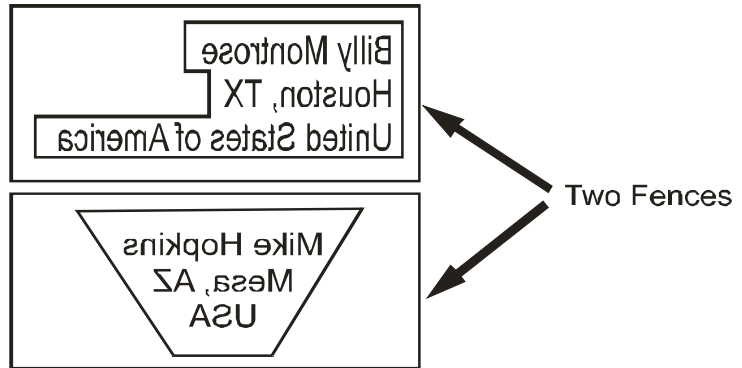

## CORRECT SETUP WHEN USING PAGE SIZE IN COMBINED MODE

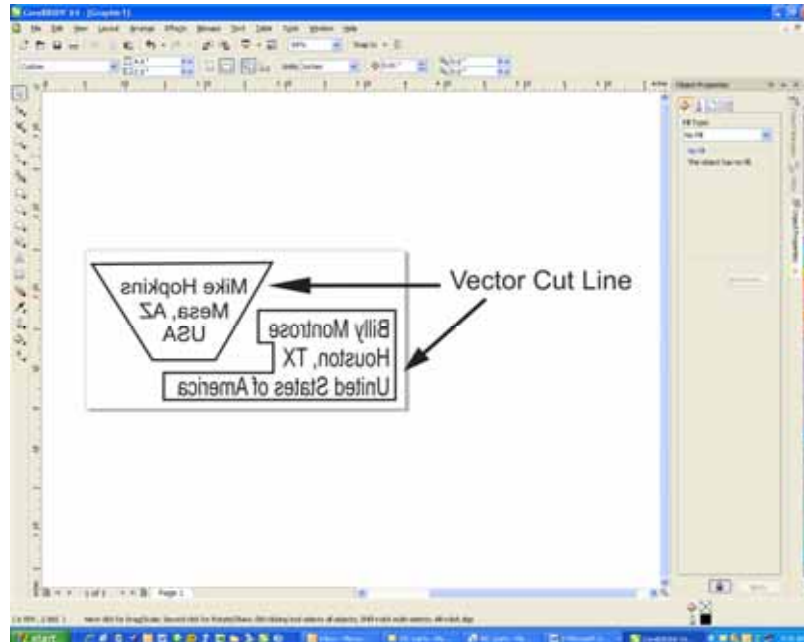

If you are using the page size method, simply nest your stamps so you are most efficient with your engraving. Any line of .001 inch (.025 mm) will be vector cut.

Once you have successfully set up your stamp artwork, you are ready to print your design. In the Dashboard go to the Advanced tab:

# Section 13: Material Engraving Techniques

Select **Stamp** from the *Raster Type*: menu.

With Stamp mode selected you can change the Shoulder and Widening settings (explained below).

It is best to Mirror your stamp in your software application. The Mirror function in the Dashboard mirrors everything but lines to be vector cut.




Check the Fence box if necessary.

## *Dashboard Stamp Settings*


### Shoulder

The Shoulder setting in the Dashboard adjusts the angle of the shoulders of your characters. A higher shoulder number provides a wider angle and more support for the characters. The following drawing shows a side view of a character with the shoulders set to 6, 25 and 50. Many users feel the default setting of 25 is ideal.

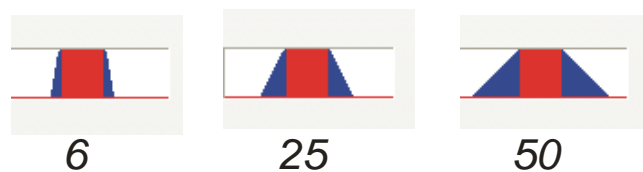

### Widening

The Widening setting in the Dashboard adjusts the width of the character at its top. A higher Widening number provides a bolder character. The following drawing shows a side view of the difference in characters when their widening set to 1 or 6. (Note that the Shoulder doesn't change). Many users feel the default setting of 1 is ideal.

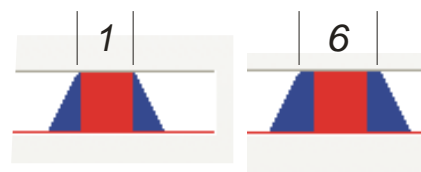

# Section 13: Material Engraving Techniques

---

## **Stamp Match**

The last setting that you *may* need to make is made from the laser's control panel. The Stamp Match setting is defaulted to 0 which is ideal for most stamp applications. If you notice that there is a little jaggedness at the edges of your stamp letters, adjust the Stamp Match by one or two digits (either up to 1 or 2, or down to -1 or -2 etc). This feature fine tunes the left to right alignment of each raster line and should straighten out any rough edges that may appear. This is a setting that once set should never need to be changed again. To change the Stamp Match setting, refer to the *Engraving Machine Calibration / Maintenance* section in this manual.



# Section 13: Material Engraving Techniques

---

## *Wood*

- Solid Wood
- Manufactured Wood Products
- Engraving
- Vector Cutting
- Cleaning
- Color Filling

### *Solid Wood*

Wood is by far the most laser friendly material available. It can be engraved or cut very easily. When engraved, lighter colored woods like Cherry or Maple produce very nice contrast where the laser burns away the wood. This high visual contrast is what makes lighter woods so popular when combined with a laser. There are many types of other wood products that are designed for use with the laser and many more that are waiting to be discovered by you.

Every type of wood has its own characteristics. Some wood is denser than other wood, with the denser, harder woods requiring more laser power to cut or engrave. Epilog recommends that when working with wood other than the ones listed in this section that you investigate the engraving and cutting characteristics before committing to use. There are woodworking shops in nearly every large city that will have a wealth of information on nearly all woods. If you have access to the Internet, search on wood to see what you find.

The most common woods used with the laser are Cherry, Walnut, Maple, Alder, & Oak. These woods are considered hard woods, and have grains that work well with lasers. Grain can vary greatly in density. Cherry, Alder, Walnut & Maple all have fairly little veins of grain in them, while Oak has medium to large veins in it. For example: If a large box was engraved into a piece of Cherry and a piece of Oak, the box engraved into the Cherry would have a very uniform appearance, the area engraved or the background would be smooth with little variation in height. The Oak on the other hand would vary greatly in height and have a very non-uniform appearance.

Epilog laser systems can engrave in very fine detail. The spot size ranges from .003” (0.08mm) to .008” (0.02 mm) of an inch in diameter, and, if there are large variations in the material that one is engraving into it will greatly affect the quality of the finished piece. Therefore the majority of laser users will stick with Cherry, Alder, Walnut or Maple.

# Section 13: Material Engraving Techniques

---

The differences between Cherry and Alder are little. The grain, color and densities are nearly identical. The color of these two woods is a light red. We recommend stains that are clear allowing the natural color to show through. Alder isn't quite as expensive as Cherry and it is a little more readily available. Walnut is a dark brown in color and has a greater density than either Cherry or Alder. Maple is light blonde in color and has a density that is even greater than Walnut. It is important to mention the density, because it will take a little more laser power to cut and to engrave to the same depth in woods that have greater densities.

## *Manufactured Wood Products*

### Plywood

Standard building grade plywood is a material that usually does not produce an acceptable result when engraved. It is also a very difficult material to cut. Plywood is constructed of layers of wood glued together. Since the grain of the wood chips in the plywood run in different directions it is difficult to obtain a consistent depth when engraving. Air bubbles within the plywood cause problems because they severely disrupt the laser beam when cutting. Because of the air bubbles and other factors it is virtually impossible to cut cleanly through plywood.

There are specialty plywood products that can be found in hobby shops or specialty wood stores that will engrave and cut much nicer than standard plywood products purchased through your local lumber supplier.

## *Wood Engraving Techniques*

To create a quality image on wood, contrast and depth are desired. The higher the power levels, the higher the contrast and depth will be.

*Speed and Power Settings* - Wood is a great material to laser engrave because it discolors when engraved and the depth of engraving is greater than most materials. The downside is that it takes a lot of power to deeply engrave wood at high speeds. Most wood can be engraved using full power no matter whether you are using a 25-watt laser or a 120-watt laser. Depending on the wattage of your laser, the best approach is to set the laser power at 100% and adjust the speed to obtain the desired depth.

*Resolution Settings* – Wood is a very easy material to work with and you can produce very nice detail with as little as 300 DPI engraving. 500 DPI engraving into wood produces fabulous results.

# Section 13: Material Engraving Techniques

---

***Grey Scales*** – Grey scales look wonderful when engraved into wood. The reason for this is that the wood will react much differently to each level of gray scale, providing amazing contrast. Experiment! Take a piece of clipart and ungroup it and change the colors so that they range from a dark color like red, to a light color like yellow, then engrave it. This will create a shading effect that is almost 3-D in its appearance.

## ***Wood Vector Cutting Techniques***

Epilog Laser Systems are ideal for cutting through solid wood material. The thickness of the wood that you can cut varies with the wattage of the laser and the hardness of the wood, but in general you can cut approximately ¼ inch ( 3mm) wood with a 25-watt laser and up to ½ inch ( 6 mm) wood with a 120-watt laser.

As with any application there are techniques that will greatly enhance the success of your vectoring of any material. When cutting wood of any thickness, Epilog recommends the use of the Air Curtain and Optional Vector Grid. The Vector Grid raises the wood off of the solid metal engraving table and supports the wood on an aluminum grid. The grid greatly reduces backside burning of the wood and also provides ventilation that allows the fumes and smoke to be exhausted to the rear of the engraving cabinet. Information regarding accessing the Vector Grid is located in the ***Standard & Optional Machine Features*** section of this manual



The Air Curtain greatly reduces flaming that may occur if too much laser power is applied to the wood piece being cut.

Depending on the type of wood being vector cut, it is sometimes advantageous to apply a cover of masking or transfer tape to the surface before cutting. The masking tape will reduce residue buildup on the top surface of the wood surrounding the cut line.



***Warning:*** Wood is a combustible material. Never leave your laser unattended while vector cutting any material. The Air Curtain greatly reduces flaming that may occur if too much laser power is applied to the wood piece being cut.

Please read the following warnings and recommendations and follow them closely at all times!

- ***NEVER*** let the laser system operate if it will be unattended.
- ***KEEP*** the area around the machine clean and free of clutter, combustible materials, explosives, or volatile solvents such as acetone, alcohol, or gasoline.

## Section 13: Material Engraving Techniques

---

- **ALWAYS** keep a properly maintained and inspected fire extinguisher on hand. Epilog recommends a Halotron fire extinguisher or a multi-purpose dry chemical fire extinguisher. The Halotron extinguishers are more expensive than a dry chemical, but offer certain advantages should you ever need to use an extinguisher. The Halotron extinguisher discharges a clean, easily removable substance that is not harmful to the mechanics or wiring of the laser system. The dry chemical extinguisher discharges a sticky, corrosive powder that is very difficult to clean up.
- **ALWAYS** use the Air Curtain when vector cutting.
- **BE CAREFUL!** when vector cutting. Many materials have the potential to burst suddenly into flames – even materials that may be very familiar to the user. Always monitor the machine when it is operating.
- **KEEP YOUR LASER SYSTEM CLEAN** – A build up of cutting and engraving residue and debris is dangerous and can create a fire hazard in its own right. Keep your laser system clean and free of debris. Regularly remove the vector grid to clean any small pieces that have fallen through the grid.

### *Wood Cleaning Techniques*

When laser engraving or cutting wood, resin in the wood comes to the surface, mixes with the smoke and is deposited as a residue. If the wood has a coating of polyurethane or lacquer the coating protects the surface of the wood from the resin/smoke damage. You can remove the resin from coated materials with a wet chamois or a sponge with a web cover. Some people like to use 409, Windex or other mild cleaning product, but water works well and is usually the most readily available wetting agent. The chamois that Epilog recommends has a sponge in the middle of it, and is available in the automotive car wash section of many Target stores or many automotive supply shops.

If the wood is not coated with polyurethane, the resin and smoke will stain the surface and you will need to sand the surface to remove the resin.

Never use a paper towel to clean the wood surface. The paper towel will shred and it is impossible to get the shredded fibers out of the engraved recesses of the wood. Most wood products that are designed for laser engraving will have a polyurethane coating so that they are very easy to clean.



# Section 13: Material Engraving Techniques

---

## *Wood Color Filling Techniques*

Color filling engraved areas of wood adds either greater contrast or a splash of color to your wood presentation. Normally, color filling is not required for lighter colored wood materials such as maple or cherry, but walnut can often benefit from adding a black color fill to provide more contrast. You will need to take some precautions when color filling wood, because if you are not careful, the liquid color fill material will absorb into the grain of the wood on the surface of the plaque where it is not wanted.

The best way to add a black color fill is shown below:

1. Apply a thin coat of Johnson's Paste Wax to the surface of the wood before you engrave it.
2. Engrave through the paste wax into the wood. Do not wipe off excess paste or residue after engraving.
3. Fill the engraved voids with Turtlewax "Color Core" black liquid car polish. The car polish will absorb into the engraved wood grain, but will not absorb into the wood grain that is covered with paste wax.
4. Wrap a paper towel around a block of material that has a flat surface. Rub the flat surfaced paper towel over the surface of the wood to clean off the excess car polish and paste wax. The flat surface prevents the paper towel from getting into the engraved recesses.

You can follow the procedure above to add different colors to wood, but instead of car polish, use water based acrylic paint (the kind in the tubes works great!)

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# Section 14: Material Suppliers

---

## *In This Section*

- Laser Engravable Products
- Acrylic
- Laser Engravable Coated Metals
- Pressboard Plaques – Melamine
- Walnut Plaques & Specialty Wood Products
- Educational Materials
- Corian or Fountain Head – Synthetic Marble
- Engravable Plastics
- Flat Glass
- Cermark Metal Coating
- Color Fill Materials
- Tapes and Foils



The following list contains supplier information for materials typically used with your Epilog laser. Additional suppliers and links can be found on our website at [http://www.epiloglaser.com/industry\\_links.htm](http://www.epiloglaser.com/industry_links.htm).

### **Laser Engravable Products**

#### **LaserBits, Inc.**

1734 West Williams Drive - Suite 10  
Phoenix, Arizona 85027 U.S.A.  
Phone: 1-623-879-0005, Fax: 1-623-879-5149  
[www.laserbits.com](http://www.laserbits.com)

#### **Acrylic**

##### **Acrylic Idea Factory**

6669-C Peachtree Industrial Blvd.  
Norcross, GA 30092  
USA Toll Free: 1-800-543-9253  
Fax: 1-770-447-1113  
[www.aifawards.com](http://www.aifawards.com)

# Section 14: Material Suppliers

---

## **Dimension Espacio**

S. A. de C.V.  
Av. Morelos #80  
Naucalpan, Mexico 53370  
Phone (52)(55) 5312-0333  
Fax: (52)(55) 5312-4790  
[www.dimensionespacio.com.mx](http://www.dimensionespacio.com.mx)

## **Laser Engravable Coated Metals**

### **Identification Plates, Inc.**

1555 High Point Drive  
Mesquite, TX 75149-9009  
Phone: 972-216-1616  
USA Toll Free Phone: 1-800-395-2570  
Fax: 1-972-216-1555, 1-800-934-8304  
[www.idplates.com](http://www.idplates.com)

### **Victory**

1820 N. Major Avenue  
Chicago, IL 60639  
USA Toll Free Phone: 1-800-327-5578  
Fax: 1-773-637-7799  
[www.buyvictory.com](http://www.buyvictory.com)

### **JDS**

2704 W. Third Street  
Sioux Falls, SD 57104  
Phone: 605-339-4010  
USA Toll Free Phone: 1-800-843-8853  
Fax: 1-605-339-1467  
Email: [sales@jdsindustries.com](mailto:sales@jdsindustries.com)  
[www.jdsindustries.com](http://www.jdsindustries.com)

### **R. S. Owens & Co.**

5535 North Lynch Avenue  
Chicago, IL 60630  
USA Toll Free Phone: 1-800-282-6200  
[www.rsowens.com](http://www.rsowens.com)

# Section 14: Material Suppliers

---

## **AlumaMark**

### **Horizons Incorporated**

18531 South Miles Road  
Cleveland, Ohio 44128  
USA Toll Free Phone: 1-800-482-7758  
Outside US: 216-475-0555  
Fax: 1-216-475-6507  
[www.horizonsisg.com](http://www.horizonsisg.com)

## **Leather**

### **Tandy Leather Factory, Inc.**

3847 East Loop 820 South  
Fort Worth, TX 76119  
For local locations visit their Website (orders also taken online)  
USA Toll Free Phone: 1-800-433-3201  
[www.tandyleatherfactory.com](http://www.tandyleatherfactory.com)

## **Pressboard Plaques - Melamine**

### **JDS**

2704 W. Third Street  
Sioux Falls, SD 57104  
Phone: 1-605-339-4010  
USA Toll Free Phone: 1-800-843-8853  
Fax: 1-605-339-1467  
Email: [sales@jdsindustries.com](mailto:sales@jdsindustries.com)  
[www.jdsindustries.com](http://www.jdsindustries.com)

### **PDU**

11077 E. Rush Street  
South El Monte, CA 91733-3546  
Phone: 1-626-442-7711  
USA Toll Free Phone: 1-800-800-7711  
Fax: 1-626-442-1814  
[www.pdu.com](http://www.pdu.com)

# Section 14: Material Suppliers

---

## **Wood Plaques & Specialty Wood Products**

### **Colorado Heirloom**

333 E. 4th Street  
Loveland, CO 80537  
USA Toll Free Phone: 1-800-643-8880  
Phone: 1-970-667-4222  
Fax: 1-970-667-8880  
e-mail: [cheirloom@aol.com](mailto:cheirloom@aol.com)  
[www.coloradoheirloom.com](http://www.coloradoheirloom.com)

### **Wood Design/WDI Companies (previously Kentucky Woodcrafts Co.)**

908 SW 15<sup>th</sup> Street  
Forest Lake, MN 55025  
Phone: 651-464-6190  
USA Toll Free Phone: 1-800-354-0196  
Fax: 1-651-464-6191  
e-mail [dank@thewoodster.com](mailto:dank@thewoodster.com)  
[www.thewoodster.com](http://www.thewoodster.com)

### **Lee's Wood Products**

31 Smithers Street  
P.O. Box 159  
Rocky Mount, VA 24151  
USA Toll Free Phone: 800-552-5337  
Fax: 1-540-483-4645  
e-mail: [leeswood@earthlink.net](mailto:leeswood@earthlink.net)

### **Stanton Manufacturing**

Lake Road 54-15  
Lake Ozark, MO 65049  
USA Toll Free Phone: 888-556-0759  
[www.stantonmfg.com](http://www.stantonmfg.com)

## **Educational Materials**

### **JHM Marketing**

John McDaniels  
P O Box 3159  
Albany, OR 97321  
Phone 1-541-967-4271  
Fax: 1-541-967-4272  
[mail@graphic-products-training.com](mailto:mail@graphic-products-training.com)  
[www.graphic-products-training.com](http://www.graphic-products-training.com)

# Section 14: Material Suppliers

---

## **Marble**

### **Laser Sketch, Ltd**

12301 New Avenue, Suite E  
Lemont, Illinois 60439  
Phone: 630-243-6360  
Fax: 630-243-6908  
[www.lasersketch.com](http://www.lasersketch.com)

## **Engravable Plastics**

### **Innovative Plastics Inc.**

P.O. Box 7065  
Algonquin, IL 60102  
Phone: 1-815-477-0778  
Fax: 1-815-477-1210  
e-mail: [ipi@mc.net](mailto:ipi@mc.net)  
[www.inoplas.com](http://www.inoplas.com)

### **Johnson Plastics**

9240 Grand Avenue South  
Minneapolis, MN 55420-3604  
USA Toll Free Phone: 1-800-869-7800  
USA Toll Free Fax: 1-800-869-7853  
Phone: 1-800-869-7853  
Fax: 1-612-888-4997  
e-mail: [service@johnsonplastics.com](mailto:service@johnsonplastics.com)  
[www.johnsonplastics.com](http://www.johnsonplastics.com)

### **Rowmark**

2040 Industrial Drive  
Findlay, OH 45839  
Phone: 1-419-425-8974  
USA Toll Free Phone: 1-800-243-3339  
Fax: 1-419-425-0501  
e-mail: [inquiries@rowmark.com](mailto:inquiries@rowmark.com)  
[www.rowmark.com](http://www.rowmark.com)

# Section 14: Material Suppliers

---

## **Flat Glass**

### **Gold Coast Graphics**

15841 Graham Street  
Huntington Beach, CA 92649  
USA Toll Free Phone: 1-888-733-0061  
Fax: 1-714-898-9432  
[www.goldcoastgraphics.com](http://www.goldcoastgraphics.com)

## **CerMark Metal Coating**

### **CerMark Material**

FERRO Corporation  
USA Toll Free Phone: 1-800-245-4951  
[www.cerdecmark.com](http://www.cerdecmark.com)

## **LaserBits, Inc.**

1734 West Williams Drive - Suite 10  
Phoenix, Arizona 85027 U.S.A.  
Phone: 1-623-879-0005  
Fax: 1-623-879-5149  
[www.laserbits.com](http://www.laserbits.com)

## **Color Fill Materials**

### **Smoke-Wood**

1680 Division  
Elgin, Or 97827  
USA Toll Free Phone: 1-800-248-2352  
Fax: 1-541-437-1080  
Email: [smokewd@eoni.com](mailto:smokewd@eoni.com)  
[www.smoke-wood.com](http://www.smoke-wood.com)

## **Tapes and Foils**

### **Innotech of Wisconsin**

1760 State Street  
Racine, WI 53408-5546  
USA Toll Free Phone: 1-800-776-7194  
FAX: 262-637-8205  
[sales@innotape.com](mailto:sales@innotape.com)  
[www.innotape.com](http://www.innotape.com)





Manual

# Technical Support, Troubleshooting and Specifications

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# Section 15: In Case of Difficulty

---

## *In This Section*

- Contacting Technical Support
  - Avoiding Common Print Problems
- 

## *Contacting Technical Support*

The technical support department at Epilog is available to assist with solving problems you may encounter using your Epilog. Please review first the common problems and solutions as noted below, then if you are still in need of assistance you may contact Epilog's technical support department at the number or website listed below. Technical support is available in Golden, Colorado USA during the hours of 6 a.m. and 6 p.m. Mountain Time.



Technical Support Direct Line: 1 (303) 215-9171

Email – [tech@epiloglaser.com](mailto:tech@epiloglaser.com)

Technical Support online: [www.epiloglaser.com/service.htm](http://www.epiloglaser.com/service.htm)

What to do prior to contacting Epilog Technical Support:

1. Have the machine serial number available
2. Have time to work on machine. Many issues will require troubleshooting
3. Clean your machine (especially the optics), this will solve many issues

The machine serial number can be found on the Certification/Identification Label. This engraved plate is located on the back of the machine's cabinet.

# Section 15: In Case of Difficulty

---

## *Avoiding Common Print Problems*

Printing problems are normally related to stopping, resetting or trying to repeat a job before the computer has been allowed enough time to transmit the entire job. If you do interrupt a job while it is being transmitted (printed) to the engraver, there is a good chance that the remaining data is still somewhere between the computer and the engraver, unless you take precautions to clear the print queue. To avoid most common print problems, ALWAYS double click on the Epilog printer icon (under settings, printers) to check for partial jobs if you interrupt a job in progress. They can then be canceled or deleted from the computer. It is always a good idea to reboot the laser before starting another print job if you have had print spooling problems.

**Problem: Engraver will not vector.**

*Solution:*

1. Please verify that the Dashboard is set to “vector” or “combined”.
2. Verify that the lines that you want to vector are set to .001 inch (0.025 mm).
3. Scanned images will not vector.
4. Filled or solid images will not vector (only outlines will vector).



**Problem: Engraving appears weak.**

*Solution:*

1. Inspect all mirrors and lenses for cleanliness and/or damage.

If you are unsure of the location of all of the mirrors on your engraver, please contact Technical Support at 1 (303) 215-9171.



2. Verify that your material has been properly focused.
3. Verify correct Speed and Power settings for the type of material that you are engraving.

**Problem: No laser beam but the engraver appears to be running normally.**

*Solution:*

1. Verify focus is set properly.
2. Verify power and speed settings are appropriate.
3. Verify the door is closed tightly.

# Section 15: In Case of Difficulty

---

**Problem: Inadequate Exhaust.**

*Solution:*

1. The closer the blower is to the machine the better exhaust you will receive.
2. Clean your exhaust system on a regular basis including engraver and blower. Use a bottlebrush and a vacuum on the areas where the exhaust buildup accumulates.

**Problem: Engraver will not power up. Nothing transpires when engraver is turned on.**

*Solution:*

1. Verify there is power being supplied to the engraver, that your outlet is in good working condition and that the engraver is actually plugged in.
2. Check to make sure the carriage can be moved freely with the power off. If the engraver can't find the home position, it will not power up properly.

**Problem: Poor engraving quality.**

*Solution:*

1. If you feel you are not getting the depth that you once were, this is probably a maintenance issue. Inspect and clean the mirrors and lenses. If you are not sure of the location of all of your mirrors, contact Epilog technical support at Technical Support at 1 (303) 215-9171.
2. If you are experiencing a blurry or erratic image, check to make sure you are in focus and all optics are clean.
3. If you are experiencing a double image problem or any other quality issue, it is best to run a sample of what the machine is doing and send it to:



Technical Support Department  
Epilog Laser Corporation  
16371 Table Mountain Parkway  
Golden, CO 80403; USA  
Phone: 1 (303) 215-9171  
Fax: 1 (303) 277-9669  
Email: tech@epiloglaser.com



4. Please include a letter stating the configuration of your machine along with speed and power settings of the sample you ran and any other pertinent information.

# Section 15: In Case of Difficulty

---

## **Problem: Image at the wrong location on the work piece.**

### *Solution:*

1. Verify that the page size in your drawing program does not exceed the maximum engravable area of the machine.
2. Verify that the page size in drawing program matches the piece size in the Dashboard.
3. Print Setup. If you have a page size of 2"x 3" (50 mm x 75 mm) and a Piece Size in Print Setup of 16 X 12", then it will place the 2 X 3" (50 mm x 75 mm) in the center of the 16 X 12" area.
4. If you see that the image is constantly off in one direction, you may need to calibrate the "home position" of the machine. This procedure is explained in the *Engraving Machine Calibration / Maintenance* section of this manual. Please call Epilog technical support if this does not rectify the problem.



## **Problem: Cooling Fan Malfunction.**

### *Solution:*

1. Verify that there is nothing obstructing the rotation of the fan(s).
2. Verify the fans are clean. Using a vacuum should clean the fans adequately.
3. Verify the connector is still connected.
4. If necessary, contact Epilog Technical Support for assistance.

## **Problem: Table will not move.**

### *Solution:*

1. Verify that there is nothing obstructing the travel of the table.
2. If you are still experiencing problems, contact Epilog Technical Support.

## **Problem: Position Error displayed on LCD front console.**

### *Solution:*

- Normally this happens if you are using Center-Center engraving and your artwork is too close to the edge of the page or if you are trying to engrave too close to the edge of the table. Please move your artwork or your material, or deselect Center-Center engraving from the Dashboard.

# Section 16: Specifications

---

## *In This Section*

- Zing 16 x 12 Specifications
  - Zing 24 x 12 Specifications
  - Compatibility
  - Recommended PC
  - Other Computer Hardware Recommendations
  - Federal Communications Commission (FCC) Notice
- 

## *Zing 16 x 12 Specifications*

Maximum Engraving Area	16" x 12" (406 x 305 mm)
Maximum Material Thickness	4" (101.5 mm)
Laser Control Display Panel	Displays stored file names, speed, power, runtime and more.
Intelligent Memory Buffer	Store unlimited files up to 64 MB. Rolling buffer allows files of any size (64 MB and larger) to be engraved.
Operating Modes	Optimized raster engraving, vector cutting, or combined raster/vector mode.
Laser Source	State-of-the-art, digitally controlled, air-cooled CO2 laser tubes are fully modular, permanently aligned, and field replaceable/upgradeable.
Belts	Advanced B-style Kevlar precision drive belts.
Resolution	User controlled choice of 100, 200, 250, 400, 500, or 1000 dpi.
Speed/Power Control	Computer or machine controlled Speed and Power in 1% increments to 100%. Color mapping links Speed and Power setting to any RGB color.
Print Interface	10 Base T Ethernet or USB connections. Compatible with 32 bit versions of Windows XP, 2000 or Vista.
Standard Features	Red Dot Pointer, Air Curtain (pump optional), 2" focus lens, relocatable home, flash upgrade electronics.
Size/Weight	27.5" wide x 23" deep x 12.5" high (699 x 584 x 318 mm) 92 lbs (42 kg)
Electrical Requirements	Auto-switching power supply accommodates 100 to 240 VAC, 50 or 60 Hz, single phase, 15 amp AC.
Ventilation	External exhaust to the outside required. Output diameter at machine is 4" (100 mm).
Safety	CDRH Class IIIR
Max Ambient Room Air	90 degrees F (32 C) Max Temperature

# Section 16: Specifications

---

## *Zing 24 x 12 Specifications*

Maximum Engraving Area	24" x 12" (610 x 305 mm)
Maximum Material Thickness	7.5" (190.5 mm)
Laser Control Display Panel	Displays stored file names, speed, power, runtime and more.
Intelligent Memory Buffer	Store unlimited files up to 64 MB. Rolling buffer allows files of any size (64 MB and larger) to be engraved.
Operating Modes	Optimized raster engraving, vector cutting, or combined raster/vector mode.
Laser Source	State-of-the-art, digitally controlled, air-cooled CO2 laser tubes are fully modular, permanently aligned, and field replaceable/upgradeable.
Belts	Advanced B-style Kevlar precision drive belts.
Resolution	User controlled choice of 100, 200, 250, 400, 500, or 1000 dpi.
Speed/Power Control	Computer or machine controlled Speed and Power in 1% increments to 100%. Color mapping links Speed and Power setting to any RGB color.
Print Interface	10 Base T Ethernet or USB connections. Compatible with 32 bit versions of Windows XP, 2000 or Vista.
Standard Features	Red Dot Pointer, Air Curtain (pump optional), 2" focus lens, relocatable home, flash upgrade electronics.
Size/Weight	38" wide x 27.25" deep x 15" high (965 x 692 x 381mm) 140 lbs (64 kg)
Electrical Requirements	Auto-switching power supply accommodates 100 to 240 VAC, 50 or 60 Hz, single phase, 15 amp AC.
Ventilation	External exhaust to the outside required. Output diameter at machine is 4" (100 mm).
Safety	CDRH Class IIIR
Max Ambient Room Air	90 degrees F (32 C) Max Temperature



# Section 16: Specifications

---

## *Compatibility*

The Epilog Zing has been designed as an “open architecture” product. The laser will work with many popular Windows based graphics, engineering and specialty software products. To benefit from all the functionality that was built into the laser, a Windows 32 bit based PC and 32 bit operating system is required. The Dashboard print driver that is shipped with the laser offers a host of unique features, and only works with Windows based operating systems.

## *Recommended PC*

### **For Optimum Computer Performance**

Investing in a new computer is a great way to make sure you’re getting the most out of your new laser equipment. Why? Because today’s software (CorelDraw for instance) requires a lot of computer processing speed and memory to function properly. A good computer won’t make a big difference in how your laser runs, but when compared to a slow computer it will save untold amounts of time and frustration setting up the artwork that you “print” to the laser. Many users do not purchase new computers for use with their new laser because their current computers are perfectly adequate. There’s no magical cut-off that makes a computer too slow. If you’re comfortable with the performance and speed of your current computer, there’s probably no reason to purchase another one. The following recommendations are just advice to consider if a new computer is necessary.

A new computer doesn’t have to be expensive to work great! Even many of today’s lower cost computers work great for laser applications. As long as you don’t buy the cheapest computer you can find you should be fine.

Read these recommendations and consider spending just a few dollars more for those components that will save you time and frustration.

### **Operating System**

Any Windows XP, 2000, or Vista operating system is recommended. All new Epilog lasers are designed to work with all the different 32 bit versions of XP, 2000, and Vista.

# Section 16: Specifications

---

## **RAM – Random Access Memory**

2 GB is the minimum that is recommended. RAM is kind of like short-term memory. It's fast and readily available for the computer to access and makes time consuming tasks go much quicker if you have lots of it.

DVD (optical drive)

All computers come with some sort of CD-ROM/DVD drive. Consider a DVD drive with Read/Write capability. Many graphic files are very large and may not fit on some portable media. Being able to copy a file to a DVD is a big advantage for filing purposes and moving the file from one computer to another. Optical drives are an indispensable tool and many software applications now come exclusively on DVD.

## **Floppy Drive**

Usually not necessary.

## **Processor Speed**

A faster processor will allow you to do more tasks in less time. While it's not necessary to purchase the fastest processor available, you'll want adequate speed to operate your graphics program. Processor speeds are always improving, but processor speeds of about 2.0 GHz or faster are a good place to start.

## **10/100 Network Interface Card (NIC)**

All new computers have a 10/100 network connection as standard equipment. As well as allowing multiple computers to be linked together in a network, this technology also allows direct printing from the computer to the laser. Epilog supplies a network Crossover cable with each laser system that allows one computer to print to a single Epilog laser system.

## **Hard Drive**

This is the permanent memory in your computer. Many users feel that you can never have a large enough hard drive, but for most laser applications 80 GB's is going to be adequate for years of storage. Luckily, most computer manufacturers put high capacity drives in new computers these days. When in doubt, buy bigger than you think you might need. It's so in-expensive that it's worth the peace of mind to have it available.

## **Software**

Many users use Corel as their graphics software. Many other Windows software applications can also be used, although all software is different and may not be

# Section 16: Specifications

---

predictable, user friendly or functional. Additionally, the technical support staff at Epilog may be less familiar with software other than Corel and less able to help with questions. Consult with your Epilog distributor on software compatibility issues. Epilog does not guarantee compatibility with any software.

Many laser users find a Raster-to-Vector conversion software package indispensable. Sometimes, users may have this capability if they are using sign graphics software like CadLink. There are also a number of 3rd party Raster-to-Vector conversion packages available in the engraving industry. Corel includes a raster-to-vector conversion program starting in version X3 and it is a very nice conversion program for most users.

## *Other Computer Hardware Recommendations*

### *Scanner*

A flatbed scanner is another indispensable tool for generating custom artwork. Almost any flatbed scanner today is adequate for scanning artwork. Scanner technology has come so far in the last few years that even a \$100 scanner today is as good as a \$1,000 scanner of a few years ago. Hand held “mouse” scanners do not provide the necessary accuracy and should be avoided.

### *Heavy Duty Surge Protector*

The need for a surge protector varies greatly throughout the world. If the laser is operated anywhere that the electrical power is subject to spikes, outages, lighting, fluctuations, etc. a surge protector should be used on both the laser and the computer. A surge protector is a very, very cheap insurance policy against catastrophic electrical damage. A surge protector is designed to be an inexpensive device that absorbs any electrical problems before they can damage the expensive equipment (computer and laser) they are protecting.

# Section 16: Specifications

---

## *Summary*

Computer Recommendations:  
Windows 2000, XP or 32 bit Vista  
2 GB RAM Minimum  
CD-ROM or DVD  
2.0 GHz or faster Processor  
10/100 Network Interface Card  
80 GB Hard Drive - (Minimum)  
CorelDraw or other Windows based software

## *About The Laser*

Your Epilog CO2 laser system uses the latest in laser technology to provide a powerful tool that is simple and safe to setup and operate. The Epilog laser can mark, engrave, and cut a variety of materials.

The CO2 laser beam itself is invisible. The beam is about half the diameter of a #2 pencil. Unfocused, it will just make an ugly burn, leaving lots of charred material behind. The focus lens gives the beam an hourglass shape. At the center point the energy density is concentrated, allowing the very precise and clean material removal that is characteristic of laser engraving. The center of the hourglass is the “focal point”.

The laser beam path is completely enclosed within the cabinet. Please do not disassemble or modify any of the covers or windows on the machine. If at any time you notice that the laser operates with a door or window open, please contact Epilog technical support immediately.

## Section 16: Specifications

---

### ***Federal Communications Commission (FCC) Notice***



***Note:*** *This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules.* These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy; and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

## Section 16: Specifications

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# Section 17: Upgrading the Operational Firmware

---

## *In This Section*

- Upgrading Your Firmware
  - Installing New Firmware Onto Your Computer
  - Transferring New Firmware From Your Computer To Your Laser System
  - Upgrading The Epilog Dashboard Print Driver
  - Converting Old .Dat Files To Be Compatible With A New Driver Version:
- 

## *Upgrading Your Firmware*

Your laser system is capable of having its operation firmware upgraded. The firmware is the software in your laser system that controls all aspects of your laser system (think of firmware as the “brains” of your system). A firmware upgrade reprograms your laser system to take advantage of new capabilities or enhancements to the system.

To accomplish the reprogramming, you just “Print” a special file to your laser system. The process is explained below.

### *Upgrading your laser is a two-step process:*

1. Download the new firmware to your computer and extract (also known as Unzipping or decompressing) it.
2. Transfer the new firmware from your computer to your laser.

# Section 17: Upgrading the Operational Firmware

---

## *Installing New Firmware onto Your Computer*

Firmware upgrades are available at any time by downloading the firmware file from the Epilog web site - [www.epiloglaser.com](http://www.epiloglaser.com) under the Downloads tab. Or, you can contact Epilog Technical Support and they can e-mail the appropriate file to you. (You can also join our Driver Notification mailing list to be automatically notified when new versions of firmware or the driver become available!). The firmware version that your system is currently running is displayed on the LCD panel when you first power up your laser system – it will read Version 1\_0\_X\_X.


**Downloading** – From the Epilog web site download the new firmware and save. Normally, the default Save location is onto your Desktop folder. If the computer you are downloading from is not the same computer that is attached to your laser system you may want to save this download file to a different location than your Desktop such as a floppy disk or other portable media. This download file is just like any other computer file and can be moved easily from one computer to another.

When you download the firmware it comes as a compressed file in the following format: legendZing\_1\_0\_X\_X.exe, where the X's designate the actual version of the firmware. Once this file is on your computer you will need to extract (Unzip or decompress) it so it is in a format that can be transferred to the laser.


**Extracting** – When you download the firmware file from our web site onto your computer it will normally be saved to your Desktop. When it downloads it will create an icon on your Desktop named legendZing1\_0\_0\_X\_X.exe. Double click on the icon to extract it. After double clicking on the icon the following window will appear:



# Section 17: Upgrading the Operational Firmware

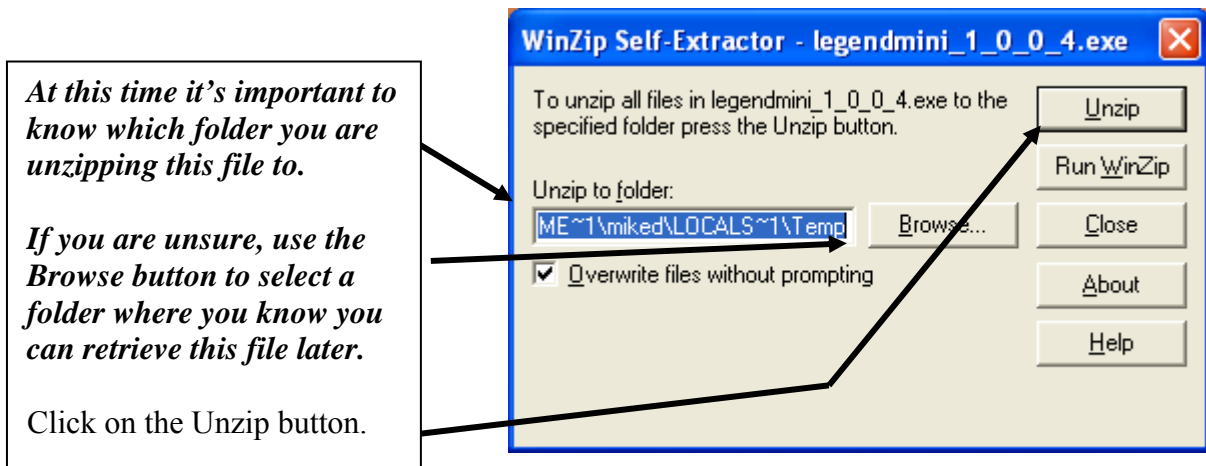

The following message appears after the file is Unzipped:

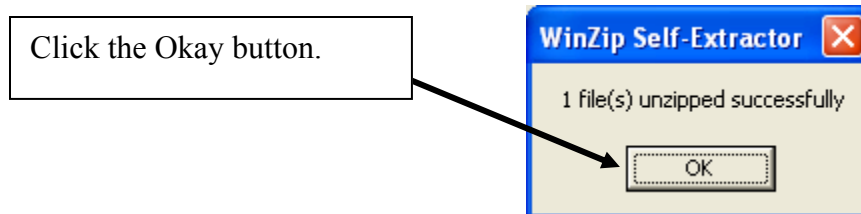

**Note** - When the file is extracted, it expands to many times its original size and will no longer fit on a floppy disk – keep this in mind if you need to move the extracted file from one computer to another.

Once the file is extracted it changes from an .exe format to a .hex format that will be named LegendZing1\_0\_X\_X.hex, (again, the actual number will change depending on revision level). It is the .hex format file that you will use to upgrade your laser.


**Keep track of the folder where you saved the extracted .hex file. You will need to access this file again in the next step.**

# Section 17: Upgrading the Operational Firmware


## *Transferring New Firmware from Your Computer to Your Laser*

Use the following procedure to transfer the legendZing.hex file to the laser:

Create any simple drawing in your graphics package. For this example, we've just typed in the text "Firmware Upgrade".

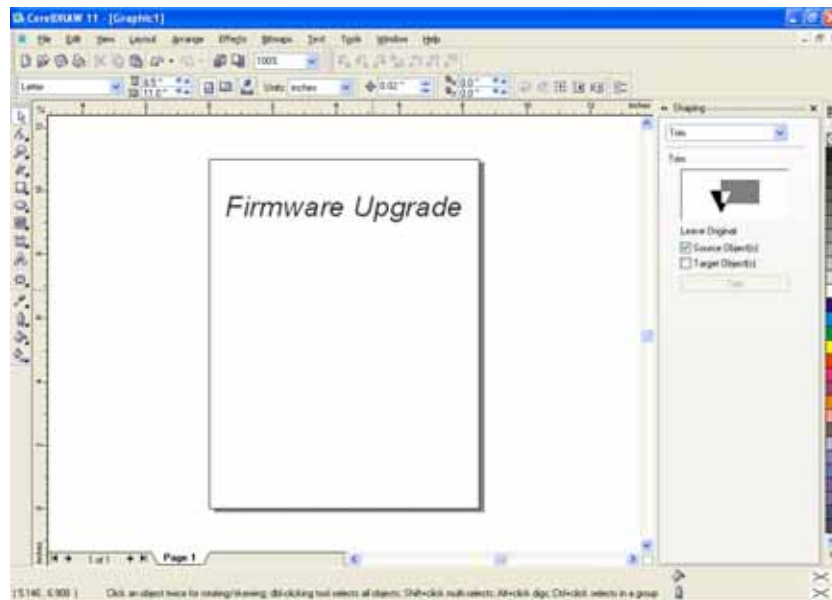


The next step is to Print, select the *Dashboard* driver, and click on *Properties*.

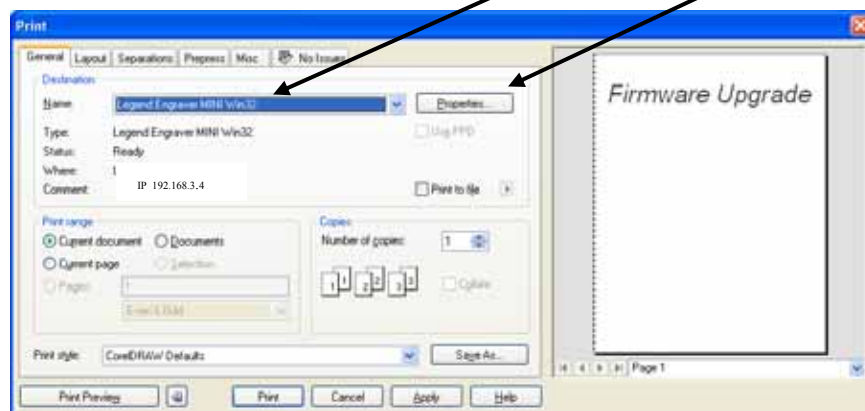


# Section 17: Upgrading the Operational Firmware

Go to the Advanced tab, check the Update Firmware box and then click on the Load button.

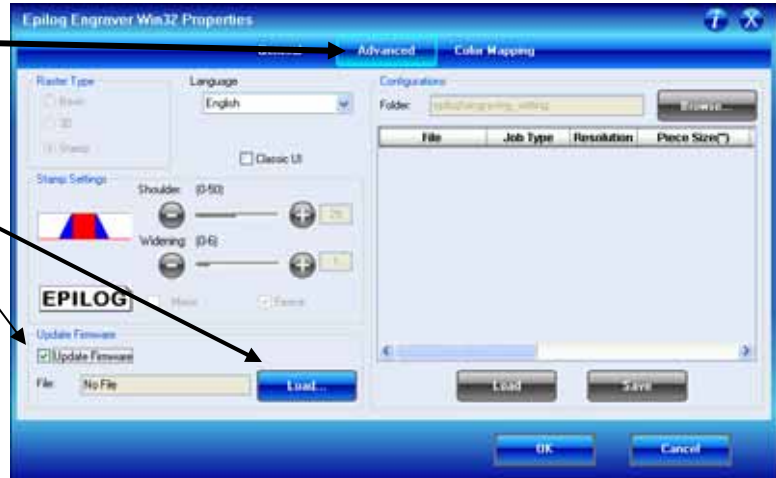


Go to the folder that contains the unzipped hex file, select it and then click Open.

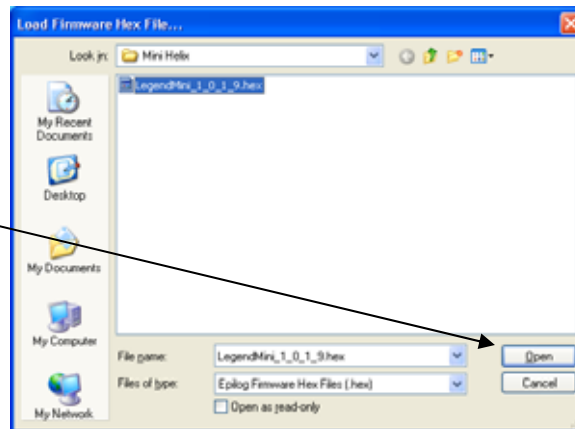


# Section 17: Upgrading the Operational Firmware

The hex file will show in the Update Firmware File box.

Click Okay.

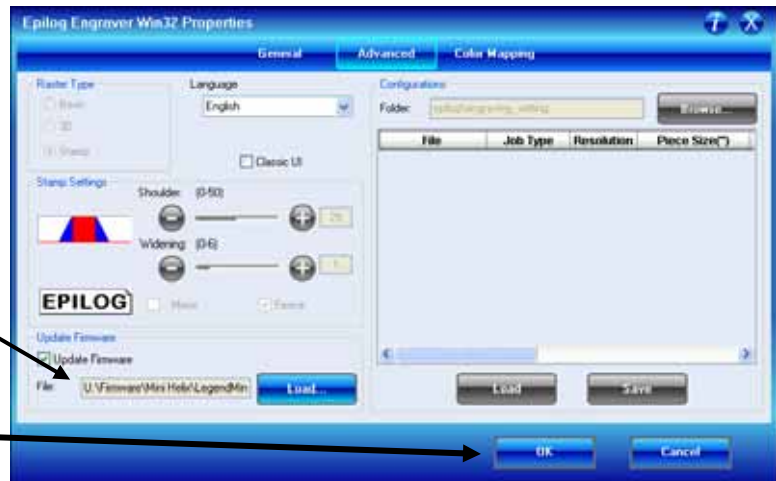

Click Print.

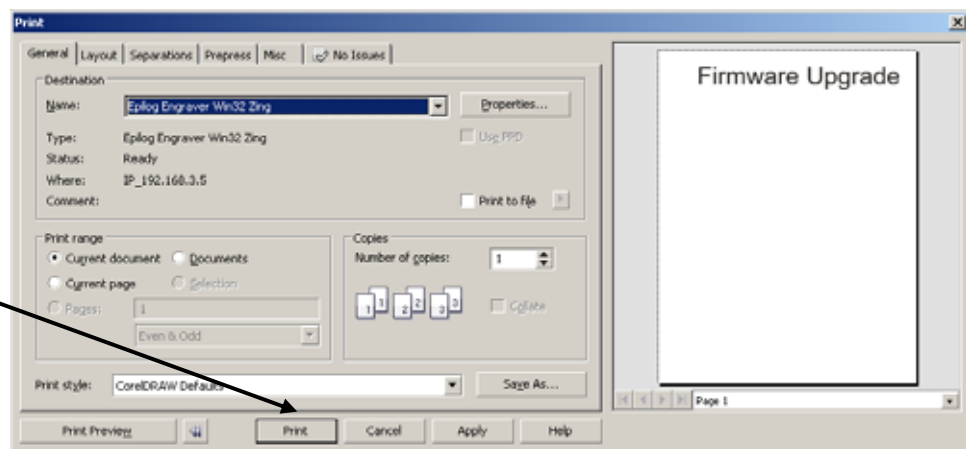

At this point, the .hex file will begin transferring to your laser. The laser knows that it is being upgraded and the simple graphic that you created will not print, nor will it show up as a Job. Instead, you will see the following messages on the LCD panel on the laser:

***“Receiving Data”***

***“Erasing Flash”***

***“Programing Flash”***

***“Finished – Reboot!”***


The programing process takes about two minutes to complete.

# Section 17: Upgrading the Operational Firmware

**DO NOT DISTURB THE LASER DURING THE UPGRADE PROCESS!!!**

After you have rebooted your laser, the process is complete and you will see the new version number of firmware on your LCD as the laser powers up.

Close your Corel page and you are ready for you next job!

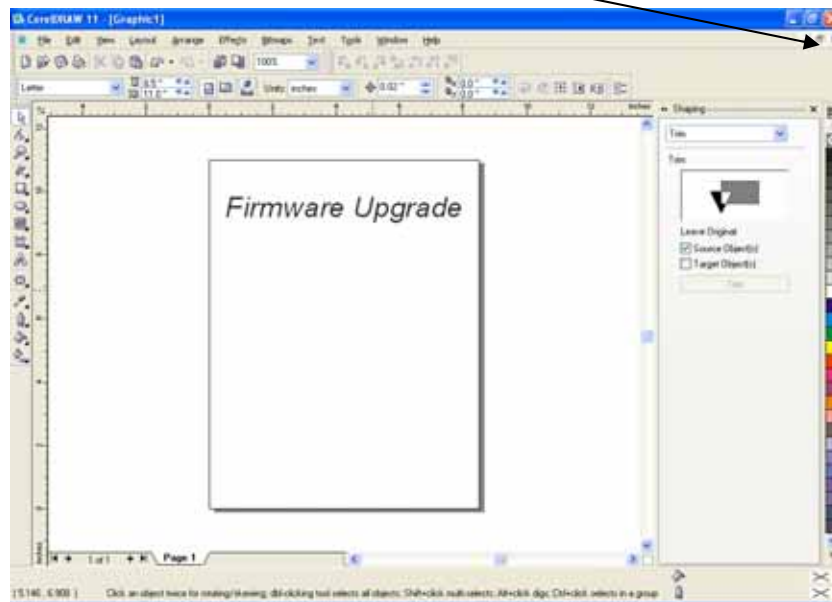

# Section 17: Upgrading the Operational Firmware

## *Upgrading the Epilog Dashboard*

Occasionally Epilog provides enhancements or upgrades to the Dashboard. Upgrading to the new driver is almost identical to installing a driver for the first time. When upgrading to a new Dashboard, it is best if you first delete the old one, reboot your computer and then install the new one (see the *Installing the Epilog Dashboard* section of this manual ).

When you upgrade to a new Dashboard, the Configurations settings that you have been saving may not be accessible to the new driver.

The Configuration files are the .DAT settings you make to save your driver settings.



Use the following instructions to convert your saved Configurations .DAT files to be accessible with a new driver (please note that not all new drivers will require this conversion. We indicate with every new Dashboard version if conversion is necessary).

When necessary, Epilog uses a ConfigMerge program to convert old Configurations Settings (.DAT files) to be compatible with the upgraded driver. The ConfigMerge.exe file can be downloaded from the driver download page at [www.epiloglaser.com](http://www.epiloglaser.com). The ConfigMerge.exe program icon looks similar to this when you have downloaded it to your computer:




ConfigMerge3.exe


## Section 17: Upgrading the Operational Firmware

### *Converting Old .DAT Files to Be Compatible with a New Dashboard*

Open (double click) the ConfigMerge.exe file that came with the new driver. Click on the Get File button and navigate to the folder where you save your .DAT files.

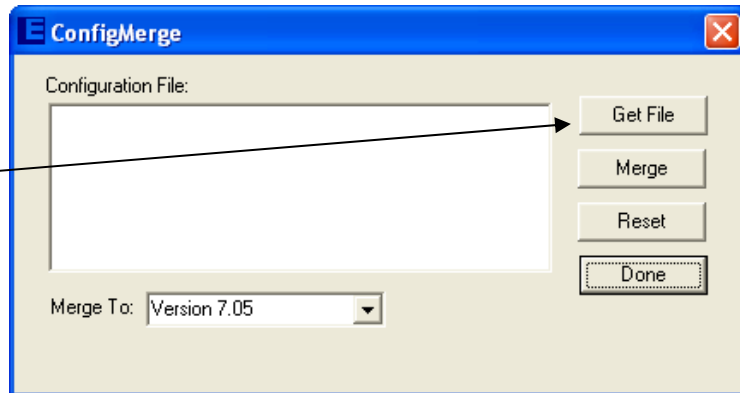

Highlight the files that you want to convert, and then click on the Open button.

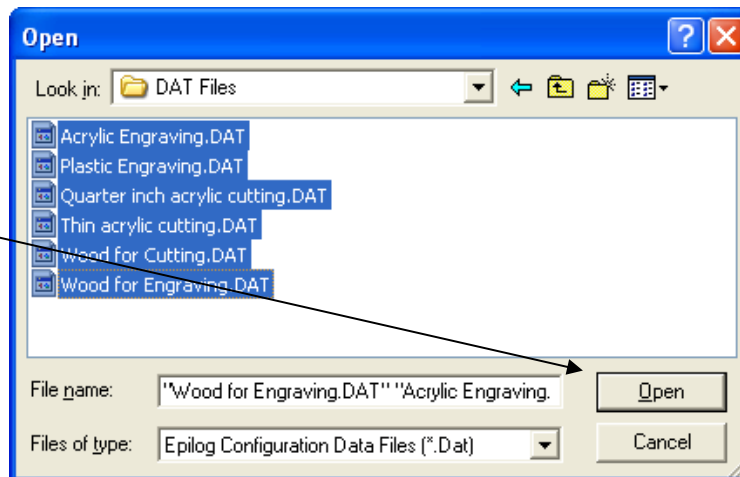


# Section 17: Upgrading the Operational Firmware

The files that you highlighted and Opened will then show in the ConfigMerge window.

Click on the Merge button (you do not need to highlight the files again).

Your old .DAT files will be converted to be compatible with the new driver (Version 7.05 in this case).

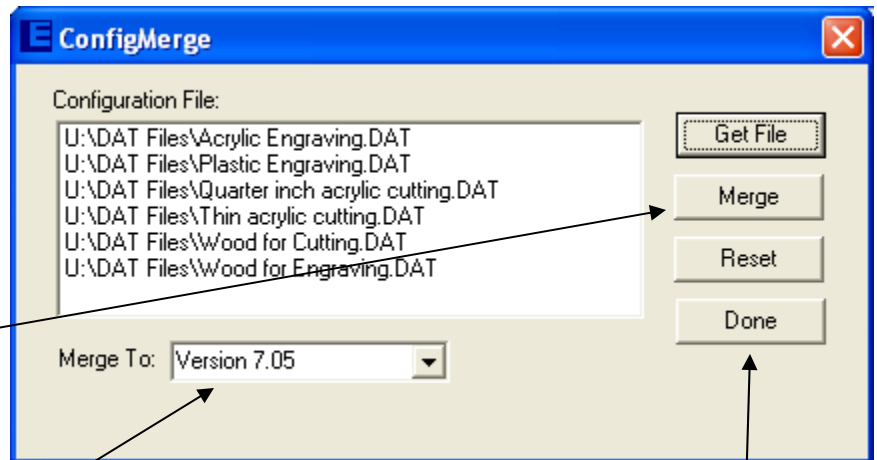

After clicking the Merge button the screen at the left will appear. Click on the Done button and you're finished.




# Section 17: Upgrading the Operational Firmware

---

The Merge feature does not delete the old .DAT files. It creates new files using the same name, but adding the new driver version number ( \_705 in this case). In the following screen you can see that the original file is named Acrylic Engraving.DAT. The merged file is named Acrylic Engraving\_705.DAT.

Once you are sure your files have been converted to the new driver version, you can delete the old files.

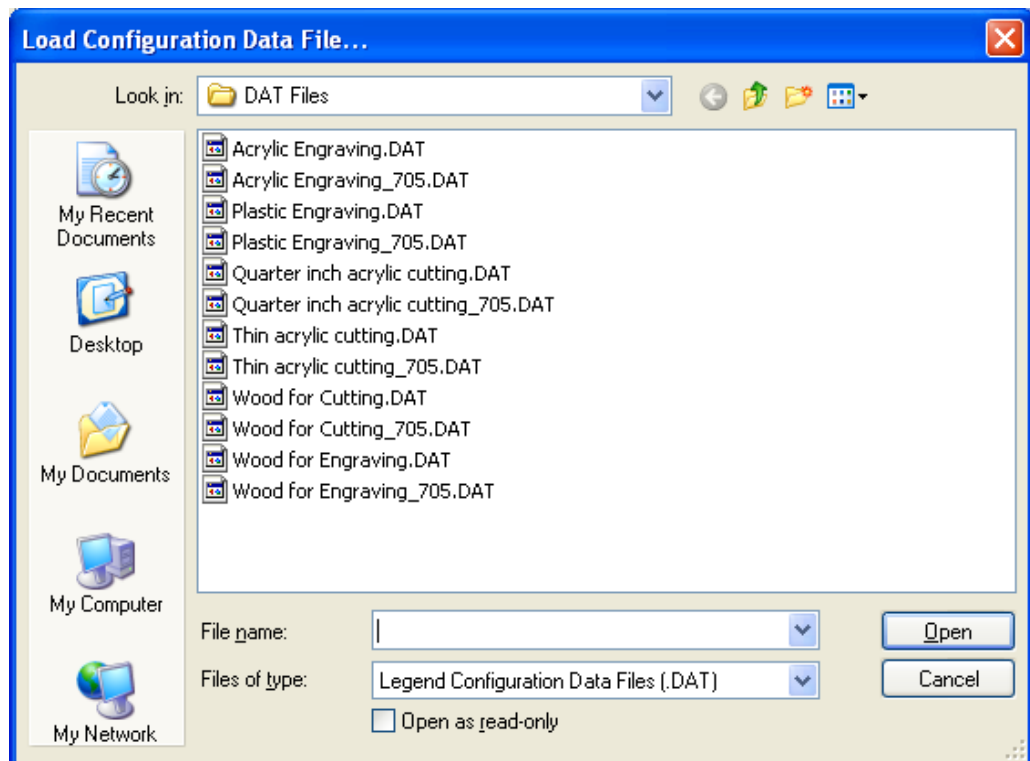

## Section 17: Upgrading the Operational Firmware

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# APPENDIX A WARRANTY STATEMENT

Epilog Corporation warrants to the original purchaser of Epilog Model 10000 that this product will be free from defects in material or workmanship when purchased, and under proper, normal use within one (1) year from the original date of purchase, with the exception of the laser tube which is warranted for two (2) years from the original date of purchase.

Epilog will replace or, at its option, repair the defective part(s). Normally, Epilog will supply a replacement part for the customer to replace. Once the replacement has been performed, the replaced part must be returned to Epilog. In the case where repair is required, Epilog requires that the defective part, or machine, be returned to the Epilog factory or other Epilog designated facility. Epilog will be responsible solely for the cost of repairs, including parts and labor, which are made at an authorized Epilog facility. All other costs for replacement or repair, including, but not limited to, packaging and shipping both to and from Epilog, shall be paid by the owner. A “Core” charge may be required by Epilog to insure the return of replacement and repair parts. This warranty excludes any damage from abuse (including, without limitation, incorrect voltages, power surges, fires, improper or insufficient ventilation “acts of God” or other situations out of the control of Epilog), failure to operate in accordance with instructions provided in the Owner’s Manuals for the Epilog models 10000, including specific safety and operational warnings contained therein, cosmetic damage sustained in use, and damage caused by unauthorized modifications of any equipment. All warranties to original purchasers are non-transferable. The registered owner must initiate warranty claims within the warranty period.

**THE ABOVE AND FOREGOING IS THE ONLY WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED; INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, THAT ARE MADE BY EPILOG ON MODEL 10000. ANY WARRANTIES IMPLIED BY LAW ARE HEREBY EXPRESSLY DISCLAIMED.** No oral or written information or advice given by Epilog, its dealers, its distributors, agents, officers, or employees shall create a warranty or in any way increase the scope of this warranty. Neither Epilog nor anyone else who has been involved in the creation, production, or delivery of the Epilog Model 10000 shall be liable for any direct, indirect, consequential, or incidental damages, including but not limited to damages for loss of business profits, business interruption, loss of business information, adverse health impacts, fire, and the like, arising out of the use or inability to use these products.

Epilog Corporation provides no warranties whatsoever on any software used in connection with Epilog Model 10000.

## APPENDIX A

---

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# APPENDIX B

## PRINTING FROM AUTOCAD

---

### *In This Section*

- Printing from AutoCAD
- 

The following include general instructions on Printing from AutoCAD Software.

AutoCAD is a very powerful software tool that is often used in conjunction with the laser for cutting applications. Like any tool, understanding how it works and its limitations are helpful in getting the most out of it. Below are general instructions for printing from AutoCAD. AutoCAD versions 14 to the present are mostly compatible with Epilog systems. Each version of AutoCAD uses slightly different printing conventions that may or may not affect the way you print from AutoCAD and each different version may produce different output from the laser.

### **Printing/Plotting**

Sending jobs from AutoCAD is heavily dependent on the print settings in the AutoCAD Print/Plot window. Since there are so many different settings that AutoCAD requires, it is important that you double-check all of the settings that are critical to success. Previewing your image before sending it to the laser is very helpful in preventing print problems.

AutoCAD is capable of producing extremely complicated drawings with many layers, colors, etc. Since there is no limit to the level of complexity that an AutoCAD drawing can achieve, users should keep in mind that the laser is a 2D cutting machine that usually cuts a single piece of material in any given job. While your laser system is capable of handling complex drawings, users may find that eliminating extraneous detail before “Printing/Plotting” may make their laser equipment more productive.

### **Color Mapping**

Creating objects of different colors in AutoCAD allows the user to take advantage of the Vector Color Mapping capabilities of the Epilog Dashboard print driver. Color mapping assigns different Speed and Power settings to an object based on its color allowing you to both cut and mark in a single setup. For a detailed

# Appendix B Printing from AutoCAD

---

description of how Color Mapping works, refer to the *Using The Epilog Legend Dashboard, Color Mapping* section of this manual.


## **Model Space, Paper Space, and Precise Location**

AutoCAD was designed to print to paper plotters and some of the assumptions (especially Scaling and Margins) that AutoCAD makes when printing can cause frustration for laser users that are used to being able to send a job to the laser and have its precise location be very predictable. Printing from either Paper Space or Model Space will work. Be aware that the scaling and margin assumptions made by AutoCAD can affect both the size and location of the work.

## **Helpful Hints**

When printing from AutoCAD you will need to **set up your AutoCAD page so that it is square**. This prevents the objects from rotating 90 degrees when you print them. The page in the example below is set to 16 x 16 inches.

Place all of your objects in the upper portion of the AutoCAD page (see illustration below). If you are printing to a bed size of 16 x 12 inches (406 x 305 mm) and you have a 16 x 16 inch page, the objects in the lower 4 inches will not be processed.

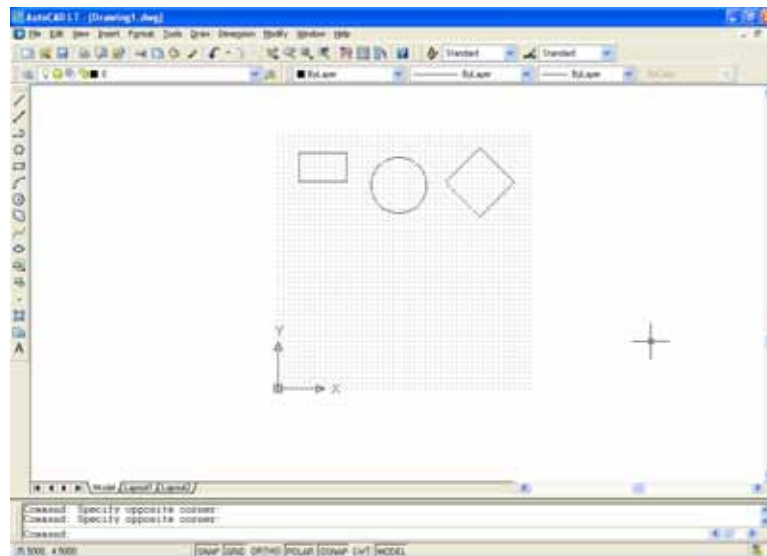

# Appendix B Printing from AutoCAD




Set the Piece Size to match your AutoCAD page size.

Setting your AutoCAD page and the print driver settings to a square configuration (16 x 16, for instance) is necessary to overcome AutoCAD's tendency to rotate your artwork 90 degrees.

In AutoCAD, set the pen colors that you are using to .001 inch.


The AutoCAD default for all pens is .010 and a line weight this large disables vector cutting. If the line weight is not changed to .001 inch, vector cutting will not be possible.

When the laser receives a job where the line weights are too large, the laser system will just beep when you attempt to run the job.

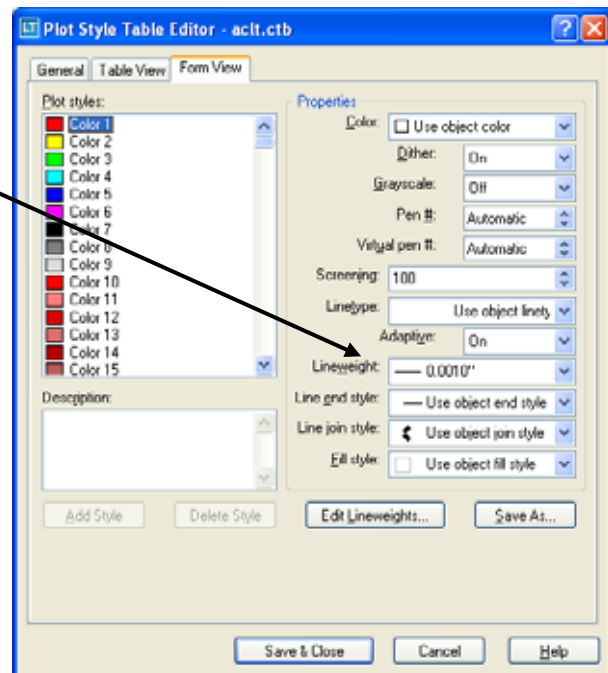

# Appendix B Printing from AutoCAD

---

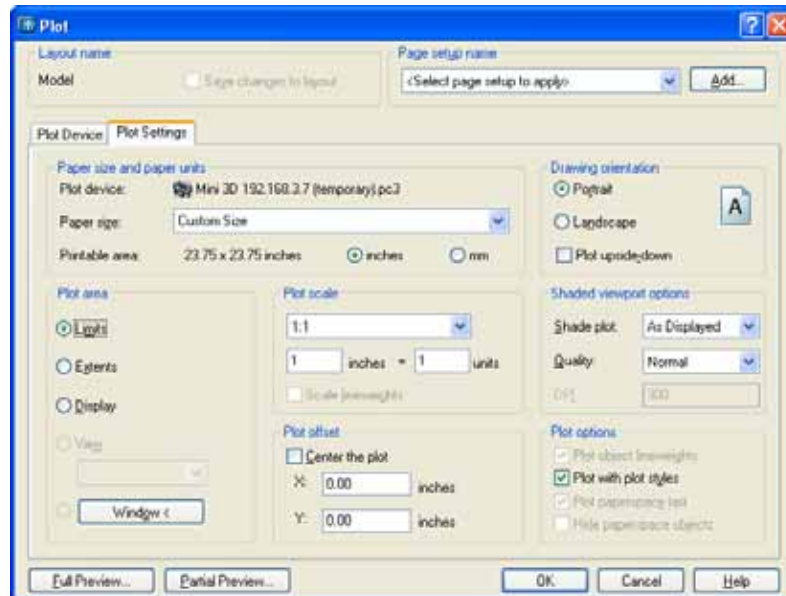

Other useful settings in the AutoCAD print window are:

Set the page orientation to Portrait.

Set Plot area to Limits.

Scale set to 1:1.

Pen Sizes .001 inch (0.0254 mm).

Polylines are recommended for best results.



# APPENDIX C

## ADDITIONAL DASHBOARD PRINT DRIVER INSTRUCTIONS

---

### *In This Section*

- Windows Vista Dashboard print driver installation for USB connection
  - Windows Vista Dashboard print driver installation for Ethernet connection
  - Windows 7: Setting up the TCP/IP address in the computer
- 

## *Dashboard Driver Installation for USB Connection Using Windows Vista*



There are a couple of different ways to install the Dashboard print driver when using the USB connection, but we have found the following sequence is very easy for users who are installing a print driver for the first time.

***Please read the first four steps of this procedure before starting the installation process.*** Turn off your laser system (keep your computer powered on).

1. Insert the Epilog driver disk into your CD or DVD drive on your computer. The following window will appear:
  - a) Close this screen by clicking on the red X
2. Connect the USB cable to both your system and your computer. The USB cable is provided in the Accessories Kit that came with your machine.




# Appendix C Additional Dashboard Instructions

---




3. Turn your laser system on. After a few moments the following window will appear, and you can now proceed with installing the Dashboard.

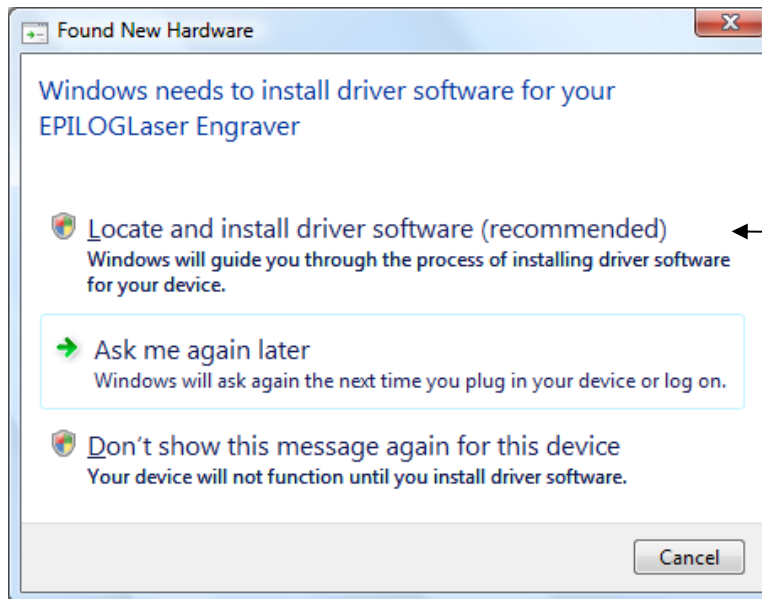

Click on “*Locate and install driver software (recommended)*”


The next window to appear will ask you for permission to continue. Click on the *Continue* button for the following screen:

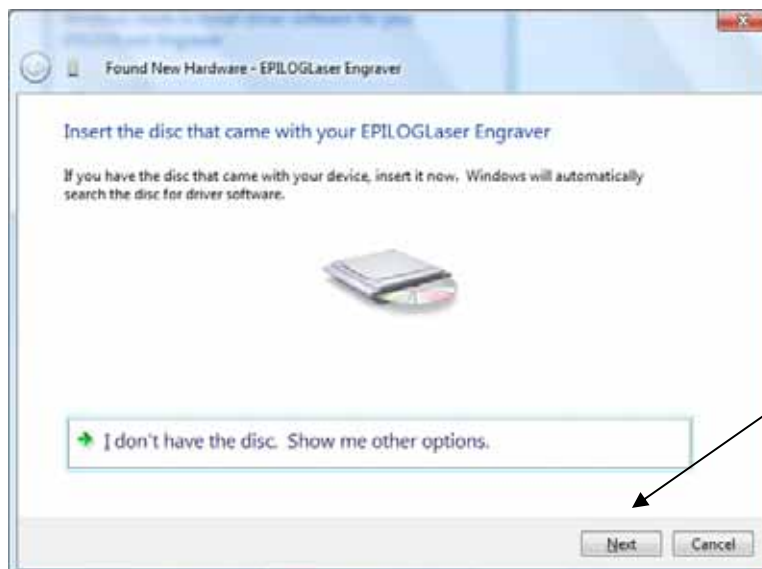

Since the driver disk was inserted at the beginning of this procedure you can just click on the *Next* button to continue.


# Appendix C Additional Dashboard Instructions

---

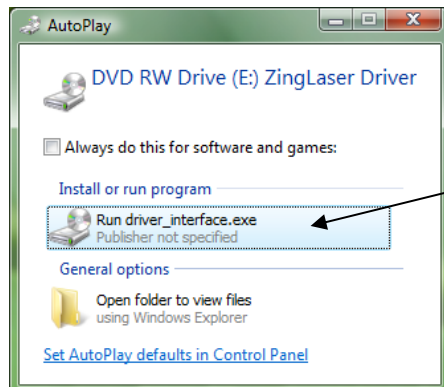

Click on Run driver\_interface.exe

4. The Dashboard welcome screen will appear, but we want to close it.

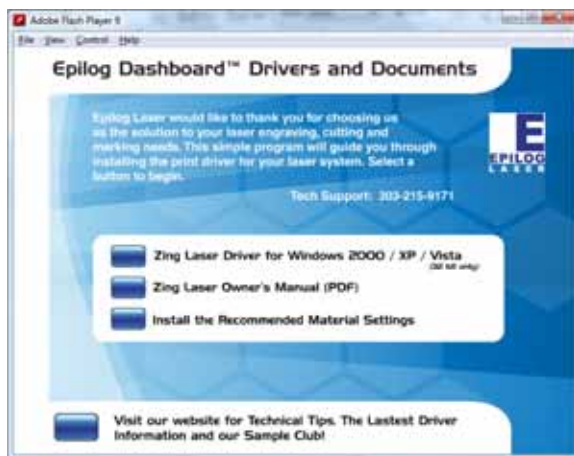


Close this screen by clicking on the X.




5. Connect the USB cable to both your system and your computer. The USB cable is provided in the Accessories Kit that came with your machine.
6. Turn your laser system on. After a few moments the following window will appear, and you can now proceed with installing the Dashboard.

# Appendix C Additional Dashboard Instructions

---

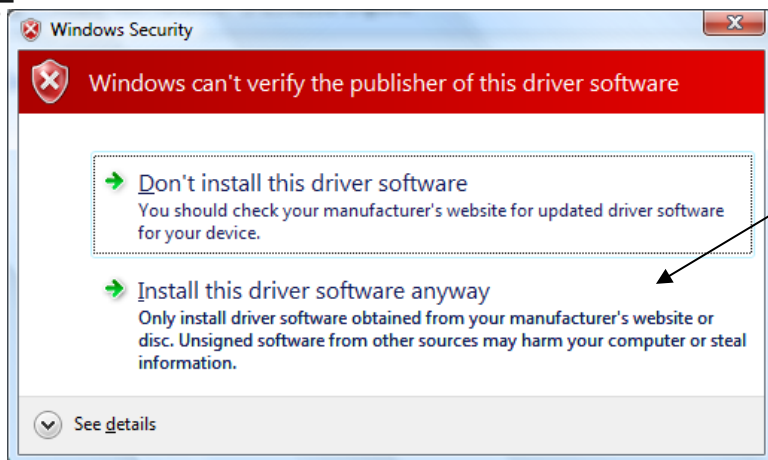

Click on *Install this driver software anyway*.

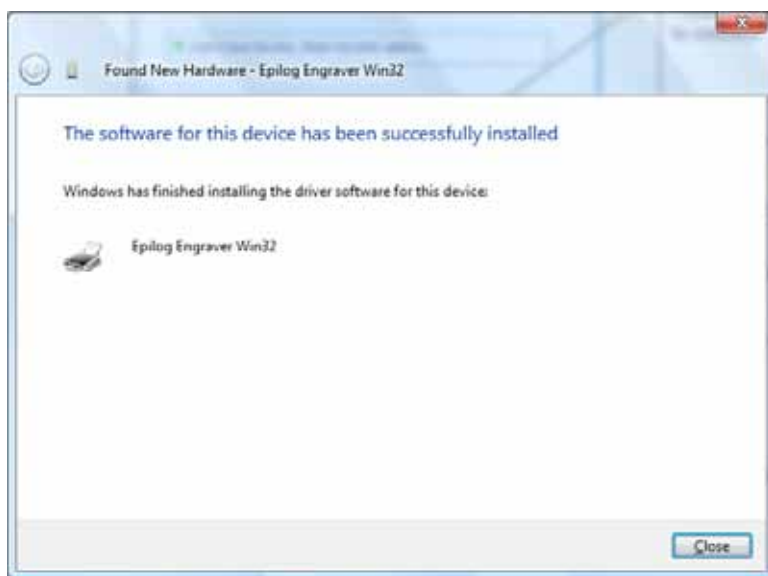


The driver will be installed by Windows. When you close this screen you're finished installing the driver. You can now print to the laser!

# Appendix C Additional Dashboard Instructions

---

## *Windows Vista Dashboard driver installation for Ethernet connection*

*(Skip this part if you are using a USB cable described in the previous section.)*

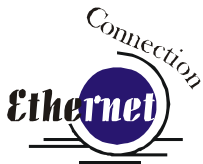

There are three easy steps involved in setting up the laser and computer system to operate through an Ethernet connection:

1. Setting the Ethernet IP Address on the laser.
2. Setting up the TCP/IP Address in the computer.
3. Dashboard Driver Installation



**Note:** The following instructions work only for a direct connection from the computer to the Epilog laser using a Crossover cable. This procedure does not work with a hub or a server. For Ethernet connections that require a hub, server, or multiple machines/computers, please consult with your network administrator.

### *Hardware Requirements*

- A 10Base-T or 10/100Base T Ethernet network card installed in your computer. All brand name computers that have been built in the last couple of years should have come standard with an Ethernet card installed.
- A crossover cable connecting your computer to the laser (included in your accessories kit).



**Please Note!** - The crossover cable looks almost exactly like a standard straight-through network cable, but they have different purposes for making network connections. Normally, the crossover cable should only be used when connecting the Epilog laser directly to your computer. Ask your network administrator for assistance if you are unsure of which type of cable you have. It is a good idea to place a tag or label on the cable indicating if it is a crossover cable or standard (CAT5) straight-through cable.

# Appendix C Additional Dashboard Instructions

---



## ***Step 1: Setting the Ethernet IP Address on the Laser***

In order to set up the laser system with the appropriate IP Address, you will need to set-up the laser through a sequence of steps that are described below.

Although it may seem intimidating if this is your first experience setting up Ethernet connections, it's really quite simple to accomplish. If you have problems, don't panic! You cannot do anything wrong that starting over will not fix!



There are three network protocols that will need to be set. They are set in the following order.

1. IP ADDRESS
2. SUBNET MASK
3. GATEWAY

You will use the Zing control panel to set these three protocols. The main control panel on the laser systems is used for all of the common laser functions as explained in later sections of this manual, and it is also used to program some of the setup functions of the laser system including the IP ADDRESS, SUBNET MASK, and the GATEWAY. In order to program these setup functions we have assigned a set of numbers to the keys on the control panel. The following diagram shows which control panel keys are associated with each number needed to set the network protocols.

# Appendix C Additional Dashboard Instructions

---

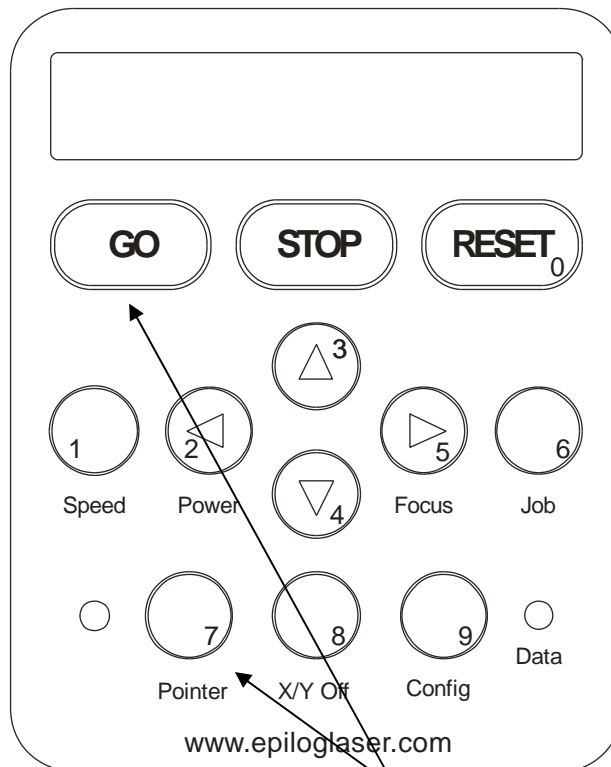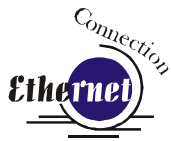

## IP ADDRESS


1. To set the IP Address press the **GO** and **POINTER** buttons simultaneously. You will see “**FUNCTIONS MENU**” displayed on the control panel LCD screen.
2. Next, press the **GO** button. - “**SERIAL #**” will appear on the screen. This is a factory set number and corresponds to the serial number of the laser system. You should not change this serial number.
3. Press the **GO** button again. - “**IP ADDRESS**” will appear on the screen.
4. Press the **GO** button again. - The factory set IP address will appear on the screen. It will look something like this: “192.168.003.004”, with a flashing box over the 1 in 192.



*Note – This procedure uses 192.168.003.004 as the sample IP Address. Machines leaving the Epilog factory have this IP Address preset so you do not have to change anything unless you want to use a different address.*

# Appendix C Additional Dashboard Instructions

---

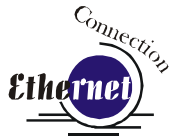

5. If you want to change the IP Address, please follow these instructions:
  - a) If you want to change the 1 in 192 to any other number, simply press the key for that number. For example, if you want to change the 1 (in 192) to a 4, press the **Down cursor** key. After pressing the **Down cursor** key the 1 will change to a 4. When a number key is pressed, the flashing box will automatically shift right to the next number in that three number group.
  - b) At this point, press the appropriate key for the second number (if you want to keep the 9 a 9, you must press the **Config** key).
  - c) Finally, press the appropriate key for the third number.
  - d) After pressing the key for the third number the flashing box will go back to the first number – it WILL NOT shift to the next set of three numerals. If you want to move to the next group of three numbers simply press the **GO** button. Pressing **GO** will cause the flashing box to shift right to the next three number group. Repeat this process to change any of the numbers.



**Note** – There is no way to simply scroll through the IP Address numbers and skip over single numbers you do not want to change. You can skip groups of three by pressing **GO**, but skipping single numbers cannot be done. There is also no way to move the cursor (flashing box) backwards. The cursor scrolls through each three number group continuously until you press the **GO** button, where it will then go to the next three number groups. The following example shows you how to change the number 196 to 195. When you start with the flashing box over the 1, press the **SPEED** button (this keeps the 1 a 1 and allows you to move to the next numeral). The flashing box will shift to the 9, where you will press the “**Config**” button (it will stay a 9 and the flashing box will shift right to the 6). Lastly, we want to change the 6 to a 5. Press the “**Focus**” button. This will change the 6 to a 5 (it will also move the flashing box back to the 1 where you first started). If you now have the number you want to keep (195) and you are ready to move to the next three numeral set, pressing the **GO** button will get you there.

- e) Repeat this process for all of the number groups to get the IP Address you need.
6. After all the IP address numbers have either been changed or verified as the ones you need, press **GO** again – this will bring the **SUBNET MASK** screen.



# Appendix C Additional Dashboard Instructions

---



## Subnet Mask

Press **GO** again to see the **SUBNET MASK** settings. Use the same process of number selection using the keypads to select the appropriate number for the **SUBNET MASK**.

*Note:* If you are using the cross-over cable provided by Epilog, you can set the “**SUBNET MASK**” to one of two configurations:

1. “255.255.0.0”
2. “255.255.255.0”

There is no difference between these settings for our application. Because we set the Subnet Mask at the factory, most users leave it as it is and just press “GO” four times to scroll through this settings without making any changes. After you have set the “**SUBNET MASK**”, Press **GO** again.

## GATEWAY

You will now see “**GATEWAY**”, Press **GO** again.

The **GATEWAY** setting can be set using the same process of number selection using the key pads to select the appropriate numbers for “**GATEWAY**”.

*Note:* The **GATEWAY** address is not important if you are using the provided cross over cable. Press “Go” four times to scroll through this setting.

If you are running your laser through a network, you will need to set the laser **GATEWAY** numbers to correspond to your network.

At the end of the process to establish your IP Address, the laser will prompt you to either **SAVE** or **NO** (Not Save) the numbers you have applied. The Screen will look like: **Save – GO, No- STOP**

Press the **GO** button to save the changes you made to the network settings. Press the **STOP** button if you do not want to save the changes and you want to return to the factory default.

If at any time in the programming process you want to stop or restart, press the **STOP** button. This will take you out of the programming functions. If you want to restart the programming process, simultaneously press **GO** and **POINTER** to get back to the start of the Function Menu.

# Appendix C Additional Dashboard Instructions

---


## ***Step 2) – Setting up the TCP/IP Address in the Computer – Vista (at the end of this section there are instructions for setting the TCP/IP address in Windows 7).***

Once you have set the IP Address at the laser, you will need to set the TCP/IP address on your PC.



**Note:** There are several different versions of Windows Vista and the Start screen differs from one version to another. Due to the differences, finding the Local Area Connection Properties will vary slightly from one version to the next.

3. From the start menu at the bottom left corner of your PC monitor, select **Start| Settings| Control Panel**

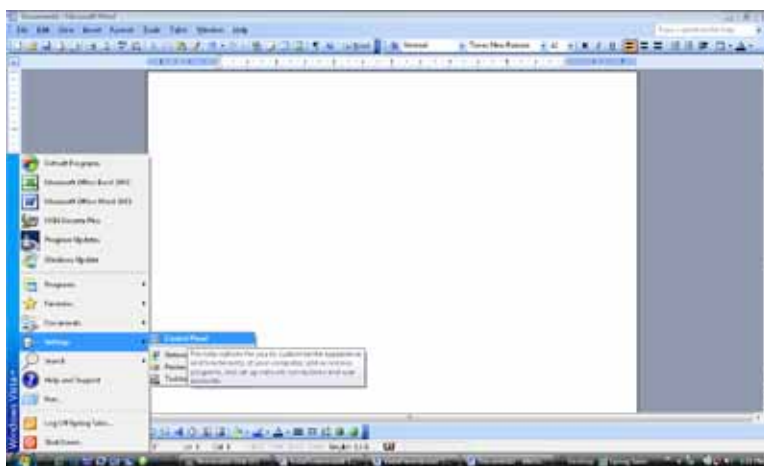


Or...

If your Start menu looks like this, click on **Control Panel**.




# Appendix C Additional Dashboard Instructions

2. On the left side of the Control Panel, click *Classic View* then click *Network and Sharing Center*

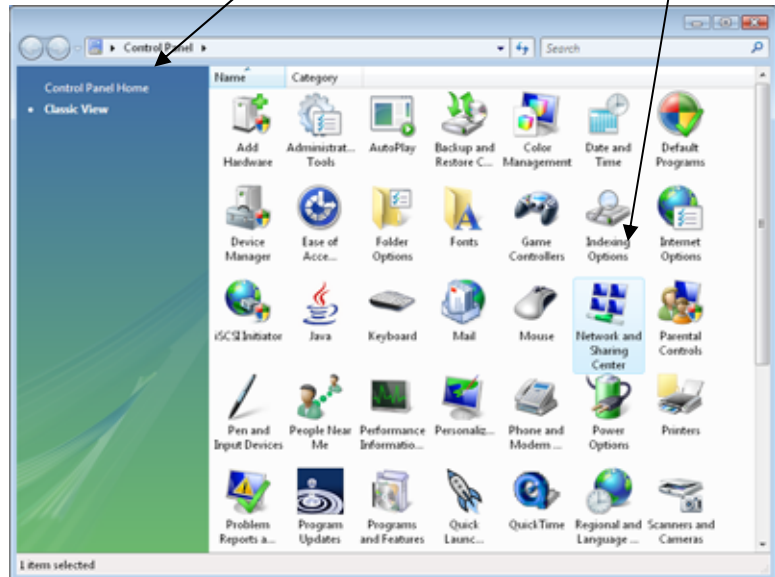


3. On the left side of the screen, click on *Manage network connections*.

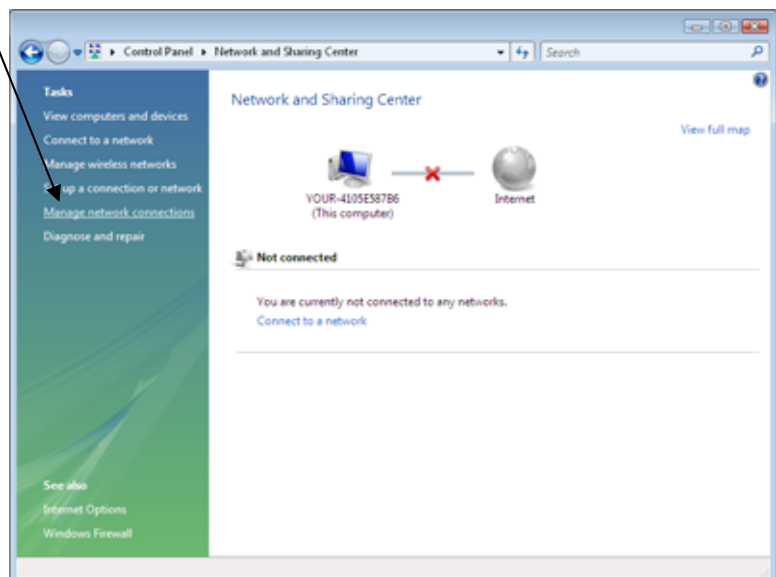

# Appendix C Additional Dashboard Instructions

---


*Right mouse* click on *Local Area Connection* and then click *Properties*

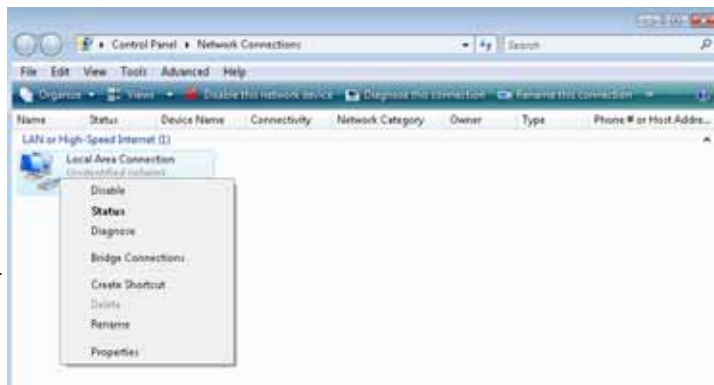

Note: After clicking on *Properties*, Vista will prompt: *Windows needs your permission to continue* (for security purposes). Click *Continue* to accept.

From the list of protocols, highlight *Internet Protocol Version 4 (TCP/IPv4)*.

Then click on *Properties*

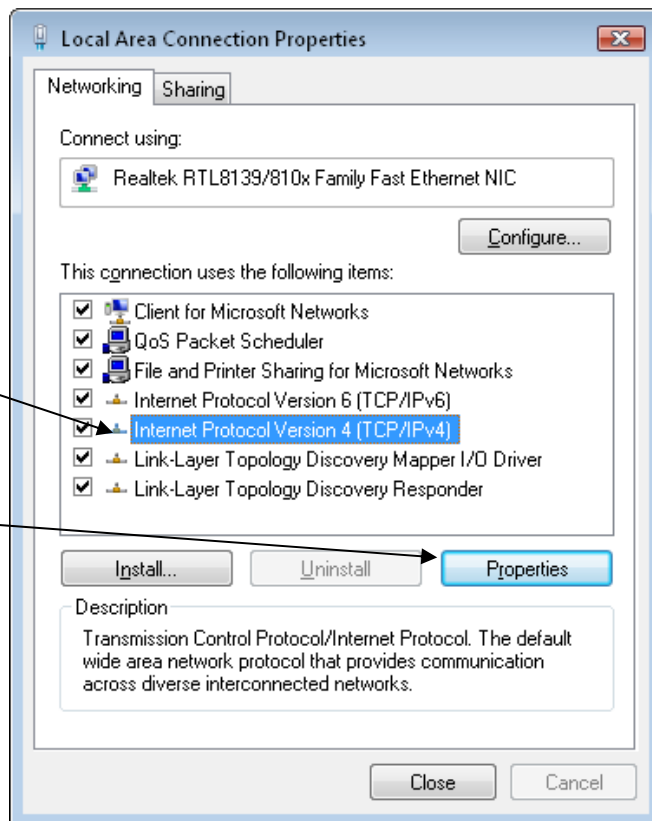

# Appendix C Additional Dashboard Instructions




Windows Vista has incorporated the new Internet Protocol called IPv6 in addition to the traditional IPv4 which is what most PCs will use. IPv6 will eventually replace IPv4 but both will be available for years to come. For our purpose, IPv4 is the standard.

Select *Use the following IP address*:

Type in the following (leave everything else blank on this screen)

IP Address: 192.168.3.3  
Subnet mask: 255.255.255.0  
Default gateway: Leave blank

This number is not an error; the last digit of the IP address in this window only, must be different than the IP address set in the Epilog EXT.

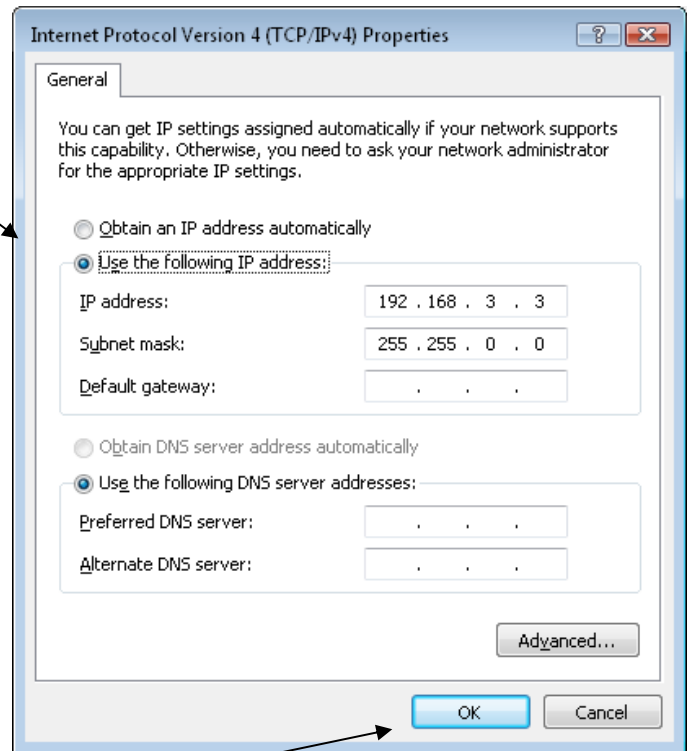

Click the **OK** button in this window and then click on the **Close** button in the next window.

**That's it!** The IP Address in your computer is set. Your computer will be able to talk to your laser after you install the print driver (which is the next step).

# Appendix C Additional Dashboard Instructions


---

## Step 3) – Dashboard Driver Installation




Insert the Epilog Laser CD into your computer's CD player. It should Auto-Start and the window below should appear. (If the AutoRun feature does not bring up the following screen refer to the *Installing the Dashboard Print Driver when the AutoRun Feature Does Not Activate* section of this Appendix C).

Click on Run driver\_interface.exe.

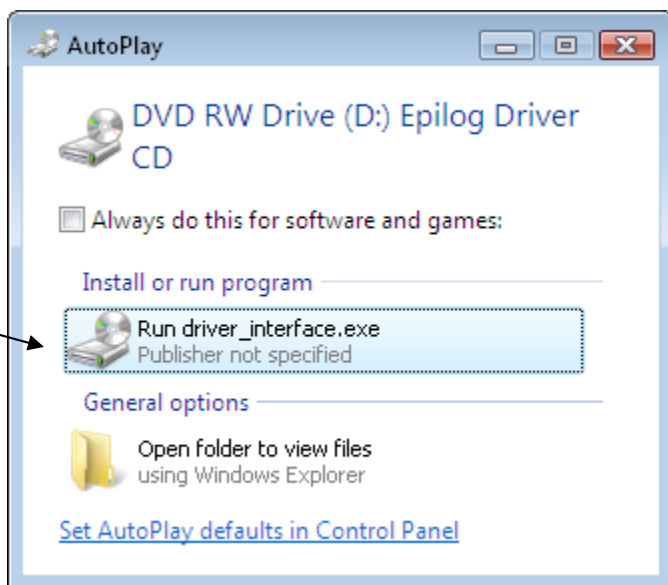


Click on the Zing Laser... button.

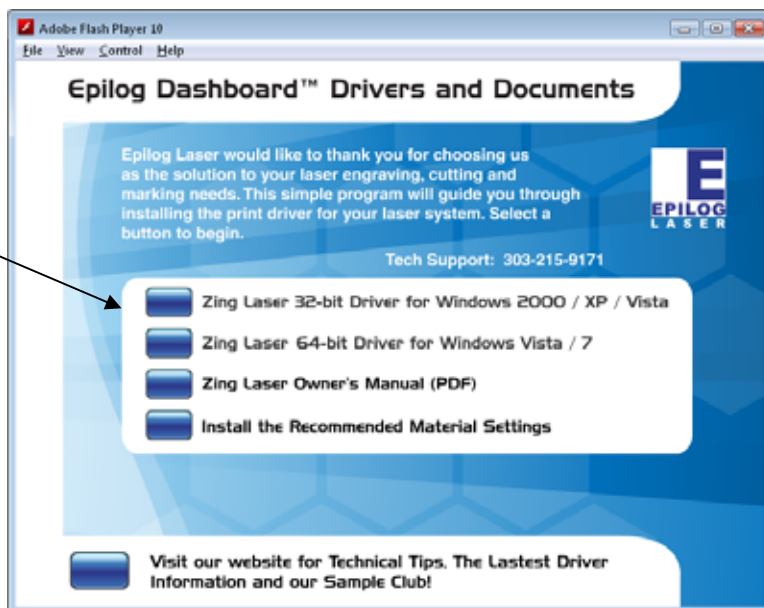


# Appendix C Additional Dashboard Instructions

---


The following screen will appear. Click on the **Unzip** button.

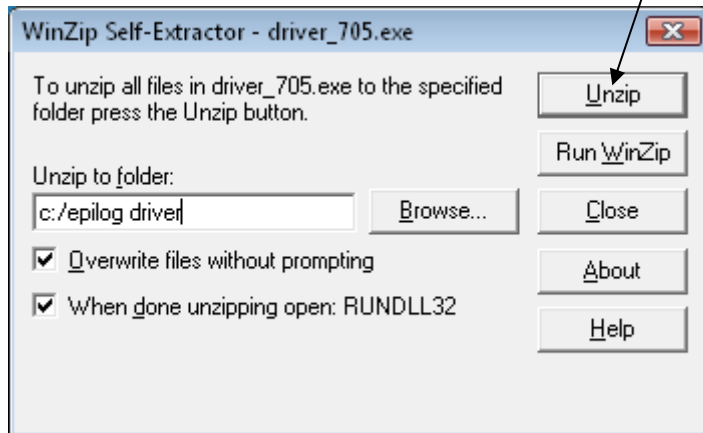

Click on ***OK*** to proceed.

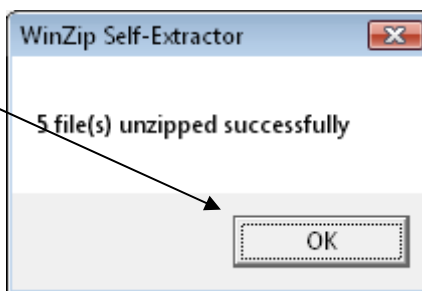

Click on ***Add a local printer.***

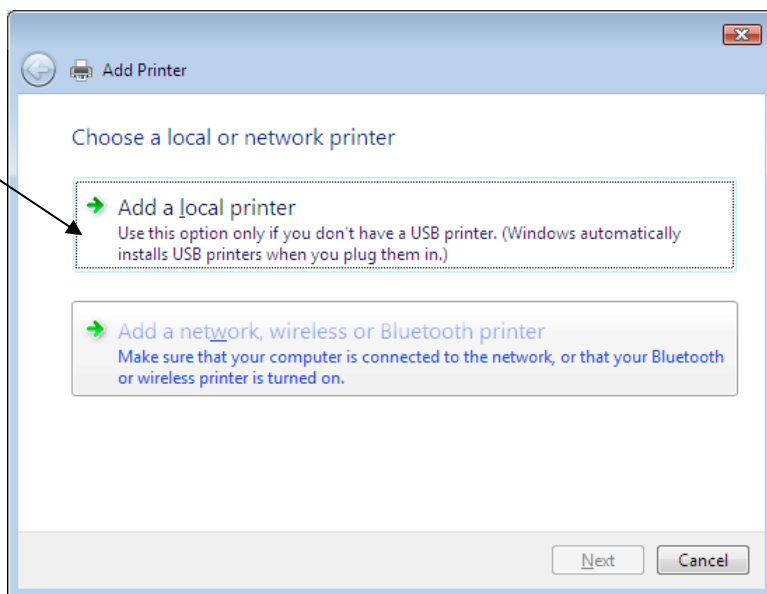

# Appendix C Additional Dashboard Instructions

---

Select **Create a new port:**

In the drop down menu, select ***Standard TCP/IP Port.***

Click **Next>** to continue

The screenshot shows the 'Add Printer' dialog box with the 'Choose a printer port' step. The 'Use an existing port' radio button is unselected, and the 'Create a new port' radio button is selected. The 'Type of port' dropdown menu is open, showing 'Standard TCP/IP Port' as the selected option. The 'Next' button is highlighted in blue.

For Device Type: select ***TCP/IP Device,***

Type in 192.168.3.4 for the Hostname or IP address.

Click ***N*ext** to continue.

The screenshot shows the 'Add Printer' dialog box with the 'Type a printer hostname or IP address' step. The 'Device type' dropdown menu is set to 'TCP/IP Device'. The 'Hostname or IP address' and 'Port name' text boxes both contain '192.168.3.4'. The 'Next' button is highlighted in blue.



Enter the same IP address that you set in the laser using the EXT keyboard (Step 1 in this procedure). It is important that the IP address you use is the same in both places. The format of the numbers looks a little different. In the control panel of the laser the IP address will look like this: 192.168.003.004. When you enter the IP address in this window, you do not need the zeros, and the address will look like this: 192.168.3.4



# Appendix C Additional Dashboard Instructions

Under Device Type, select **Custom**,

and then click on **Settings**.

Click **Next>** to continue.

Set the Protocol to **LPR**. This is a very important step. Your download time will be greatly increased if LPR is not selected.

Type **Legend** in the Queue Name box. Then click **OK**.


The screenshot shows the 'Add Printer' dialog box. The top section is titled 'Additional Port Information Required' and contains a list of instructions for finding the device on the network. Below this, the 'Device Type' is set to 'Custom', and the 'Settings...' button is highlighted. The bottom section is titled 'Port Settings' and contains several input fields: 'Port Name' (192.168.3.4), 'Printer Name or IP Address' (192.168.3.4), 'Protocol' (LPR selected), 'Raw Settings' (Port Number: 9100), 'LPR Settings' (Queue Name: Legend), 'LPR Byte Counting Enabled' (unchecked), 'SNMP Status Enabled' (unchecked), 'Community Name' (public), and 'SNMP Device Index' (1). The 'Next' button is visible in the top right of the dialog, and the 'OK' button is visible in the bottom right.

# Appendix C Additional Dashboard Instructions


---

Clicking **OK** in the previous screen brings you back to the Additional Port Information Required screen.

Click **Next** to continue.

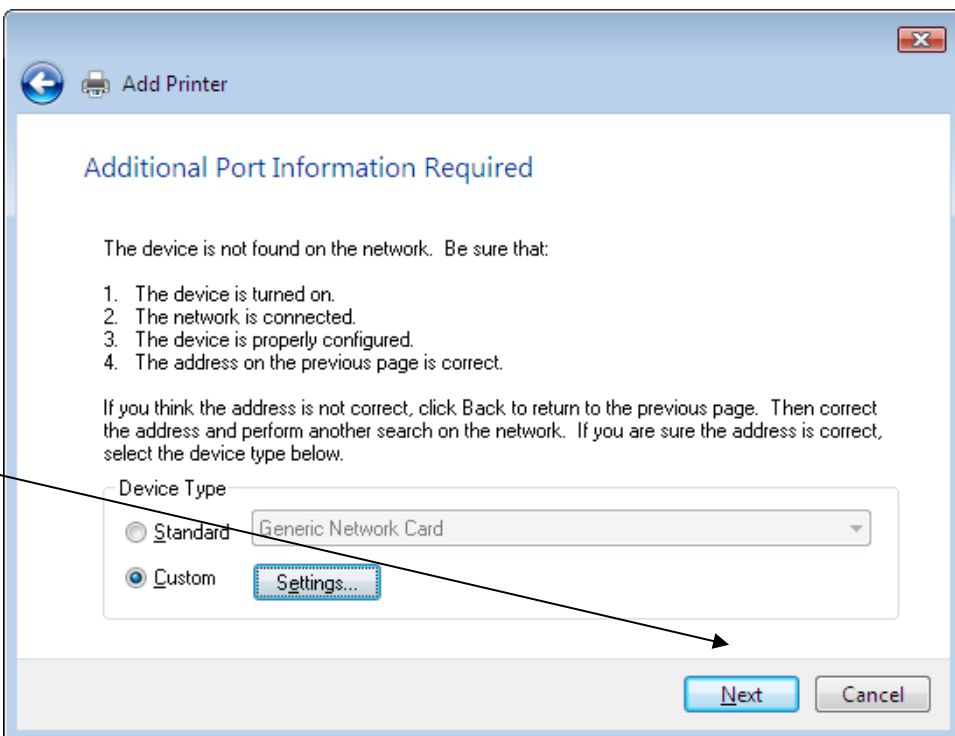

Click **Have Disk...**

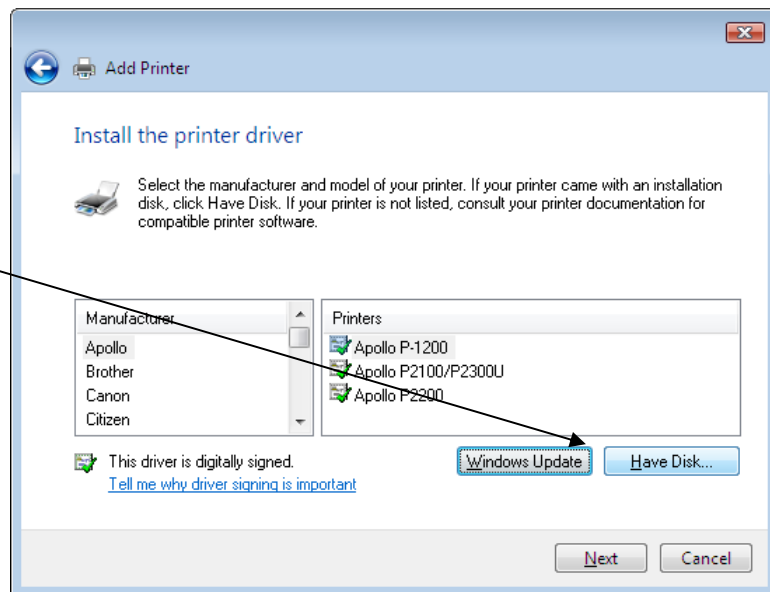


# Appendix C Additional Dashboard Instructions


---

Click ***Browse...***

The following window should appear.

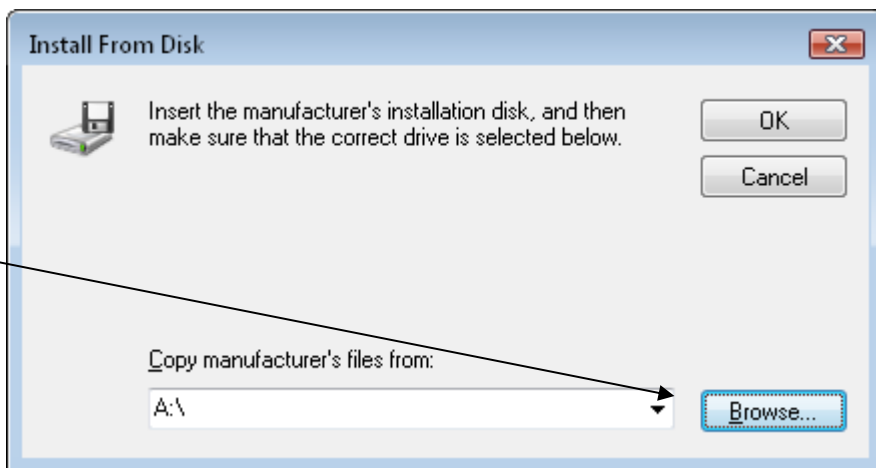


Highlight ***EpilogWin32*** and then click ***Open*** to continue.

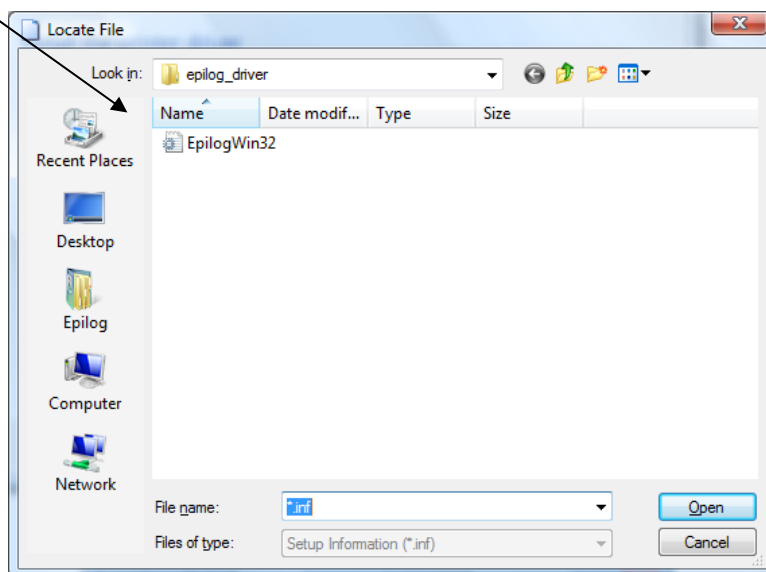

# Appendix C Additional Dashboard Instructions

---


Click **OK**.

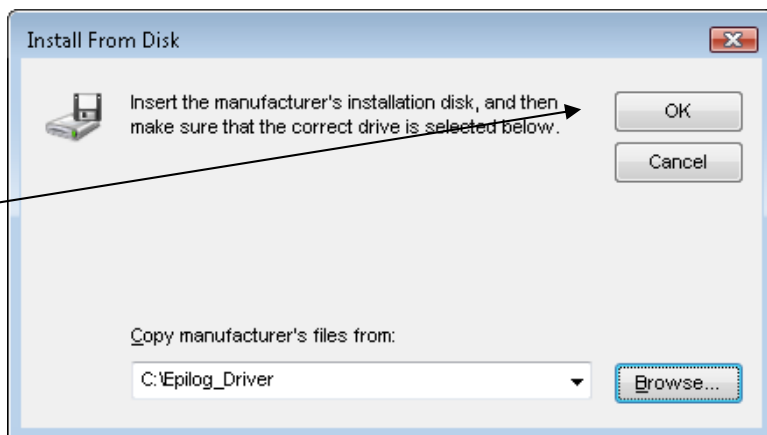

Select **Epilog Engraver Win32**.

If you are upgrading from an older Epilog driver, you may have several choices in this window. Be sure to select **Epilog Engraver Win32**.

Click **Next>** to continue.

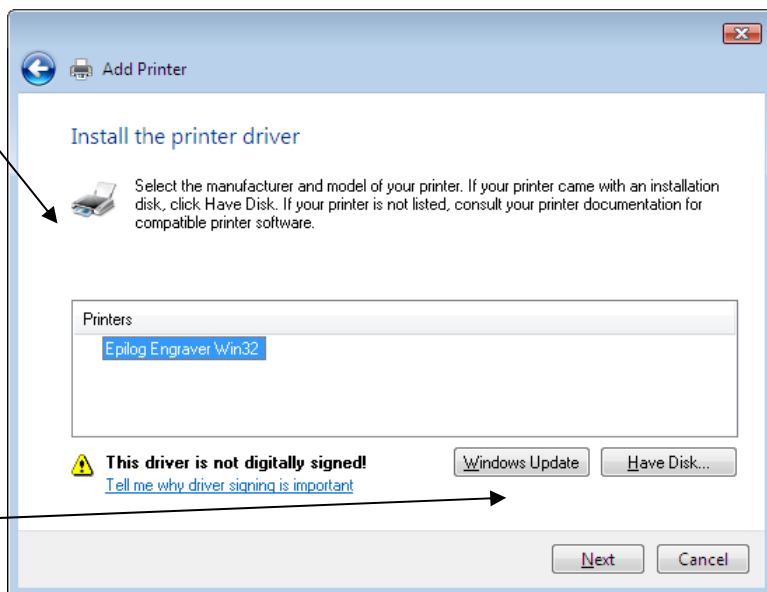


# Appendix C Additional Dashboard Instructions

---


Name your printer and determine if you want the laser to be the default printer.

Click *Next*> to continue.

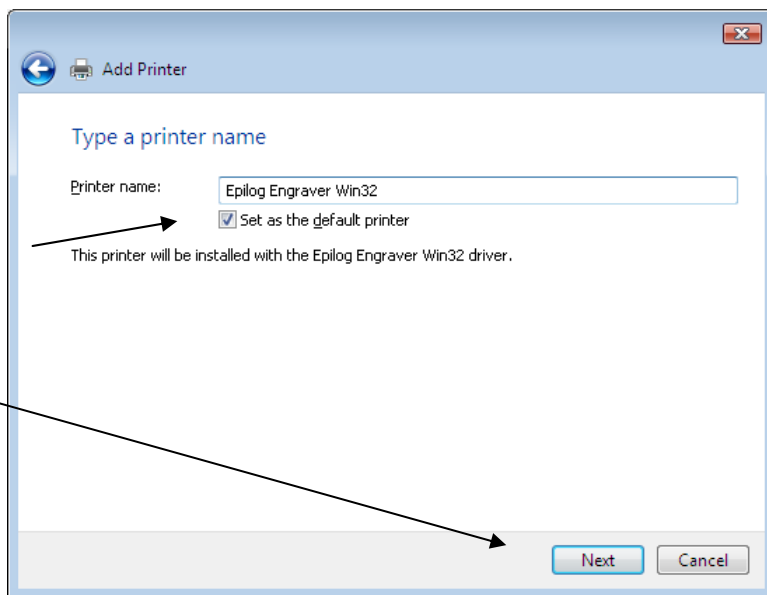

**DO NOT** click on Print a test page.

Click on Finish

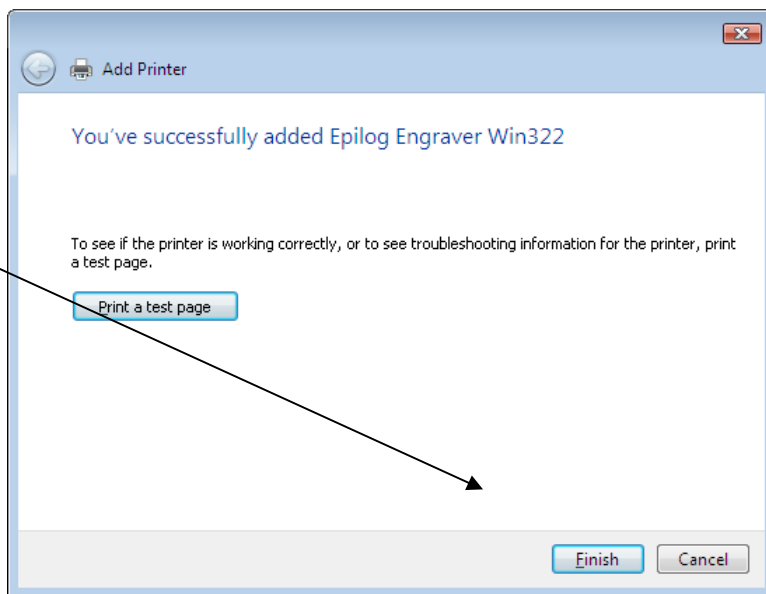

**That's it!** You're now ready to print to your new Epilog laser system!

# Appendix C Additional Dashboard Instructions

---


## *Windows 7 - Driver Installation Instructions - Setting up the TCP/IP Address in the Computer*

Windows 7 uses a slightly different, but very similar protocol than previous versions of Windows. These instructions will guide you through the Windows 7 protocol.

Once you have set the IP Address at the laser, you will need to set the TCP/IP address on your PC.




From the Start menu at the bottom left corner of your PC monitor, select **Control Panel**

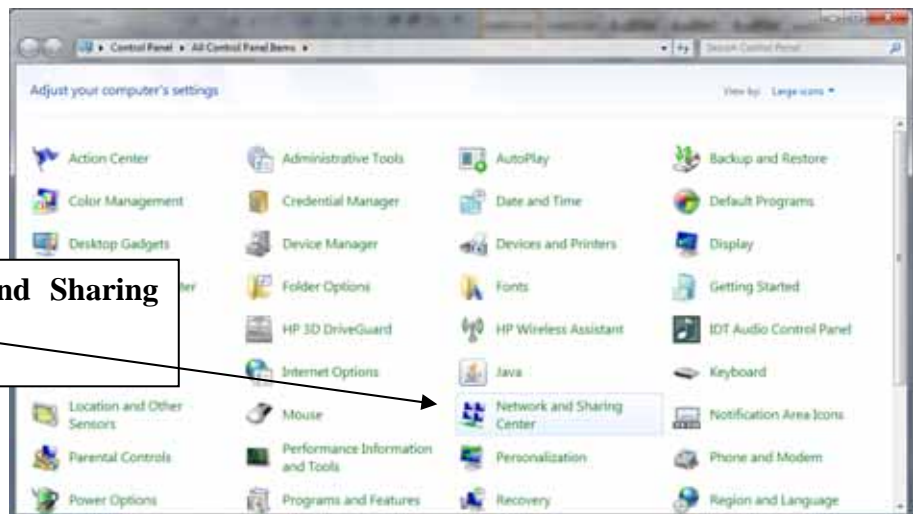


Click on **Network and Sharing Center**

# Appendix C Additional Dashboard Instructions

---

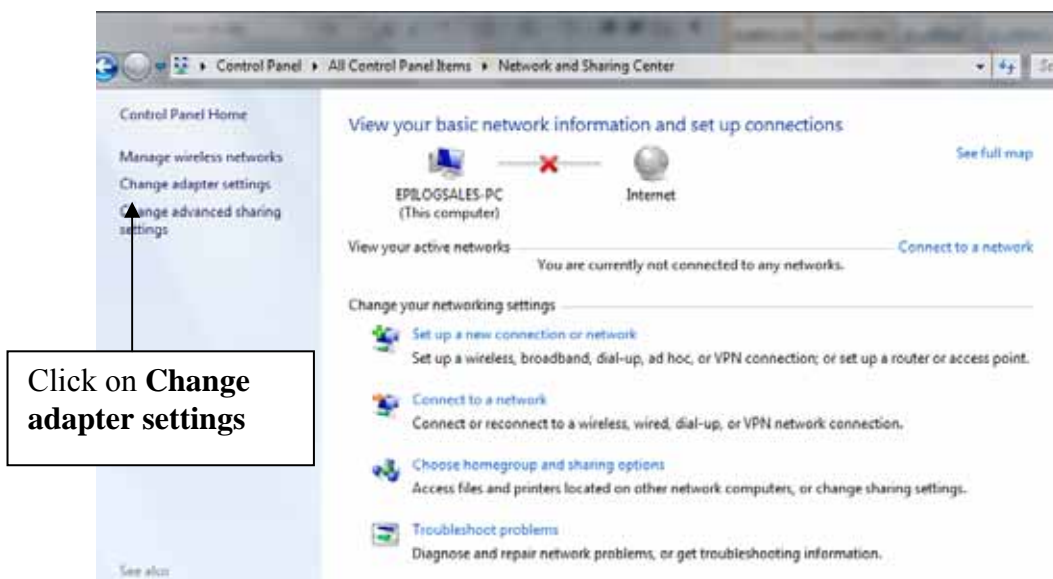


Click on **Change adapter settings**

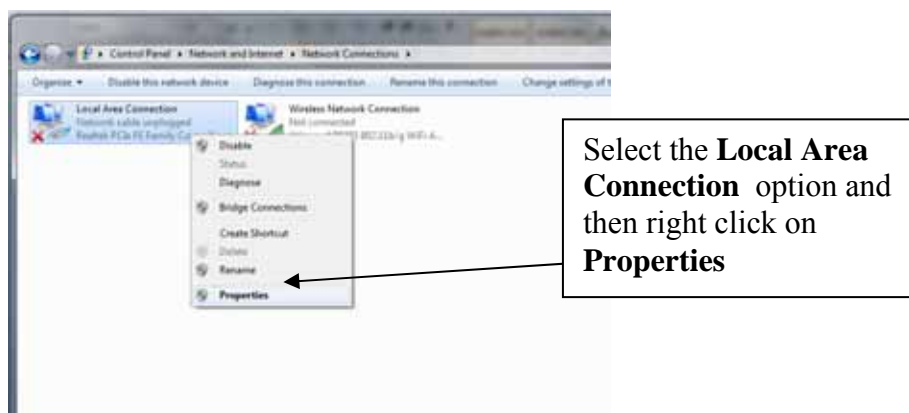

Select the **Local Area Connection** option and then right click on **Properties**

# Appendix C Additional Dashboard Instructions

---

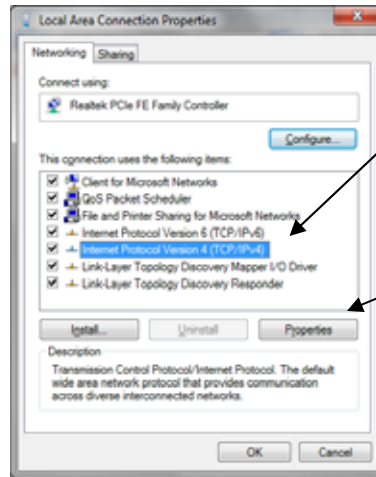

Highlight **Internet Protocol Version 4 (TCP/IP)** and then click on **Properties**



# Appendix C Additional Dashboard Instructions


---

Select *Use the following IP address:*

Type in the following IP Address and Subnet mask:

192.168.3.**3**  
255.255.255.0  
Default gateway:  
Leave blank

This number is not an error; the last digit of the IP address in this window must be different than the IP address set in your laser system.

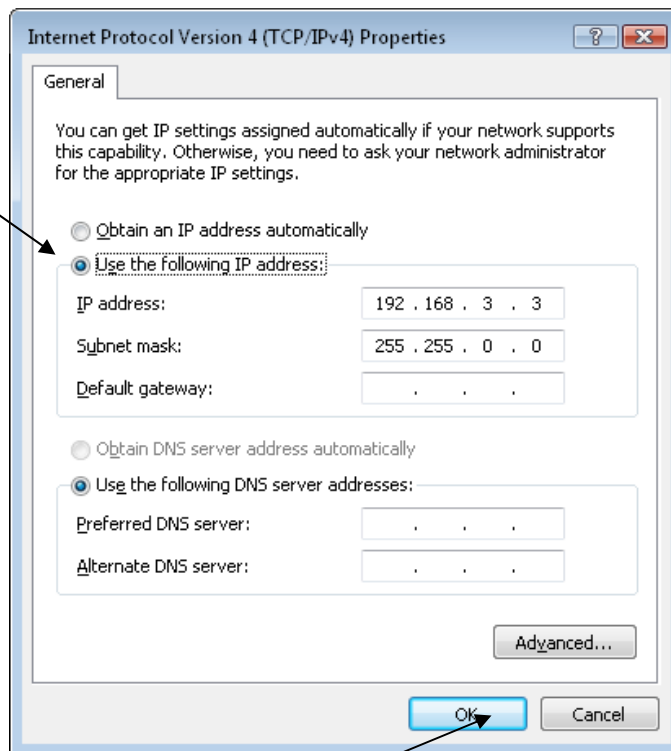

Click the OK button in this window and then click on the Close button in the next window.



That's it! The IP Address in your computer is set. Your computer will be able to talk to your laser after you install the print driver (which is the next step).

# Appendix C Additional Dashboard Instructions

---

Click on the **Printers** icon .

Click on Add a Printer

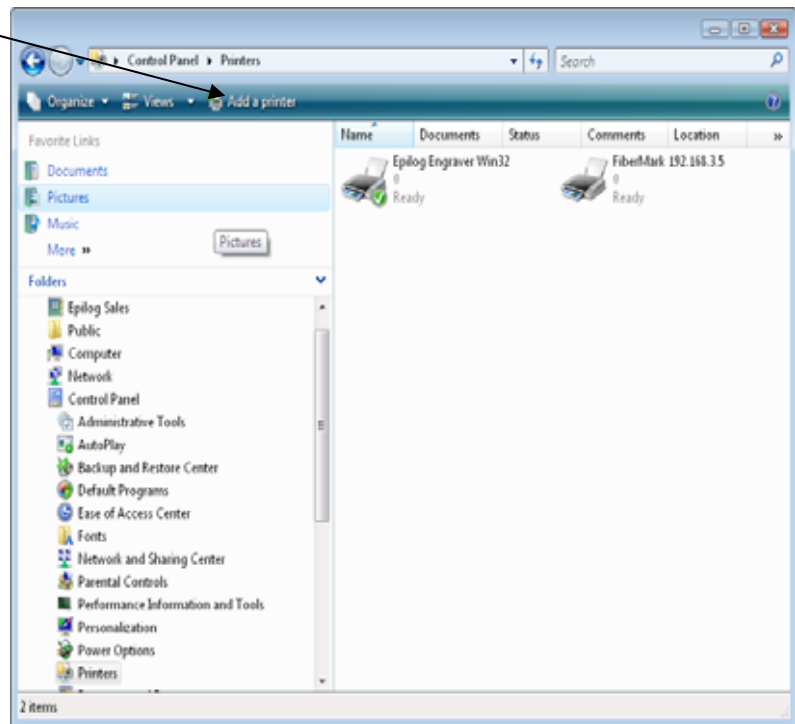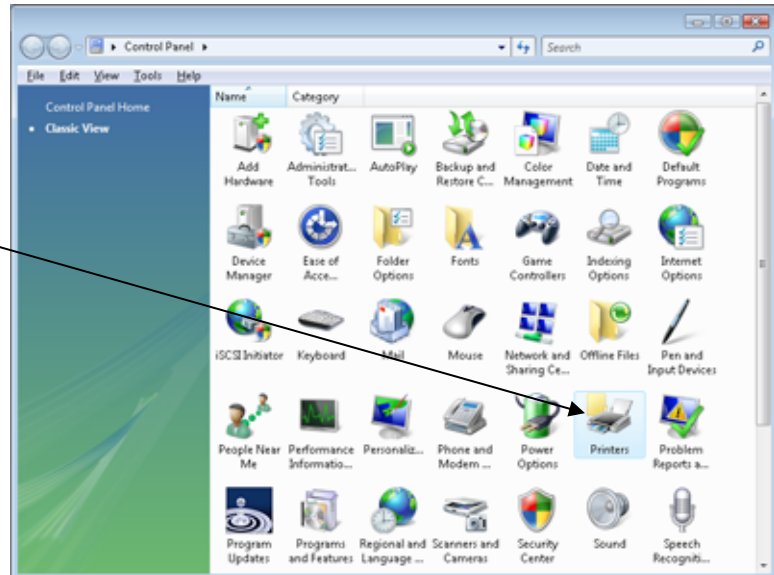

After clicking on Add a Printer you can follow the instructions earlier in the manual. Follow the screen prompts and navigate to the Epilog CD ROM where the files for the driver are located. If you have any trouble, Epilog Technical support is available at 303-215- 9171.

**THIS PAGE WAS  
INTENTIONALLY LEFT BLANK**

# INDEX

---

## 2

21 Cfr 1040 · 3, 7

---

## 3

3d · 93, 94, 95, 103

---

## A

Accessories Kit · 50, 235, 237  
Acrylic · 169, 170, 171, 172, 173, 174, 175, 197, 227  
    Cast · 174  
    Extruded · 174  
Acrylic Idea Factory · 197  
Air-Cooled Laser Tubes · 20  
Ambient Air Temperature · 20  
Anodized Aluminum · 169, 170, 171, 172, 173, 176  
Ansi · 4  
Aperture Safety Label · 9  
Auto Focus · 209, 210  
Auto Focus Adjustment · 124

---

## B

Blower · 17  
Brass · 169, 170, 171, 172, 173, 176, 177

---

## C

Calibration Settings  
    Auto Focus Adjustment · 124  
    Calibration · 125, 161, 208  
    Laser Match · 125, 162  
    Laser Tickle · 163  
    Stamp Match · 125, 161, 162, 190  
Center Engraving Option · 70  
    Center-Center · 71, 72, 73, 74, 75, 76, 77, 78  
    Left-Center · 79, 80  
    Top-Center · 79, 80  
Center-Center · 71, 72, 73, 74, 75, 76, 77, 78  
Cerdec · 169, 170, 171, 172  
Certification/Identification Label · 7, 205

Class A Digital Device · 215  
Cleaning · 14, 131, 155, 156, 157, 158, 191, 194, 206, 207  
    Bearing Rails · 158  
    Exhaust Blower And Duct · 158  
    Optics · 157  
    Vector Grid Tray · 131  
Color Filling · 191, 195  
Color Mapping · 55, 56, 98, 103, 104, 105, 106, 108, 109,  
    110, 111, 112, 113, 231  
Colorado Heirloom · 200  
Compatibility · 209, 211  
Control Panel  
    Data Light · 119  
    Job Key · 44, 123  
    Power Key · 121  
    Reset Key · 123  
    Speed Key · 120  
    Stop Key · 123  
    X/Y Off Key · 122  
Control Panel Command Keys  
    Enter/Go · 123  
    Reset · 75, 78, 123  
Control Panel Keys  
    Data · 119  
    Focus · 122  
    Pointer · 26, 28, 123, 241, 243  
    Power · 121, 169, 170, 171, 172  
    Set Home · 75, 78  
    Speed · 27, 120, 169, 170, 171, 172, 242  
    Xy Off · 75, 78, 122  
Cooling · 15, 20, 208  
Coreldraw · xi, 43, 45, 55, 67, 68, 75, 114, 118, 142, 152,  
    211, 214  
CorelDraw · 185  
Corian · 169, 170, 171, 172, 197  
Crossover Cable · 24

---

## D

Dashboard · i, xi, 15, 22, 23, 24, 31, 43, 47, 49, 55, 56, 71,  
    78, 83, 97, 104, 108, 109, 112, 113, 115, 168, 206, 208,  
    211, 217, 220, 224, 225, 231, 235, 236, 237, 239, 248  
3D · 93, 94, 95, 103  
Advanced Tab · 55, 90  
Color Mapping · 55, 56, 98, 103, 104, 105, 106, 108,  
    109, 110, 111, 112, 113, 231  
Configurations · 97, 224  
Dithering · 83, 85, 86  
    Floyd Steinberg · 84  
    Jarvis · 84, 86

# INDEX

---

Low Res · 83, 86  
Stucki · 84, 85, 86  
Frequency · 61, 88, 103, 105, 153  
Frequency Automatic · 88  
General Tab · 55, 58, 108, 113  
Multiple Pages · 114  
Multiple Passes · 113, 165, 168  
Photograph Mode  
    Floyd Steinberg · 84  
    Jarvis · 84, 86  
    Stucki · 84, 85, 86  
Piece Size · 49, 55, 68, 98, 208, 233  
Raster Settings · 82  
Resolution · 55, 59, 61, 64, 65, 192, 209, 210  
Stamp · 96, 103  
Vector Settings · 87, 110, 113  
Vector Sorting · 89  
Windows Xp/2000 · 23  
Data Light · 119  
Data Port Connections  
    Ethernet 10baset · 22  
    Ethernet Port · xiii, 15, 21, 22, 23, 24, 25, 30, 31, 209, 210, 235, 239, 240  
    Usb Port · xiii, 15, 21, 22, 23, 209, 210, 235, 237, 239  
Defeatably-Interlocked Protective Housing Safety Label · 9  
Delrin · 169, 170, 171, 172, 173, 180  
Delrin Seals · 169, 170, 171, 172  
Dithering · 83, 85, 86  
Do Not · 4, 5, 15, 17, 128, 223, 255  
Door Interlocks · 4  
Dpi · 55, 64, 65, 66, 67, 85, 86, 169, 170, 171, 172, 192

---

## **E**

Educational Materials · 197, 200  
Electrical · 3, 5, 9, 15, 19, 209, 210  
Electrical Safety Label · 9  
Engraving Multiple Pages · 114  
Engraving Multiple Passes · 113, 165, 168  
Ethernet · xiii, 15, 21, 22, 23, 24, 25, 30, 31, 209, 210, 235, 239, 240  
Ethernet 10baset · 22  
Exhaust · 16, 17, 18, 207  
    Blower · 17  
    Cleaning Blower And Duct · 158  
Exhaust Blower · 17  
Exhaust System · 15, 16, 17, 158, 207  
    Blower · 17  
Explanatory Label · 8

---

## **F**

Federal Communications Commission (Fcc) Notice · 209, 215  
Federal Performance Standards For Light-Emitting Products · 3  
Fire  
    Extinguisher · ix, 6, 156, 174, 194

Safety · 3, 6, 10  
Fire Extinguisher · ix, 6, 156, 174, 194  
Fire Safety Label · 10  
Fire Warning · ix, x, xiii, 3, 6, 10, 131, 156, 157, 173, 174, 194  
Firmware · 217, 218, 220  
Floyd Steinberg · 84  
Focus · 50, 51, 124, 125, 149, 162, 209, 210  
    Auto Focus · 209, 210  
    Auto Focus Adjustment · 124  
    Manual · 43, 122  
Frequency · 61, 88, 103, 105, 153, 185

---

## **G**

Glass · 169, 170, 171, 172, 173, 178, 197  
Go Button · 123  
Go Key · 51, 115, 118, 122, 163  
Gold Coast Graphics · 202

---

## **H**

Home Position · 48, 70, 74, 76, 78, 120, 121, 125, 151, 161, 162, 163

---

## **I**

Identification Plates · 198  
Iec 60825-1 · 3, 7, 8  
Innovative Plastics · 201  
Integrated Vacuum Table · 49  
Integrated Vector Grid · 175, 193  
Ip Address · 24, 25, 26, 27, 29, 30, 34, 239, 240, 241, 242, 244, 247, 256, 259

---

## **J**

Jarvis · 84, 86  
Jds · 198, 199  
Jigs · 50  
Job · 44, 123  
Job Button · 44, 123  
Job Storage · 117, 126  
Johnson Plastics · 201

---

## **K**

Kentucky Woodcrafts · 200  
Keyboard Commands · 117, 118

# INDEX

---

## L

### Labels

- Aperture Safety Label · 9
  - Certification/Identification Label · 7, 205
  - Defeatably-Interlocked Protective Housing Safety Label · 9
  - Electrical Safety Label · 9
  - Explanatory Label · 8
  - Fire Safety Label · 10
  - Non-Interlocked Protective Housing Safety Labels · 8
  - Warning Label · 8
- Laser Diode Pointer · 3, 4, 7, 128
- Laser Institute Of America · 4
- Laser Match · 125, 162
- Laser Tickle Mode · 163
- Laser Tube · 156, 160
- Laserable Plastic · 169, 170, 171, 172
- Leather · 169, 170, 171, 172, 199
- Left-Center · 79, 80
- Lpr · 251

---

## M

### Maintenance

- Cleaning Your Machine · 14
- Manual Focus · 50
- Dashboard Print Driver Mapping · 105, 110
- Marble · 169, 170, 171, 172, 197, 201
- Material Suppliers

- Acrylic Idea Factory · 197
- Alumamark Horizons Inc. · 199
- Colorado Heirloom · 200
- Educational Materials · 197, 200
- Ferro Corporation · 202
- Gold Coast Graphics · 202
- Identification Plates · 198
- Innovative Plastics · 201
- Jds · 198, 199
- Jhm Marketing · 200
- Johnson Plastics · 201
- Kentucky Woodcrafts · 200
- Pdu · 199
- R. S. Owens · 198
- Rowmark · 201
- Stanton Manufacturing · 200
- Victory · 176, 198

### Materials

- Acrylic · 169, 170, 171, 172, 173, 174, 175, 197, 227
- Alumamark · 199
- Anodized Aluminum · 169, 170, 171, 172, 173, 176
- Cermarkl · 202
- Glass · 169, 170, 171, 172, 173, 178, 197
- Leather · 169, 170, 171, 172, 199
- Notary Seals · 173, 180
- Plastic · 169, 170, 171, 172, 173, 181, 182
- Plywood · 192
- PVC · 13, 182

- Stainless Steel · 169, 170, 171, 172
  - Wood · 99, 108, 169, 170, 171, 172, 173, 191, 192, 193, 194, 195, 197, 200, 202
- Melamine · 169, 170, 171, 172, 197

---

## N

- Network · 22, 29, 212, 214, 245
- Ip Address · 24, 25, 26, 27, 29, 30, 34, 239, 240, 241, 242, 244, 247, 256, 259
  - IP Address · 239, 244, 247
  - Queue Name · 251
  - Subnet Mask · 30, 243
- Network Connections
- Crossover Cable · 24
- Non-Interlocked Protective Housing Safety Labels · 8
- Notary Seals · 173, 180

---

## O

- Optics · 157
- Cleaning · 157
- Options
- Rotary · 51, 133, 137, 140, 144, 149
- Osha · 4

---

## P

- Pdu · 199
- Photograph Mode
- Floyd Steinberg · 84
  - Jarvis · 84, 86
  - Stucki · 84, 85, 86
- Photos · 59, 61, 67, 85, 86, 155, 158
- Plastic · 169, 170, 171, 172, 173, 181, 182
- Plywood · 192
- Pointer · 3, 4, 7, 27, 74, 75, 78, 123, 127, 128, 209, 210, 242
- Power · 15, 19, 43, 55, 59, 61, 64, 66, 82, 83, 87, 88, 98, 103, 105, 108, 110, 112, 121, 124, 165, 167, 183, 185, 192, 206, 209, 210, 231
- Power Button · 121
- Print Driver · xi, 23, 57, 188, 189, 217, 248
- Dashboard · i, xi, 15, 22, 23, 24, 31, 43, 47, 49, 55, 56, 71, 78, 83, 97, 104, 108, 109, 112, 113, 115, 168, 206, 208, 211, 217, 220, 224, 225, 231, 235, 236, 237, 239, 248
  - Frequency · 185
- Protocol · 29, 246, 247, 251
- Pvc · 13, 182

---

## R

- R. S. Owens · 198
- Raster Engraving · 45, 69, 83

# INDEX

---

Reboot · 222  
Red Dot Pointer · 3, 4, 7, 74, 75, 78, 123, 127, 128, 209, 210  
Regulatory Compliance  
  21 Cfr 1040 · 3, 7  
  American Standard For The Safe Use Of Lasers Z136.1-2000 · 4  
  Ansi · 4  
  Class A Digital Device · 215  
  Fcc Notice · 209, 215  
  Iec 60825-1 · 3, 7, 8  
Reset · 75, 78, 123  
Reset Button · 123  
Reset Key · 51, 122, 125, 162, 163  
Resolution · 55, 59, 61, 64, 65, 192, 209, 210  
Resolution Settings · 55, 64, 65, 66, 67, 85, 86, 169, 170, 171, 172, 192  
Rgb Color · 104, 209, 210  
Rotary · 51, 133, 137, 140, 144, 149  
Rowmark · 201

---

## S

Safety · 3, 4, 5, 6, 7, 8, 9, 10, 128, 209, 210  
  ANSI · 4  
  DO NOT · 4, 5, 15, 17, 128, 223, 255  
  Dos · 13  
  Electrical · 3, 5, 9  
  Federal Performance Standards For Light-Emitting Products · 3  
  Fire · 3, 6, 10  
  NEVER · ix, 6, 13, 16, 156, 174, 193  
  OSHA · 4  
Scanned Images · 45, 59, 61  
Scanner · 213  
Service · xi  
Software · 212, 231  
  Coreldraw · xi, 43, 45, 55, 67, 68, 75, 114, 118, 142, 152, 211, 214  
Solid Wood · 191  
Specifications · xi, 203, 209, 210  
Speed · 43, 55, 59, 61, 64, 66, 82, 83, 87, 88, 98, 103, 105, 108, 110, 112, 120, 124, 125, 162, 165, 167, 183, 185, 192, 206, 209, 210, 212, 231  
Speed Button · 120  
Stainless Steel · 169, 170, 171, 172  
Stamp · 96, 103, 125, 161, 162, 185, 189, 190  
Stamp Match · 125, 161, 162, 190  
Standard Features  
  Air Assist · 125, 127, 128, 162, 175, 182, 193, 209, 210  
  Auto Focus · 209, 210  
  Auto Focus Adjustment · 124  
  Integraded Vector Grid · 175, 193  
  Integrated Vacuum Table · 49  
  Vector Grid · 129, 131, 182, 193  
Stanton Manufacturing · 200  
Stop Button · 123

Stop Key · 163  
Stucki · 84, 85, 86  
Subnet Mask · 30, 243  
Suppliers · 197

---

## T

Table Size · 49, 68  
Tcp/Ip Port · 250  
Technical Support  
  Direct Line · i, 205  
  Online · i  
Temperature · 209, 210  
Top-Center · 79, 80

---

## U

Usb · xiii, 15, 21, 22, 23, 209, 210, 235, 237, 239  
USB · 235, 239  
Usb Port · 21, 22

---

## V

Vector Cutting · 46, 47, 87, 120, 121, 168  
Vector Grid · 129, 131, 182, 193  
Victory · 176, 198  
Vinyl · 13, 16  
Vista · 21, 23, 209, 210, 211, 214, 235, 239, 244, 246, 247

---

## W

Warning · ix, x, 8, 16, 20, 156, 173, 175, 176, 193  
Warning Label · 8  
Warnings  
  DO NOT · 4, 5, 15, 17, 128, 223, 255  
  Fire Warning · ix, x, 156, 173  
Warranty · xi, 13, 20, 182, 229  
Windows  
  Vista · 21, 23, 209, 210, 211, 214, 235, 239, 244, 246, 247  
  Windows 7 · 235, 244  
  Windows 2000 · 4, 21, 23, 209, 210, 211, 214  
  Windows XP · 21, 23, 209, 210, 211  
Wood · 99, 108, 169, 170, 171, 172, 173, 191, 192, 193, 194, 195, 197, 200, 202

---

## X

X/Y Off Button · 122

---